
ISDN BRI implementation

Introduction

This chapter describes the procedures used for ISDN BRI line and packet data implementation, and ISDN BRI trunk access implementation. It lists the order in which these procedures should be performed and provides a detailed description of each procedure showing the prompts that are displayed and the responses to each prompt.

ISDN BRI line application are configured using Overlays 27 and 73 (optionally used for configuring a pad table).

Note: This includes any requirements needed to configure ISDN BRI sets for ISDN features which are non-BRI specific. For example, ISDN BRI sets are supported on the ISDN QSIG Call Diversion feature, so Overlay 27 will show those prompts that are required to configure ISDN BRI sets for this feature. The Terminal Service Profile (TSP) configuration is be used.

The ISDN BRI Trunk Access capability is administered using Overlays 16, 27, and 73 (optionally used for configuring a pad table and setting clock referencing).

Note: This includes any requirements needed to configure ISDN BRI trunks for ISDN features which are non-BRI specific. For example, ISDN BRI trunks are supported on the ISDN QSIG Call Diversion feature, so Overlay 16 will show those prompts that are required to configure ISDN BRI trunks for this feature.

The implementation procedures which follow are presented in sections titled:

- Configuring ISDN BRI line application
- Configuring ISDN BRI packet data
- Configuring ISDN BRI trunk access
- Configuring ISDN BRI features
- Sample configurations, which provides typical examples of how to configure a line application, an external and integrated packet handler, and a trunk access application.

Configuring ISDN BRI line application

Configuration order for line application

You must configure the following components in the order listed below to configure ISDN BRI lines.

Please note that when changing existing ISDN BRI service, following this order is unnecessary. Be aware, though, of the relationship of one component to another and whether changing one component necessitates changing other components.

1 Configure a pad table using LD 73 (**optional**)

This step is optional; if no pad values are configured the default values will be used.

Note: Pad table are used for lines only when the protocol to be used on a DSL is set to ETSI NET-3, INS NET 64, QSIG, or Numeris.

2 Configure a Link Access Procedure on the D-channel (LAPD) Group using LD 27.

3 Configure the MISP using LD 27.

4 Configure the BRSC using LD 27 (**optional**).

5 Configure the SILC or UILC using LD 27.

This step is optional. The SILC or UILC can also be configured when configuring the DSL (see next step).

6 Configure the DSL using LD 27.

7 Configure the TSP using LD 27.

8 Program ISDN BRI terminals (M5317TDX, M5209TDcp)

Configuring pad tables (optional)

This step is optional; if no pad values are configured the default values will be used.

Note: Pad table are used for lines only when the protocol to be used on a DSL is set to ETSI NET-3, INS NET 64, QSIG, or Numeris.

The digital pad provides gain or attenuation values to condition the level of the digitized transmission signal according to the network loss plan. This determines transmission levels for the B-channel circuit-switched voice calls.

LD 73 —Configuring pad tables (optional)

Prompt	Response	Comment
REQ	NEW	New settings
TYPE	DTI2/PRI2/ BRIL/BRIT	Pad table type. Enter BRIL
FEAT	PAD	Set the pad values used for ISDN BRIL
PDCA	1-16	Pad category table.
DFLT	(1)-16	PAD Category table. If one channel is using the specified table, then the command is aborted. Table 1 cannot be modified or deleted. The following prompts define the pad levels. The receiving pad code is <i>r</i> and the transmission pad code is <i>t</i> . These entries have the range 0-26. The pad values (in decibels) relating to these codes are shown after this table.
ONP	r ... t	On-premises extension
DSET	r ... t	Meridian Digital Set
OPX	r ... t	Off-premises extension
DTT	r ... t	Digital TIE trunks
SDDT	r ... t	Digital Satellite TIE trunks
Prompt	Response	Comment

LD 73 —Configuring pad tables (optional)

NTC	r ... t	Nontransmission compensated
TRC	r ... t	Transmission compensated
DCO	r ... t	Digital COT, FEX, WAT, and DID trunks
VNL	r ... t	VIA NET LOSS
DTO	r ... t	2Mb DTI digital TOLL office trunks
ACO	r ... t	Analog local exchange or WATS trunks
AFX	r ... t	Analog FEX trunks
ADD	r ... t	Analog DID trunks
SATT	r ... t	Analog satellite TIE trunks
ATO	r ... t	Analog TOLL office trunks
PRI2	r ... t	2Mb PRI trunk (prompted only if the 1.5/2Mb Gateway feature is equipped and TYPE=2Mb PRI)
XUT	r ... t	Analog local exchange trunk(prompted only if the 1.5/2Mb Gateway feature is equipped and TYPE=PRI2)
XEM	r ... t	Analog TIE trunk(prompted only if the 1.5/2Mb Gateway feature is equipped and TYPE=PRI2)
BRIL	r ... t	ISDN BRIL pad values. Valid inputs are 0-26. Refer to Table 1 .

[Table 1](#) shows ISDN BRI pad codes and their values. Positive dB represents loss and negative dB represents gain.

Table 1— ISDN BRI trunk pad codes and values

code	0	1	2	3	4	5	6	7
value (dB)	0.0	+1.0	+2.0	+3.0	+4.0	+5.0	+6.0	+7.0
code	8	9	10	11	12	13	14	15
value (dB)	+8.0	+9.0	+10.0	+11.0	+12.0	+13.0	+14.0	-1
code	16	17	18	19	20	21	22	23
value (dB)	-2	-3	-4	-5	-6	-7	-8	-9
code	24	25	26					
value (dB)	-10	idle	+0.6					

Configuring an LAPD protocol group for line

Add a protocol group by using LD 27 and specifying its protocol group number. You may also change its LAPD parameters as needed or accept the default values. LAPD is a transmission protocol that specifies the transmission timers, the maximum number of retransmissions, the size of the data frame, and the number of negative acknowledgments allowed before the system issues an alarm.

LD 27 — Adding or changing an LAPD protocol group for a line

Prompt	Response	Comment
REQ	NEW	Add an ISDN protocol group
TYPE	LAPD	LAPD Protocol group
PGPN	0-15,<cr>	Protocol group number The values for this prompt are: 0-15=Adds a specified protocol group <cr>=Stops this prompt from being displayed again
LAPD	YES,NO	LAPD parameters —The values for this prompt are: YES=Define or modify the LAPD parameters NO=Does not prompt the LAPD parameters and assigns the default values shown in () to these parameters.
T200	(2)-40	Retransmission timer specifies the time delay before the system retransmits the information. Delay is in increments of 0.5 seconds.
T203	4-(20)-80	Maximum time between transmission frames Delay is in increments of 0.5 seconds.
N200	1-(3)-8	Maximum number of retransmissions of unsuccessfully transmitted information.
N201	4-(260)	Maximum number of contiguous octets or bytes of information.
K	(1)-32	Maximum number of outstanding negative acknowledgment (NAKs) allowed before alarming the system.
N2X4	0-(10)-20	For 1TR6 connectivity — number of status inquiries when the remote station is in peer busy state.
PGPN	<cr>	Press <cr> to prevent repetition of all the parameters starting with LAPD.

Removing an LAPD protocol group for a line

You can remove an LAPD protocol group as long as it is not assigned to a DSL. If a protocol group is assigned to a DSL, delete the DSL before removing the protocol group.

LD 27 - Removing an LAPD protocol group for a line

Prompt	Response	Comment
REQ	OUT	Remove an ISDN BRI component
TYPE	LAPD	Protocol group
PGPN	0-15, ALL,<cr>	Protocol group number 0-15 = Removes a specified protocol group from 0-15 ALL = Removes all protocol groups <cr> = No change the protocol group is not removed. A protocol group cannot be removed if it is assigned to a DSL.
...	...	

Printing an LAPD protocol group for a line

Configuration information for a specific LAPD protocol group or for all protocol groups can be printed.

LD 27 — Printing an LAPD protocol group

Prompt	Response	Comment
REQ	PRT	Prints an ISDN BRI component
TYPE	LAPD	Protocol group
PGPN	0-15, <cr>	Protocol group number 0-15 = Prints a specified protocol group from 0-15 <cr> = Prints all protocol groups and the number of DSLs in each group
USER	YES (NO)	YES = Print the LAPD group(s) selected in the PGPN prompt and the DSLs that are using it (them). NO = Do not print the LAPD user information.
REQ		

Configuring a MISP for a line

The ISDN BRI line application or the Meridian 1 Packet Handler (MPH) application may be downloaded to the MISP hardware. If the hardware runs only the ISDN BRI line application, it functions as a stand-alone MISP. In this configuration, the MISP can support the signaling processing for four ISDN BRI line cards without association with a BRSC or it can support up to 120 ISDN BRI line cards with the maximum eight BRSCs.

The procedure which follows indicates how to add or change a MISP for line application. To add or change a MISP, specify its even loop number.

The MISP must be enabled by using the **ENLL I** command in Network and IPE Diagnostic Program LD 32.

LD 27— Adding or changing a MISP for a line

Prompt	Response	Comment
REQ	NEW, CHG	Add or change an ISDN BRI MISP Note: The defaults apply to adding, not changing, a MISP.
TYPE	MISP	MISP
LOOP	0-158	MISP loop number; must be an even number, with the next odd loop number unequipped.
APPL	BRIL	BRIL = ISDN BRI line application
	XBRIL	XBRIL = Remove the ISDN BRI line application
	<cr>	<cr> = None. Enter BRIL for ISDN BRI line application. APPL is prompted until <cr> is entered.
DSPD	YES, (NO)	YES = D-channel Packet Switched Data NO = No D-channel Packet Switched Data. Use the default value NO. Subsequent prompts will be skipped.

Removing a MISP configured for a line

Before removing the MISP which has been configured for a line:

- Remove all BRSCs associated with it, if applicable.
- Remove all DSLs connected to SILCs and UILCs associated with it.
- Disable the MISP loop with the **DISL I** command in LD 32.

LD 27 — Removing a MISP configured for a line

Prompt	Response	Comment
REQ	OUT	Remove an ISDN BRI component
TYPE	MISP	Enter MISP to remove the MISP.
LOOP	0-158	Loop number of the MISP to be removed (must be an even number). The MISP must be disabled before being removed. All BSRCs, SILC and/or UILC DSLs associated with the MISP must be removed before removing the MISP. See “Removing a BRSC configured for a line” or “Removing a SILC or UILC configured for a line” in this chapter.
REQ		

Printing a MISP configured for a line

Print the configuration information for a MISP which has been configured for a line by specifying its network loop number. If the MISP network loop number is not known, use LD 22 to print the system configuration.

LD 22 — Printing a MISP configured for a line

Prompt	Response	Comment
REQ	PRT	Prints an ISDN BRI component
TYPE	MISP	MISP Note: BRSC TNs associated with the MISP are also printed.
LOOP	0-158	Loop number (must be an even number).
REQ		

Configuring a BRSC for a line

The Basic Rate Signaling Concentrator (BRSC) enhances the capacity of the ISDN BRI lines on the system by off-loading some of the signaling processing from the MISP to the BRSC. Each BRSC can support 120 DSLs. This increases DSL capacity for the MISP from 32 to 976.

Without a BRSC configured, a MISP can support up to four SILCs and UILCs in any combination. With a BRSC configured, a MISP can support the following maximum combinations:

- three line cards, one BRSC
- two line cards, eight BRSCs

The maximum number of DSLs that a MISP configured with a BRSC is 976. This figure is derived as follows:

1 MISP supports 8 BRSCs and 2 line cards (SILC/UILCs)

1 BRSC supports 15 SILC/UILC cards, each having 8 ports:

- total $(8 \times 15) = 120$

1 SILC/UILC card has 8 ports

- total $(8 \times 120) = 960$

2 SILC/UILC cards each having 8 ports

- total $(8 \times 2) = 16$

Therefore, total number of DSLs = $960 + 16 = 976$.

To configure a BRSC:

- Disable the MISP under the following conditions:
 - The first BRSC is configured.
 - You add the first BRSC to an IPE module with two or more configured ISDN BRI line cards. The MISP does not have to be disabled when adding BRSCs 2-8 to this configuration.
 - You change from a configuration with three line cards and two BRSCs to a configuration with two line cards and up to eight BRSCs.
- Disable all ISDN BRI line cards in an IPE Module
- Configure a BRSC in the IPE Module; specify its superloop number, shelf number, and card number. Since the BRSC will handle Dchannel Packet Switched Data (DPSD), specify the PRI loop and channel numbers for routing of the DPSD to an external packet handler.
- Select a MISP that can accommodate the BRSC
- Enable the MISP
- Enable the BRSC with the **ENLCIII s cc** command in LD 32

[Table 2](#) lists the possible cases for adding or removing BRSCs with a Meridian 1 system already configured for ISDN BRI.

Table 2
Adding/removing configured BRSCs

Initial configuration				
Configured line cards installed	BRSCs	Action	Same IPE Module?	Disable MISP?
0	0	Add BRSC 1	NA	Yes
0	1	Add BRSC 2-8	NA	No
1	0	Add BRSC 1	Yes/No	Yes
1	1	Add BRSC 2-8	NA	No
2	0	Add BRSC 1	Yes/No	Yes
2	1	Add BRSC 2-8	Yes/No	No
3	0	Add BRSC 1	Yes/No	Yes
3	0	Add BRSC 1	No	Yes
2	1	Add BRSC 2	Yes	Yes
0-2	2	Add BRSC 3-8	Yes/No	No
4	0	Add BRSC 1	Yes	Yes
3	1	Add BRSC 2	Yes	Yes
0-2	3-8	Add BRSC 3-8	Yes/No	No
2	2-8	Disable BRSC 1	N/A	No
2	1	Add line card 3	N/A	Yes
3	1	Delete BRSC	N/A	No
3	0	Add line card 4	N/A	Yes
2	2-8	Delete BRSCs	N/A	No
2	0	Add line card 3	N/A	Yes
3	0	Add line card 4	N/A	No

To add or change a BRSC for a line application, specify its superloop number, shelf number, and card number.

Enable the BRSC with the **ENLC III s cc** command in LD 32.

LD 27 — Adding or changing a BRSC for a line

Prompt	Response	Comment
REQ	NEW, CHG	Add or change a SILC or UILC line card
TYPE	BRSC	SILC or UILC line card
BRSC	III s cc	Card location The values for this prompt are: III (loop)=0-156 (must be an even number divisible by 4) s (shelf)=0-1 cc (card)=0-15
MISP	0-158	MISP loop number (must be an even number that has already been configured)
DPSD	YES, (NO)	YES = D-channel Packet Switched Data NO = No D-channel Packet Switched Data Use the default value NO. All subsequent prompts are repressed.

Removing a BRSC configured for a line

Remove a BRSC which has been configured for a line by specifying its loop number. Before removing the BRSC, disable all line cards associated with it.

Before removing the BRSC, disable the BRSC loop with the **DISC III s cc** command in LD 32; also, disable all line cards associated with the BRSC.

LD 27 — Removing a BRSC card configured for a line

Prompt	Response	Comment
REQ	OUT	Remove an ISDN BRI component
TYPE	BRSC	Remove the BRSC data
BRSC	III s cc	Card location The values for this prompt are: III (loop)=0-156 (must be an even number divisible by 4) s (shelf)=0-1 cc (card)=0-15
REQ		

Printing a BRSC configured for a line

Print the configuration information for a BRSC configured for a line by specifying its network loop number. If the BRSC network loop number is not known, use LD 22 to print the system configuration.

To print all BRSCs associated with a MISP, enter <cr> at the BRSC and MISP prompts.

LD 22 — Printing a BRSC configured for a line

Prompt	Response	Comment
REQ	PRT	Prints an ISDN BRI component
TYPE	BRSC	Print BRSC data Note: BRSC TNs associated with the MISP are also printed.
BRSC	lll s cc	Card location The values for this prompt are: lll (loop)=0-156 (must be an even number divisible by 4) s (shelf)=0-1 cc (card)=0-15
MISP	0-158 <cr>	MISP loop number (must be an even number that has already been configured). If <cr> is entered, all BRSCs configured in the system are printed; otherwise, all BRSCs associated with the MISP loop are printed.
REQ		

Configuring a SILC or UILC for a line

Add or change a new SILC or UILC for ISDN BRI line application by specifying its location, card type, and the MISP network loop that this card uses to transmit and receive signaling and D-channel packet data.

Note: This step may be skipped and the card type specified when configuring the DSL in the procedure “Adding a DSL for a line.”

The following procedure is used when configuring the SILC or UILC cards without configuring their DSLs

Note: If there is a BRSC configured in the IPE module, the MISP prompt is skipped and the MISP III and the BRSC III s cc is displayed.

LD 27 — Adding or changing a SILC or UILC configured for a line

Prompt	Response	Comment
REQ	NEW, CHG	Add or change a SILC or UILC line card
TYPE	CARD	SILC or UILC line card
TN	III s cc	Card location The values for this prompt are: III (loop)=0-156 (must be an even number divisible by 4) s (shelf)=0-1 cc (card)=0-15
MISP	0-158	Loop number (must be an even number that has already been configured) Note: If there is a BRSC configured in the IPE module, the MISP prompt is skipped and the MISP III and the BRSC III s cc is displayed.
CTYP	SILC,UILC	Card type to be added or changed. Remove any DSLs configured for this line card before changing the card type.
REQ		

Removing a SILC or UILC configured for a line

Remove a SILC or UILC which has been configured for a line by specifying its card location. Before removing the SILC or UILC, all configured DSLs must first be removed from the card by using the procedure “Removing a DSL configured for a line”. When the last DSL is removed, the card is automatically deleted.

When removing the card, the database information is also deleted from the data block. Use LD20 to list cards that have been removed.

LD 27 — Removing a SILC or UILC

Prompt	Response	Comment
REQ	OUT	Remove an ISDN BRI component
TYPE	CARD	ISDN BRI line card
TN	III s cc	Card location of the SILC or UILC to be removed. III (superloop) = 0-156 (must be a number divisible by 4) s (shelf) = 0-1 cc (card) = 0-15 Remove any DSLs that are configured for this card before removing the card.
...	...	

Printing a SILC or UILC configured for a line

To print the configuration information for a SILC or UILC, specify its card location.

LD 27 — Printing a SILC or UILC configured for a line

Prompt	Response	Comment
REQ	PRT	Print an ISDN BRI component
TYPE	CARD	ISDN BRI line card
TN	III s cc	Card location III (superloop) = 0-156 (must be a number divisible by 4) s (shelf) = 0-1 cc (card) = 0-15
...	...	

Configuring a DSL for a line

To add or change a DSL for a line application, specify its port location and its DSL characteristics. DSL location specifies a SILC/UILC port connected to a DSL.

LD 27 - Adding or changing a DSL for a line (Part 1 of 4)

Prompt	Response	Comment
REQ	NEW,CHG	Add or change a DSL Note: The defaults apply to adding, not changing, a DSL.
TYPE	DSL	DSL
DSL	Ill s cc dsl#	DSL location. Ill (superloop) = 0-156 (must be zero or a number divisible by 4) s (shelf) = 0-1 cc (card) = 0-15 dsl# (DSL location) = 0-7 Assign 31 DSLs for each MISP if DCH or BDCH were specified at the PH prompt in "MISP configuration procedures."
OPT	BRIL	This prompt applies to Generic X11 Releases 18-21. ISDN BRI line application. This information is NOT downloaded to the DSL, but is used to print the following options, when REQ = PRT: DN TSPs with the requested DN. DNS DN for the specified DSL. SPID TSPs with the specified Service Profile Identifier. SUID Service Profile ID and User Service Identifier map. USID TSPs with the specified User Service Identifier. <cr> All TSPs defined for the specified DSL.
APPL	BRIL	This prompt applies to Generic X11 Release 22 and later. ISDN BRI line application.
DES	x...x	Designator to assign to a DSL (ex. BUILD2) x...x = 1 to 6 alphanumeric DSL designator
CUST	0-99	Customer number
CTYP	SILC, UILC	Card type. This prompt is displayed only if the SILC or UILC has not been previously configured using the "SILC or UILC configuration procedures," or "Adding a DSL" procedure when configuring another DSL on the same SILC/UILC.

LD 27 - Adding or changing a DSL for a line (Part 2 of 4)

Prompt	Response	Comment
MISP	0-158	Loop number (must be an even number of a MISP that has already been configured). This prompt is displayed only if the MISP has not been assigned to the specified SILC or UILC. If there is a BRSC configured in the IPE Module, the MISP prompt is skipped and the MISP III and the BRSC III s cc is displayed as shown in the following example: MISP 8 BRSC 24 0 15
MODE	NTAS, NTFS	Network terminal line sampling mode (this prompt is displayed only if you specified the card type as SILC). The values for this prompt are: NTAS=Adaptive sampling Extended passive bus, Branched passive bus, Point-to-point bus, U interface DSL. NTFS=Fixed sampling Short passive bus.
B1CT	(VCE) (DTA) <cr>	B-channel 1 call type VCE = circuit switched voice DTA = circuit switched data Enter <cr> to select voice and data as defaults.
B2CT	(VCE) (DTA) <cr>	B-channel 2 call type VCE = Circuit switched voice DTA = Circuit switched data Enter <cr> to select voice and data as defaults.
LDN	0-3, (NO)	Departmental listed directory number 0-3 = Departmental listed DN specified in LD15 NO = No departmental listed DN associated with the DSL
XLST	(0)-254	Pretranslation group (if configured in customer data block).
MTEI	1-(8)-20	Maximum number of Terminal Endpoint Identifiers, both static and dynamic combined assigned to the logical terminals on this DSL.
MCAL	2-(16)-32	Maximum number of calls on the DSL at one time. This includes calls waiting and on hold. Warning is received if less than 8 is specified.

LD 27 - Adding or changing a DSL for a line (Part 3 of 4)

Prompt	Response	Comment
MTSP	1-(8)-16	Maximum number of TSPs allowed for a DSL
PGPN	0-15	Protocol group number (no default value) The protocol group should be previously added as described in "Configuring a protocol group for a line."
PRID	1- 6	Defines the protocol to be used on the DSL Selection of the protocol ID is terminal dependent. The values for this prompt are: 1=ANSI 2=ETSI 3=DMS 4=NET64 5=NUMERIS 6=NI-1 Note: A response of 6 allows the ISDN BRI Conference feature to be configured in the TSP of the DSL.
PDCA	1-16	Pad category table, defined in LD 73. Prompted if PRID = 2 or 4.
FDN	n...n	Flexible CFNA directory number. Enter a 1-13 digit DN.
EFD	n...n	Flexible external call CFNA DN. Enter a 1-13 digit DN.
HUNT	n...n	Hunt directory number. Enter a 1-13 digit DN.
EHT	n...n	Hunt external call directory number. Enter a 1-13 digit DN.
TGAR	(0)-31	Trunk group access restriction
NCOS	(0)-99	Network class of service
SGRP	(0)-999	Scheduled Access Restriction Group Number.
CLS		Class of service access restrictions. More than one class of service can be entered by separating each entry with a space. Default features shown in parenthesis are selected by pressing <cr>.
	(ABDD)	Abandoned call record and time to answer denied
	ABDA	Abandoned call record and time to answer allowed
	(ICDD), ICDA	Internal Call Detail Recording (Denied) Allowed
	(MRD), MRA	Message Restriction (Denied) Allowed

LD 27 - Adding or changing a DSL for a line (Part 4 of 4)

Prompt	Response	Comment
	(UDI), RDI	(Unrestricted) Restricted DID
	(UNR)	(Unrestricted) - Releases 18 - 21.
	(CTD)	Conditionally Toll Denied - Release 22 and later.
	CUN	Conditionally Unrestricted
	FR1	Fully Restricted class 1
	FR2	Fully Restricted class 2
	FRE	Fully Restricted
	SRE	Semi-Restricted
	TLD	Toll Denied
	ICDA	Internal Call Detail Recording allowed
	(ICDD)	(Internal Call Detail Recording denied)
	<cr>	Enter <cr> to select the defaults.
		More than one class of service may be selected by separating each entry with a space.
REQ	...	

Removing a DSL configured for a line

Remove a DSL configured for a line by specifying its location. To remove a DSL, first remove all the TSPs assigned to this DSL. When the last configured DSL on a card is removed, the card is removed automatically.

LD 27 — Removing a DSL configured for a line

Prompt	Response	Comment
REQ	OUT	Remove an ISDN BRI component
TYPE	DSL	DSL
DSL	lll s cc dsl#	DSL location lll (superloop) = 0-156 (must be a number divisible by 4) s (shelf) = 0-1 cc (card) = 0-15 dsl# (DSL location) = 0-7
...	...	

Printing a DSL configured for a line

Print the configuration information for a single DSL by specifying its location.

LD 27 — Printing a DSL configured for a line

Prompt	Response	Comment
REQ	PRT	Print an ISDN BRI component
TYPE	DSL	DSL
DSL	lll s cc dsl#, lll s cc, lll s, lll	DSL information lll s cc dsl# = Prints information for the specified dsl# lll s cc = Prints information for DSLs on the specified card lll s = Prints information for DSLs in the specified shelf lll = Prints information for DSLs on the specified loop
DATE	(<cr> x y z	Print data and display the last active date, where x = day (1-31), y = month (Jan-Dec), and z = year (1979-9999) specifies the starting date of the data to be displayed or printed.
PAGE	YES, (NO)	YES = prints one DSL per page NO = prints without paging
DES	x...x, <cr>	1-digit to 6-digit alphanumeric DSL designator No designator for DSLs
NACT	YES, (NO)	Activity date is updated to current date.
...	...	

Configuring a TSP for a line

The TSP configuration procedures define the service profiles for ISDN BRI terminals connected to a DSL. A service profile specifies the type of transmission, the call restrictions, and the features the terminal can use.

To add or change a TSP to a DSL, specify the DSL location, its transmission characteristics, and the class of service for terminals connected to the DSL. If the default value is desired, press the ENTER key.

LD 27 - Adding or changing a TSP for a line (Part 1 of 4)

Prompt	Response	Comment
REQ	NEW,CHG	Add or change a TSP
TYPE	TSP	Assign TSP to a DSL
DSL	lll s cc dsl#	DSL location lll (superloop) = 0-156 (must be a number divisible by 4) s (shelf) = 0-1 cc (card) = 0-15 dsl# (DSL location) = 0-7 The DSL must have been configured using the "DSL configuration procedures."
USID	0-15	User service identifier 0 is the TSP assigned to non-initializing terminals. The total number of TSPs defined for a DSL cannot exceed the maximum number of TSPs allowed for a DSL as specified by the MTSP prompt in the "DSL configuration procedures." A TSP should be configured for non-initializing terminals. This is done by assigning USID=0 to the TSP.
MPHC	(YES) NO	Route D-channel packet switched data to the Meridian Packet Handler. Enter NO.
SPID	aaa...a <cr> Xaaa...a	Service profile ID aaa...a = any combination of 1-20 alphanumeric characters. <cr> = Stops this prompt from being displayed again. A maximum of 8 valid SPIDs per TSP are allowed. Xaaa...a removes the specified SPID. This prompt appears only if USID = 1-15. It repeats until <cr> is entered, but only up to 8 SPIDs may be entered. This SPID must be entered in the initializing terminal to associate the terminal with a USID.

LD 27 - Adding or changing a TSP for a line (Part 2 of 4)

Prompt	Response	Comment
FEATID	aaa mmm nnn <cr> Xaaa	ID associated with feature aaa, as follows: A03 = 3-party Conference A06 = 6-party conference mmm = Feature Activation ID(1-127) nnn = Feature Indication ID (1-127) (optional; if not entered, the value entered for mmm is assumed) <cr> = Skip the FEATID entry Xaaa = Delete the feature. Feature Activation ID and Feature Indication ID are feature key number assignments configured at the terminal level. Recommended terminal assignments are: - for the M5317TDX: A06 15 - for the M5209TDcp: A06 9
DN	xxxx (0)-N	xxxx = DN to be associated with the TSP. (0)-N = CLID entry, with N = CLID SIZE-1 (SIZE defined in LD 15). The DN cannot be shared by a non ISDN BRI terminal. This prompt is repeated until <cr> is pressed. At least one DN and a maximum of 8 DNs can be assigned to a DSL. The directory number can be associated with multiple TSP
CT	VCE DTA	Directory number call type VCE=Circuit switched voice DTA=Circuit switched data One or more call types can be entered by separating each entry with a space. The call types entered must have been specified for the B1CT and B2CT prompts in “DSL configuration procedures.”
MCAL	1-(4)-8	Maximum number of calls per DN at one time Defines the maximum number of calls allowed for a directory number, which includes the total number of active calls, calls waiting, and calls on hold.
CLIP	(YES), NO	Calling line identification presentation service YES = displays of calling party DN on incoming calls NO = does not display of calling party DN on incoming calls

LD 27 - Adding or changing a TSP for a line (Part 3 of 4)

Prompt	Response	Comment
PRES	(YES), NO	Allows display of calling line identification to far end on outgoing calls. YES = present this DN to the called party on outgoing calls NO = do not present this DN to the called party on outgoing calls
COLP	(NO) YES	Connected Number Information Elements (IEs) is (not) passed from the Meridian 1 to the Terminal Adapter (S ₀).
TRANS	(NO) YES	CLID and Connected Number Information Element (IE) are (not) passed from the Meridian 1 to the Terminal Adapter (S ₀), if presentation is restricted.
FEAT	HTA/(HTD) FNA/(FND) SFA/(SFD) CFTA/(CFTD) MWA/(MWD) FBA/(FBD) HBTA/(HBTD) DNO1/DNO2/(DNO3) DNDN/(DNDY)	Class of service features HTA = Hunt allowed (always assign if terminal has CWT capability) HTD = Hunt denied FNA = Call forward no answer allowed FND = Call forward no answer denied SFA = Second level call forward no answer allowed SFD = Second level call forward no answer denied CFTA = Call forward by call type allowed CFTD = Call forward by call type denied MWA = Message waiting allowed MWD = Message waiting denied FBA = Call forward busy allowed FBD = Call forward busy denied HBTA = Hunting by call type allowed HBTD = Hunting by call type denied DNO1/DNO2/(DNO3) = QSIG Call Diversion Notification for calling party where: DNO1 = no notification DNO2 = notification without forwarded-to (diverted) party's number and name (DNO3) = notification with forwarded-to (diverted) party's number and name when available (default). DNDN/(DNDY) = QSIG Call Diversion Notification for forwarded-to (diverted) party where: DNDN = no notification of called party's number and name notification (DNDY) = notification with called party's number and name when available (default).

LD 27 - Adding or changing a TSP for a line (Part 4 of 4)

Prompt	Response	Comment
		More than one class of service can be entered by separating each entry with a space. Press <cr> to select multiple default features shown in parenthesis.
DFDN	n...n	Default directory number Enter a 1-digit to 7-digit DN. This DN must be defined at the preceding DN prompt A DN can be associated with multiple TSPs. Only one default DN can be defined for a TSP. This DN is sent in the outgoing setup if the terminal does not send a calling line identification number with the outgoing call.
REQ	...	

Removing a TSP configured for a line

Before removing a TSP configured for a line, disable the B-channel.

To remove a single TSP from a DSL, specify the DSL location and the user service identifier. Remove all TSPs from a DSL by entering **ALL** at the USID prompt.

Removal of the TSP disconnects all calls associated with the TSP's D-channel packet switched data and circuit switched voice data.

LD 27 — Removing a TSP configured for a line

Prompt	Response	Comment
REQ	OUT	Remove an ISDN BRI component
TYPE	TSP	TSP
		Note: Removal of the TSP disconnects all calls associated with the TSP's D-channel packet switched data and circuit switched voice data.
DSL	lll s cc dsl#	DSL location lll (superloop)=0-156 (must be an even number divisible by 4) s (shelf)=0-1 cc (card)=0-15 dsl# (DSL location)=0-7
USID	0-15, ALL	User service identifier 0-15 = Removes a specified TSP from 0 to 15 ALL = Removes all TSPs for the specified DSL
REQ	...	

Printing a TSP configured for a line

Configuration information can be printed for a TSP which has been configured for a line based on characteristics such as user service identifier, service profile ID, and directory number.

LD 27 — Printing a TSP configured for a line

Prompt	Response	Comment
REQ	PRT	Print an ISDN BRI component
TYPE	TSP	TSP
DSL	lll s cc dsl#	DSL location lll (superloop) = 0-156 (even number divisible by 4) s (shelf) = 0-1 cc (card) = 0-15 dsl# (DSL location) = 0-7 The DSL must have been configured using the procedures described in "Configuring a DSL for a line."
OPT	USID	USID = Prints the TSP with the specified user service ID
	SPID	SPID = Prints the TSPs with the specified service profile ID
	SUID	SUID = Prints the specified user profile ID and the User Service ID map
	DN	DN = Prints the TSP(s) that contains the specified DN
	DNS	DNS = Prints all the directory numbers defined for the DSL
	NTN	NTN = Prints the TSPs that contain the specified NTN.
	<cr>	<cr> = Prints all the TSPs defined for the DSL
USID	0-15	User service identifier
SPID	aa..aa	Service profile ID Enter a 1-20 alphanumeric service profile ID.
DN	xxxx (0)-N	xxxx = Directory number associated with the TSP (0)-N = CLID entry, N = SIZE-1 (SIZE defined in LD 15).
NTN	nn..nn	National Terminal Number (1-10 digits)
REQ	...	

Initializing ISDN BRI terminals

After configuring the TSPs, initialize the ISDN BRI terminals by entering the required parameter values at the terminal key pad or keyboard. The user manual shipped with each terminal provides instructions for initializing the terminal for a specific application.

Information on configuring the M5317TDX and the M5209TDcp ISDN BRI terminals follows. Procedures are also given on how to configure NI-Conference on the M5317TDX and the M5209TDcp.

Setting up ISDN BRI terminal parameters

The ISDN BRI terminal requires that Layer 2 and Layer 3 parameters be programmed at the terminal. Refer to your terminal documentation for complete instructions. In general, the following parameters are needed:

- **TEI:** Voice and circuit switched data calls require dynamic TEI assignment, which automatically assigns a TEI (range 64 - 126) when the terminal is connected to the DSL.

Packet data requires static TEI assignment, which is performed manually by entering an unassigned TEI number (range 0 - 63) directly on the terminal. This TEI remains assigned to the terminal as long as it remains operational. Procedures for configuring terminals for voice and circuit switched data calls (dynamic TEI assignment), and for packet data (static TEI assignment) soon follow in this section.

- **SPID:** Enter the voice SPID, data SPID. Each SPID should match the one entered in LD 27 in the TSP which contains this terminal's DN. A different SPID can be configured for the voice and data, allowing two different TSPs to be configured in LD 27.
- **DN:** Enter voice DN and data DN. These DNs should match those defined in the associated TSPs.
- Some terminals may allow the user to make other selections such as **Ap** law or bearer capability. Refer to the set menu for details.

Programming the M5317TDX for line application

Procedure 1 provides the steps to program terminal parameters for the M5317TDX, firmware version 2.3a and later.

Procedure 1

Programming the M5317TDX for a line

- 1 Unpack and plug in the terminal. Hold down the RLS and HOLD keys as it powers up.
- 2 Press MAINROM.
- 3 Press INSTALL.
- 4 Press ENGLISH or FRANCAIS for your choice of language.
- 5 Ensure that the terminal TEI is set to dynamic, by pressing the terminal softkey and entering * .
- 6 Press OK when you have finished setting the TEIs.
- 7 Enter the terminal (voice) SPID as configured in LD 27 (the default SPID does not apply). Press OK when finished.
- 8 Enter the data SPID as configured in LD 27 (the default SPID does not apply). Press OK when finished.
- 9 Enter the data DN. Press OK when finished.
- 10 Press HEADSET until REAR is displayed.
- 11 Press SIGTYPE until MER1 is displayed. If NI-Conference is desired, set SIGTYPE = NI.
- 12 Press A/MU until μ -Law is displayed.
- 13 Press MORE.
- 14 Ensure DIALPLAN is configured for NATIONAL.
- 15 Press EXIT.
- 16 Press NO for execute SPM (Service Profile Management).
- 17 Enter YES to enter new data fill, and YES to delete existing datafill.
- 18 Press KEY# then enter on the keypad the key number you wish to program.
- 19 Press EDIT DN then enter on the keypad the DN digits.
- 20 After each DN entry, press OK, then SAVE.

- 21** Repeat steps 17-19 for each voice DN desired. Press EXIT when finished.
- 22** **To install NI-Conference** on an M5317TDX terminal, press KEY#, then enter a number on the keypad (15 is recommended). Press TYPE until FA is displayed. Press FEATURE until FCC is displayed. Press SAVE.
- Note:** The KEY# must correspond to the Feature Activation ID entered for the terminal's TSP in LD 27.
- 23** If you made a mistake, press INSTALL again and begin at step 3; otherwise, press EXIT.
- 24** Wait a few minutes. Error code 23 displays and clears. DATE AND TIME flashes. Push setup. Set clock. Set date.
- 25** Make a voice call to ensure that the terminal is operational.

For more details, refer to the M5317TDX Installation and maintenance guide (P0738285).

The following features are supported on M5317TDX terminals:

- AutoDial Keys (up to 9 keys each with 20 digit numbers)
- Inspect Key
- Data Port Configuration from the menu
- Hands Free
- Conference-Soft Key (Recommended: Key #15)
- DiscData Soft key for Disconnecting Data Calls
- English/French Language Support
- Set based Ringing Patterns
- Set based Clock

Programming the M5209TDcp for a voice call

[Procedure 2](#) provides the steps to program terminal parameters for voice calls on the M5209TDcp, firmware version 2.28 and later.

Procedure 2

Program the M5209TDcp for voice call

- 1 Hold the Release and Hold keys simultaneously and wait for the menu screen. To advance to the next option, press * and to select an option, press #
- 2 MAIN MENU
 CONFIG
 — for TEI/SPID/DN/FEAT configuration, press #
- 3 ENTER PASSWORD
 — enter a number for isdn (using keypad to spell out isdn# = 4736#)
- 4 CONFIGURATION MENU
 TEI
 — press # to select the TEI menu
- 5 ENTER TEI VOICE
 AUTO
 — press # to select AUTO (dynamic TEI assignment) for voice calls
- 6 ENTER TEI PSD
 AUTO
 — press # to select AUTO (dynamic TEI assignment) for packet switch data calls
- 7 ENTER TEI CSD
 AUTO
 — press # to select AUTO (dynamic TEI assignment) for circuit switch data calls
- 8 CONFIGURATION MENU
 SPID
 — press # to select the SPID menu
- 9 ENTER SPID VOICE
 aaaa
 — enter the SPID for voice call and press # to accept

- 10** ENTER SPID CSD
aaaa
— enter the SPID for circuit switch data call and press # to accept
- 11** CONFIGURATION MENU
SWITCH
— press # to select the SWITCH menu
- 12** SELECT SWITCH TYPE
NISDN
— press # to select National ISDN-1 type
- 13** CONFIGURATION MENU
EKTSmode
— press * to take the default call handling mode (BASIC) and advance to the next option
- 14** CONFIGURATION MENU
DEF KEYS
— press the first key from the bottom to define a primary DN appearance
- 15** DEFINE KEY
1 CALL APP nnnn
— enter the primary DN (key 1 can be a DN only)
— If you made a mistake and must re-enter the DN, press * to clear and enter the correct DN
— press # to accept
- Note:** Call appearance can use the same DN on multiple keys. For example, you may have one DN and two keys to invoke Conference.
- 16** CONFIGURATION MENU
DEF KEYS
— press key 2 to 9 to enter another DN appearance or a feature
- 17** DEFINE KEY
2 CALL APP nnnn
— enter a secondary DN appearance, OR
— press * to scroll through the feature options
— press # to accept

- 18** CONFIGURATION MENU
DEF KEYS
 - press * to advance to the next option
- 19** CONFIGURATION MENU
CSD DN
 - press # to select the circuit switch data DN menu
- 20** ENTER DN FOR CSD
nnnn
 - enter the CSD DN
 - press * to re-enter
 - press # to accept
- 21** CONFIGURATION MENU
EXIT
 - press # to exit
 - press* to review/revise the above entries
- 22** MAIN MENU
EXIT
 - press * to scroll through the main menu options until EXIT
- 23** SAVING DATA
 - wait for screen to refresh
- 24** SELF TEST PASSED
 - wait for self test to finish

It is recommended that the following keys be configured on the M5209TDcp:

- Two DN call appearances at a minimum
- Speed Call List
- Stored Number Redial
- Disconnect Data Call
- Conference

Programming NI-Conference on the M5209TDcp

[Procedure 3](#) provides the steps to configure the M5209TDcp terminal for the NI-Conference feature.

Procedure 3

Configure NI-Conference on the M5209TDcp terminal

- 1 MAIN MENU
 CONFIG

 — for FEAT configuration, press #
- 2 ENTER PASSWORD

 — enter isdn# (for example, 4736#)
- 3 CONFIGURATION MENU
 TEI

 — press * to scroll through the main menu until DEF KEYS
- 4 CONFIGURATION MENU
 DEF KEYS

 — press key 2 to 9 to configure a feature
- 5 DEFINE KEY
 9 CONF

 — to define Conference, press * to scroll through the feature options until CONF

 — press # to accept

Note: NI-Conference can be defined on keys 2-9. The key number which is selected must also be entered as the Feature Activation ID of A03/A06 in the TSP configuration in LD 27. Also, at least two DN appearances must be configured on the terminal.

Programming the M5209TDcp for a data call

To configure a data call for the M5209TDcp terminal, use [Procedure 4](#) to select circuit switched data (CSD) mode and to program CSD parameters.

Procedure 4

Configure a data call for the M5209TDcp terminal

Note: Ensure that the TEI and/or SPID is configured for Circuit Switched Data as described in the voice call configuration.

Follow steps 1-9 to select the Circuit Switched Data (CSD) mode on the M5209TDcp:

- 1** Press the Hold and Release keys simultaneously until the Main Menu appears on the set display.

MAIN MENU
CONFIG

- 2** Press * until the data option appears on the display.

MAIN MENU
DATA

- 3** Press # to display the current data mode.

DATA MENU
MODE

- 4** Press # to display the current data mode.

SELECT DATA MODE
PACKET

- 5** If PACKET, VCCI or NONE is displayed, press * until CIRCUIT is displayed. If CIRCUIT is displayed already, proceed to step 6.

SELECT DATA MODE
CIRCUIT

- 6** Press # to select circuit-switched mode.

DATA MENU
PARAMS

- 7** Press * to scroll through data options until EXIT appears on the display.

DATA MENU
EXIT

- 8** Press #

MAIN MENU
EXIT

- 9** Press #

Follow steps 10-20 to configure the CSD parameters on the M5209TDcp terminal:

Note: For information on CSD parameters, refer to the M5209TDcp Data Communications Guide.

- 10** Press the Hold and Release keys simultaneously until the Main Menu appears on the set display.

MAIN MENU
CONFIG

- 11** Press * until the data option appears on the display.

MAIN MENU
DATA

- 12** Press #.

DATA MENU
MODE

- 13** Press * until the PARAMS option is displayed.

DATA MENU
PARAM

- 14** Press # to select a parameter to change.

SELECT PARAMETER

- 15 Type the parameter number you wish to change and press #.

ENTER PARAMETER VALUE
202:3

This example, we typed 202. The display shows the current value for parameter 202 as 3(1200bps).

If you typed an invalid parameter, the display shows the INV PARM message. Retype a valid parameter number and press #.

- 16 Type the new value you wish to assign the parameter and press #. If you want to leave the parameter value unchanged, do not enter a value, just press #.

SELECT PARAMETER
ACCEPTED

The display shows the ACCEPTED message when you enter a valid value. If it displays INV VALUE, retype the value and press #.

- 17 Repeat steps 15 and 16 for other parameters. After the M5209TDcp has accepted the last parameter that you wish to change, press #.

DATA MENU
SAVE

- 18 To save the changed parameters in the M5209TDcp nonvolatile memory, press #. Otherwise, press * until the EXIT option is displayed.

DATA MENU
EXIT

- 19 Press #.

MAIN MENU
EXIT

- 20 Press # to finish programming CSD parameter.

The Channel Control registers are used to select the CSD Data Bearer Capability. Hayes AT commands must be used to change the selection:

- AT%A4 = 0 sets it to unrestricted 64kbps
- AT%A4 = 1 sets it to 56kbps (adapted from 64kbps)

For more information on CSD mode, CSD parameters and a parameter summary, refer to the M5209TDcp Data Communications Guide.

The following features are supported on M5209TDcp terminals:

- Last Number Redial (invoked by ##)
- Set based Speed Call (Can store up to five 25 digit numbers)
- Store Number Redial (multiple keys)
- Conference (Key #9)
- DiscData Soft key for Disconnecting Data calls
- English/French Language Support
- Set based Ringing Patterns

Initializing a Northern Telecom M5000TD-1 terminal adapter

The M5000TD-1 is Northern Telecom's Universal Terminal Adapter (UTA). It adapts a non ISDN BRI data terminal or a 500/2500-type telephone to the ISDN BRI protocol. A terminal must be attached to the M5000 terminal adapter to initialize it.

Use the following procedures to initialize the M5000TD; and for additional information, refer to the M5000TD-1 User Guide.

I Circuit Switched Voice Calls

Service Profile ID (SPID)	!C2 = "nnn"
Primary Directory Number (DN)	!N3 = "nnn"
Second DN (optional)	!N4 = "nnn"
B1 (B2) Channel	!C4 (5) = 4
Configure DTE Channel as Voice	%A0 = 3

II Circuit Switched Data Calls

Service Profile ID (SPID)	!C6 = "nnn"
Directory Number (DN)	!N1 = "nnn"
B1 (B2) Channel	!C4 (5) = 4
Configure DTE Channel as Data	%A0 = 2
Configure Data Call as CSD	%A1 = 0
Synchronous (Asynchronous)	&Q1, 2 (&Q0)
Protocol Used	% A2 = 0 (No protocol) synch
	%A2 = 1 (T-Link - Reg S37) synch
	or asynch
	%A2 = 2 (V.120) asynch
	%A2 = 8 (I.515) asynch
Speed of channel	%A4 = 0 (64kbps)
	%A4 = 1 (56kbps)
Read-Only Error Register	%A6

III Packet Switched Data B-channel

Which B-channel 1 (2) !C4(5) = 1

!Y Registers specify B-channel packet layer parameters

default Packet Size - Receive !Y2 = 7 (Packet Size = 128 bytes)

!Y2 = 8 (Packet Size = 256 bytes)

Default Packet - Transmit !Y3 = 7 (Packet Size = 128 bytes)

!Y3 = 8 (Packet Size = 256 bytes)

X.25 Logical Channel Provisioning

(M5000TD-1 supports a maximum of 8 LCNs)

Number of PVCs on b-channel !Y4=n (default is 0)

Number of ILCs on B-channel !Y5=n (default is 8)

Number of OLCs on B-channel !Y7=n (default is 0)

Transmission Retry Count !B3=n (default is 4, range is 1-255)

Configure DTE Channel as data %A0 = 2

Configure Data Call as PSD %A1 = 1

Specify B1 or B2 Channel %A3 = 3 (B1)

%A3 = 5 (B2)

IV Packet Switched Data D-channel

X.25 packet service - D-channel !C3 = 1 (default)

Terminal Endpoint Identifier !D0 = n (n is TEI)

!X Registers specify D-channel packet layer parameters

Default Packet Size - Receive !X2 = 7 (Packet Size = 128 bytes)

!X2 = 8 (Packet size = 256 bytes)

Default Packet Size - Transmit !X3 = 7 (Packet Size = 128 bytes)

!X3 = 8 (Packet Size = 256 bytes)

X.25 Logical Channel Provisions

(M5000TD-1 supports a maximum of 8 LCNs)

Number of PVCs on D-channel !X4 = n (default is 0)

Number of ILCs on D-channel !X5 = n (default is 0)

Number of TLCs on D-channel !X6 = n (default is 8)

Number of OLCs on D-channel !X7 = n (default is 0)

Configure DTE Channel as Data %A0 = 2

Configure Data Call as PSD %A1 = 1

Specify D-channel %A3 = 9

Note 1: The operation of the Packet Assemble/Disassembler (PAD) of the M5000TD-1 is controlled by the %L registers. See the M5000TD-1 User Guide for details.

Note 2: After setting/changing the ! registers of the M5000TD-1, type AT%Z1 for the new settings to take effect.

Note 3: Type ATD<DN> to dial up another terminal.
Type ATA to answer.
Type +++ to get into command mode.
Type ATH to hang up (from command mode).
Type ATO to get back into online mode.

Note 4: The &K setting affects flow control on the M5000TD-1:

Value of 0 turns off flow control.
Value of 3 turns on XON/XOFF.
Value of 4 turns on TTS/CTS hardware flow control.

Note 5: The &Q setting affects asynch/synch mode of the M5000TD-1:

Value of 0 -> asynchronous.
Value of 1 -> asynch during call setup, synch thereafter.

Note 6: Typing at&v displays these settings:

Typing at&4 displays %L settings.
Typing &w0 saves active profile as profile 0.
Typing &y0 loads profile 0 on boot up.

Configuring packet data

This section contains procedures for adding an external packet handler or the integrated internal packet handler (MPH).

Adding an external packet handler

The following procedures, in the presented order, should be followed when configuring an external packet handler. Please note, however, that when changing an existing ISDN BRI packet data configuration, following this order is unnecessary. Be aware, though, of the relationship of one component to another and whether changing one component necessitates changing other components.

- 1 Configure a Link Access Procedure on the D-channel (LAPD) Protocol Group (LD 27)
- 2 Configure packet data implementation:
 - the ISDN PRI loop (LD17)
 - the ISDN customer (LD15)
 - the Tie trunk route for packet data (LD 16)
 - the Tie trunk for packet data (LD14)
- 3 Configure the MISP (LD 27)
- 4 Configure the BRSC (LD 27) (**optional**)
- 5 Configure the SILC or UILC (LD 27)

Note: This step is **optional**. The SILC or UILC can also be configured when configuring the DSL (see next step)
- 6 Configure the DSL (LD 27)
- 7 Configure the TSP on the DSL (LD 27)
- 8 Initialize ISDN BRI terminals (M5317TDX, M5209TDcp)

Configuring an LAPD protocol group for an external packet handler

Add an LAPD protocol group by using LD 27 and specifying its protocol group number. You may also change its LAPD parameters as needed or accept the default values. LAPD is a transmission protocol that specifies the transmission timers, the maximum number of retransmissions, the size of the data frame, and the number of negative acknowledgments allowed before the system issues an alarm.

LD 27 — Adding or changing an LAPD protocol group

Prompt	Response	Comment
REQ	NEW,CHG	Add, change an ISDN protocol group
TYPE	LAPD	LAPD Protocol group
PGPN	0-15,<cr>	Protocol group number The values for this prompt are: 0-15=Adds a specified protocol group <cr>=Stops this prompt from being displayed again
LAPD	YES (NO)	LAPD parameters —The values for this prompt are: YES = Define or modify the LAPD parameters (NO) = Does not prompt the LAPD parameters and assigns the default values shown in () to these parameters.
T200	(2)-40	Retransmission timer specifies the time delay before the system retransmits the information. Delay is in increments of 0.5 seconds.
T203	4-(20)-80	Maximum time between transmission frames Delay is in increments of 0.5 seconds.
N200	1-(3)-8	Maximum number of retransmissions of unsuccessfully transmitted information.
N201	4-(260)	Maximum number of contiguous octets or bytes of information.
K	(1)-32	Maximum number of outstanding negative acknowledgment (NAKs) allowed before alarming the system.
N2X4	0-(10)-20	For 1TR6 connectivity — number of status inquiries when the remote station is in peer busy state.
PGPN	<cr>	Press <cr> to prevent repetition of all the parameters starting with LAPD.

Removing an LAPD protocol group configured for an external packet handler

You can remove an LAPD protocol group as long as it is not assigned to a DSL. If a protocol group is assigned to a DSL, delete the DSL before removing the protocol group.

LD 27 - Removing an LAPD protocol group

Prompt	Response	Comment
REQ	OUT	Remove an ISDN BRI component
TYPE	LAPD	Protocol group
PGPN	0-15, ALL,<cr>	Protocol group number 0-15 = Removes a specified protocol group from 0-15 ALL = Removes all protocol groups <cr> = No change the protocol group is not removed. A protocol group cannot be removed if it is assigned to a DSL.
...	...	

Printing an LAPD protocol group configured for an external packet handler

Configuration information for a specific LAPD protocol group or for all protocol groups can be printed.

LD 27 — Printing an LAPD protocol group

Prompt	Response	Comment
REQ	PRT	Prints an ISDN BRI component
TYPE	LAPD	Protocol group
PGPN	0-15, <cr>	Protocol group number 0-15 = Prints a specified protocol group from 0-15 <cr> = Prints all protocol groups and the number of DSLs in each group
USER	YES (NO)	YES = Print the LAPD group(s) selected in the PGPN prompt and the DSLs that are using it (them). NO = Do not print the LAPD user information.
REQ		

Configuring ISDN PRI trunk assignments for an external packet handler

Before configuring the MISP, DSL, and TSP with LD 27, an ISDN PRI loop, route, the following must be specified to provide a communication link with the packet handler.

- the ISDN PRI loop (LD17)
- the ISDN customer (LD15)
- the Tie trunk route for packet data (LD 16)
- the Tie trunk for packet data (LD14)

LD17 - Adding an ISDN PRI loop for an external packet handler

Prompt	Response	Comment
REQ	NEW/CHG	NEW for new customer or CHG for an existing customer
TYPE	CFN	Configuration data block
...	...	
CEQU	YES	Change common equipment options
...	...	
DLOP	lll dd ff	PRI loop parameters lll (0-159) = Network loop number dd (0-24) = number of voice or data calls ff (ESF) = frame format: D2, D3, D4, Frame format must match the far end.
MODE	PRI	Primary Rate Interface mode
...	...	
PRI	0-159	PRI loop number

LD15 - Defining an ISDN customer for an external packet handler

Prompt	Response	Comment
REQ	NEW/CHG	NEW for new customer or CHG for existing customer
TYPE	CDB NET_DATA	Customer data block Networking Data (Release 21 gate opener).
CUST	0-99	Customer number
...	...	
ISDN	YES	YES = customer is equipped with ISDN (prompted only with D-channel defined in LD17)
...	...	

LD 16 - Configuring a tie trunk route for packet data for an external packet handler

Prompt	Response	Comment
REQ	NEW	Add ISDN BRI protocol group settings
TYPE	RDB	Route data block
CUST	0-99	Customer number
ROUT	0-511	Route number
TKTP	TIE	Trunk route type
...	...	
DTRK	YES	Digital trunk route
BRIP	YES	Packet handler route Note: Prompted only if DTRK = YES.
ACOD	xxxxxx	Trunk route access code
TARG	<cr>	Access restriction group number
CNTL	<cr>	Changes to control timers
...	...	

LD14 - Configuring the tie trunk for packet data for an external packet handler

Prompt	Response	Comment
REQ	NEW	Enter new trunk data
TYPE	TIE	Trunk type
TN	III ch	Loop, channel number
CUST	0-99	Customer number
NCOS	<cr>	Network class of service group
RTMB	xx..xx	Route and route member
MNDN	<cr>	Manual directory number
TGAR	<cr>	Trunk group access restriction
CLS	<cr>	Class of service
...	...	

Configuring a MISP for an external packet handler

To add or change a MISP configured for an external packet handler, specify its even loop number. Also, specify the ISDN PRI loop and channel numbers that will be used to transmit packet data to and from the packet handler.

The MISP must be enabled by using the **ENLL I** command in LD 32.

LD 27 — Adding or changing a MISP configured for an external packet handler

Prompt	Response	Comment
REQ	NEW, CHG	Add or change an ISDN BRI MISP Note: The defaults apply to adding, not changing, a MISP.
TYPE	MISP	MISP.
LOOP	0-158	MISP loop number; must be an even number, with the next odd loop number unequipped.
APPL	MPH	Application type for the MISP (MPH = packet handler).
DPSD	YES, (NO)	YES = D-channel Packet Switched Data NO = No D-channel Packet Switched Data. Enter YES for packet switched data.
MPHC	(YES), NO	YES = DPSD are routed to a MPH NO = DPSD are routed to an external packet handler or PSDN. Enter NO to choose an external packet handler.
TN	Ill ch	Ill (0-159) = PRI loop number ch (1-23) = The PRI channel on which the B _D dedicated connection from the MISP is terminated.
REQ		

Removing a MISP configured for an external packet handler

Before removing a MISP:

- Remove all BRSCs associated with it.
- Remove all DSLs connected to SILCs and UILCs associated with it.
- Disable the MISP loop with the DISL 1 command in LD 32.
- Remove the PVC or network interface connections.

Remove a MISP by specifying its loop number.

LD 27 — Removing a MISP configured for an external packet handler

Prompt	Response	Comment
REQ	OUT	Remove an ISDN BRI component
TYPE	MISP	MISP
LOOP	0-158	Loop number Must be an even number. The MISP must be disabled before removing it. All SILC and/or UILC DSLs associated with the MISP must be removed before removing the MISP.
REQ		

Printing a MISP configured for an external packet handler

Print the configuration information for a MISP configured for an external packet handler by specifying its network loop number. If the MISP network loop number is not known, use LD 22 to print the system configuration.

BRSC TNs which are associated with a MISP are also listed when data of this MISP are printed.

LD 22 — Printing a MISP configured for an external packet handler

Prompt	Response	Comment
REQ	PRT	Print an ISDN BRI component
TYPE	MISP	MISP BRSC TNs associated with a MISP are also listed when data of the MISP are printed.
LOOP	0-158	MISP loop number Must be an even number.
REQ		

Adding or changing a BRSC for an external packet handler

To add or change a BRSC for an external packet handler, specify its superloop number, shelf number, and card number. Specify the PRI loop and channel numbers for routing of the DPSD to an external packet handler.

When the BRSC has been added or changed, enable the MISP, enable the BRSC with the **ENLCIII s cc** command in LD 32, and enable all ISDN BRI line cards in the IPE module.

Note: Refer to the section “Adding/removing BRSCs with a configured ISDN BRI system”, which soon follows, for possible scenarios for adding or removing BRSCs with a Meridian 1 system configured for ISDN BRI.

LD 27 — Adding or changing a BRSC for an external packet handler

Prompt	Response	Comment
REQ	NEW, CHG	Add or change a SILC or UILC line card
TYPE	BRSC	SILC or UILC line card
BRSC	III s cc	Card location The values for this prompt are: III (loop)=0-156 (must be an even number divisible by 4) s (shelf)=0-1 cc (card)=0-15
MISP	0-158	MISP loop number (must be an even number that has already been configured)
DPSD	YES, (NO)	Enter YES for D-channel Packet Switched Data
MPHC	(YES) NO	Route D-channel packet switched data to the Meridian Packet Handler. Enter NO.
PRI CH	III nn	III (1- 159) = PRI loop number that is connected to the external packet handler nn (1-23) = PRI channel number on which the dedicated connection from the BRSC is terminated Enter III <space> nn on same line PRI CH appears only if DPSD = YES.

Removing a BRSC configured for an external packet handler

Remove a BRSC which has been configured for an external packet handler by specifying its loop number. Before removing the BRSC, disable all line cards associated with it, and disable the BRSC loop with the **DISC III s cc** command in LD 32 before removing the BRSC.

Note: Refer to the section “Adding/removing BRSCs with a configured ISDN BRI system”, which soon follows, for possible scenarios for adding or removing BRSCs with a Meridian 1 system configured for ISDN BRI.

LD 27 — Removing a BRSC configured for an external packet handler

Prompt	Response	Comment
REQ	OUT	Remove an ISDN BRI component
TYPE	BRSC	Remove the BRSC data
BRSC	III s cc	Card location The values for this prompt are: III (loop)=0-156 (must be an even number divisible by 4) s (shelf)=0-1 cc (card)=0-15
REQ		

Adding/removing BRSCs with a ISDN BRI system

To add or remove BRSCs with a Meridian 1 system configured for ISDN BRI, follow these steps:

- Disable the MISP when the first BRSC is configured.
- If two or more line cards which are served by the MISP are in the IPE Module where the first BRSC is added, disable the MISP once only.
- Disable the MISP when changing from a configuration with three line cards and two BRSC to a configuration with two line cards and up to eight BRSCs.
- Conversely, disable the MISP when changing from a configuration with two line cards and up to eight BRSCs to a configuration with three line cards and one BRSC.

The following table lists the possible scenarios for adding or removing BRSCs with a Meridian 1 system configured for ISDN BRI.

Adding/removing BRSCs with a configured ISDN BRI system

Initial configuration

Configured line cards installed	BRSCs	Action	Same IPE Module?
0	0	Add BRSC 1	NA
0	1	Add BRSC 2-8	NA
1	0	Add BRSC 1	Yes/No
1	1	Add BRSC 2-8	NA
2	0	Add BRSC 1	Yes/No
2	1	Add BRSC 2-8	Yes/No
3	0	Add BRSC 1	Yes/No
3	0	Add BRSC 1	No
2	1	Add BRSC 2	Yes
0-2	2	Add BRSC 3-8	Yes/No
4	0	Add BRSC 1	Yes
3	1	Add BRSC 2	Yes
0-2	3-8	Add BRSC 3-8	Yes/No
2	2-8	Disable BRSC 1	N/A
2	1	Add line card 3	N/A
3	1	Delete BRSC	N/A
3	0	Add line card 4	N/A
2	2-8	Delete BRSCs	N/A
2	0	Add line card 3	N/A
3	0	Add line card 4	N/A

Printing a BRSC configured for an external packet handler

Print the configuration information for a BRSC which has been configured for an external packet handler by specifying its network loop number. If the BRSC network loop number is not known, use LD 22 to print the system configuration.

To print all BRSCs associated with a MISP, enter <cr> at the BRSC and MISP prompts.

LD 22 — Printing a BRSC configured for an external packet handler

Prompt	Response	Comment
REQ	PRT	Prints an ISDN BRI component
TYPE	BRSC	Print BRSC data Note: BRSC TNs associated with the MISP are also printed.
BRSC	lll s cc	Card location The values for this prompt are: lll (loop)=0-156 (must be an even number divisible by 4) s (shelf)=0-1 cc (card)=0-15
MISP	0-158 <cr>	MISP loop number (must be an even number that has already been configured). If <cr> is entered, all BRSCs configured in the system are printed; otherwise, all BRSCs associated with the MISP loop are printed.
REQ		

Configuring a SILC or UILC for an external packet handler

Add or change a new SILC or UILC to Meridian 1 by specifying its location, card type, and the MISP network loop that this card uses to transmit and receive signaling and D-channel packet data.

Note: This step may be skipped and the card type specified when configuring the DSL in the procedure “Adding a DSL for an external packet handler.”

The following procedure is used when configuring the SILC or UILC cards **without** configuring their DSLs.

LD 27 — Adding or changing a SILC or UILC for an external packet handler

Prompt	Response	Comment
REQ	NEW, CHG	Add or change a SILC or UILC line card
TYPE	CARD	SILC or UILC line card
TN	Ill s cc	Card location The values for this prompt are: Ill (loop)=0-156 (must be an even number divisible by 4) s (shelf)=0-1 cc (card)=0-15
MISP	0-158	Loop number (must be an even number that has already been configured) If there is a BRSC configured in the IPE module, the MISP prompt is skipped and the MISP Ill and the BRSC Ill s cc is displayed.
CTYP	SILC,UILC	Card type to be added or changed. Remove any DSLs configured for this line card before changing the card type.
REQ		

Removing a SILC or UILC configured for an external packet handler

Remove a SILC or UILC by specifying its card location. Before removing the SILC or UILC, all configured DSLs must first be removed from the card by using the procedure “Removing a DSL configured for an external packet handler”. When the last DSL is removed, the card is automatically deleted.

When removing the card, the database information is also deleted from the data block. Use LD20 to list cards that have been removed.

LD 27 — Removing a SILC or UILC configured for an external packet handler

Prompt	Response	Comment
REQ	OUT	Remove an ISDN BRI component
TYPE	CARD	ISDN BRI line card
TN	III s cc	Card location of the SILC or UILC to be removed. III (superloop) = 0-156 (must be a number divisible by 4) s (shelf) = 0-1 cc (card) = 0-15 Remove any DSLs that are configured for this card before removing the card.
...	...	

Printing a SILC or UILC configured for an external packet handler

To print the configuration information for a SILC or UILC, specify its card location.

LD 27 — Printing a SILC or UILC configured for an external packet handler

Prompt	Response	Comment
REQ	PRT	Print an ISDN BRI component
TYPE	CARD	ISDN BRI line card
TN	III s cc	Card location III (superloop) = 0-156 (must be a number divisible by 4) s (shelf) = 0-1 cc (card) = 0-15
...	...	

Configuring a DSL for an external packet handler

To add or change a DSL, specify its port location and its DSL characteristics.
DSL location specifies a SILC/UILC port connected to a DSL.

LD 27 - Adding or changing a DSL for an external packet handler (Part 1 of 5)

Prompt	Response	Comment
REQ	NEW,CHG	Add or change a DSL Note: The defaults apply to adding, not changing, a DSL.
TYPE	DSL	DSL
DSL	lll s cc dsl#	DSL location. lll (superloop) = 0-156 (must be zero or a number divisible by 4) s (shelf) = 0-1 cc (card) = 0-15 dsl# (DSL location) = 0-7 Assign 31 DSLs for each MISP if DCH or BDCH were specified at the PH prompt in "MISP configuration procedures."
DES	x...x	Designator to assign to a DSL (ex. BUILD2) x...x = 1 to 6 alphanumeric DSL designator
CUST	0-99	Customer number
CTYP	SILC, UILC	Card type. This prompt is displayed only if the SILC or UILC has not been previously configured.
OPT	(BRIL) <cr>	Defaults to ISDN BRI line application (BRIL). Enter <cr>
MISP	0-158	Loop number (must be an even number of a MISP that has already been configured). This prompt is displayed only if the MISP has not been assigned to the specified SILC or UILC.
MISP	0-158	Loop number (must be an even number of a MISP that has already been configured). This prompt is displayed only if the MISP has not been assigned to the specified SILC or UILC.

LD 27 - Adding or changing a DSL for an external packet handler (Part 2 of 5)

Prompt	Response	Comment
MODE	NTAS, NTFS	Network terminal line sampling mode (this prompt is displayed only if you specified the card type as SILC). The values for this prompt are: NTAS=Adaptive sampling Extended passive bus, Branched passive bus, Point-to-point bus, U interface DSL. NTFS=Fixed sampling Short passive bus.
B1CT	(VCE) (DTA) PMD XPMD	B-channel 1 call type Enter PMD. PMD = B-channel packet data with dedicated connection from DSL to a PRI channel using external packet handler. For B1CT = PMD, B-channel packet data must have been specified at the PH prompt in LD 27. PMD cannot be combined with any other options. Do not select <cr> which defaults to VCE (circuit switched voice) and DTA (circuit switched data) which may not run concurrently with packet data. XPMD = Delete PMD call types.
TN	Ill ch	Ill (0-159) = PRI2 loop number which is connected to the external packet handler or the Packet Switched Data Network. ch (1-30) = the PRI2 channel on which the B_D-channel dedicated connection from the DSL B-channel is terminated. TN prompt is given only if call type = PMD. The PRI channel must be configured in LD17 and dedicated only to the connection of an external packet handler.

LD 27 - Adding or changing a DSL for an external packet handler (Part 3 of 5)

Prompt	Response	Comment
B2CT	(VCE) (DTA) PMD XPMD	B-channel 2 call type Enter PMD. PMD = B-channel packet data with dedicated connection from DSL to a PRI channel. (B-channel packet data must have been specified at the PH prompt in LD 27). PMD cannot be combined with any other options. Do not select <cr> which defaults to VCE (circuit switched voice) and DTA (circuit switched data) which may not run concurrently with packet data. For B2CT = PMD, B-channel packet data must have been specified at the PH prompt in LD 27. XPMD = Delete PMD call types
TN	Ill ch	Ill (0-159) = PRI2 loop number which is connected to the external packet handler or the PSDN. ch (1-30) = the PRI channel on which the B_D-channel dedicated connection from the DSL B-channel is terminated. TN prompt is given only if call type is set to PMD. The PRI channel must be configured in LD17 and dedicated only to the connection of an external packet handler..
LDN	0-3, (NO)	Departmental listed directory number 0-3 = Departmental listed DN specified in LD15 NO = No departmental listed DN associated with the DSL
XLST	(0)-254	Pretranslation group (if configured in customer data block).
MTEI	1-(8)-20	Maximum number of Terminal Endpoint Identifiers, both static and dynamic combined assigned to the logical terminals on this DSL.

LD 27 - Adding or changing a DSL for an external packet handler (Part 4 of 5)

Prompt	Response	Comment
LTEI	n1 n2 mm, <cr>, Xmm	n1 = Logical Terminal Identifier (LTID) n2 = static Terminal Endpoint Identifier (TEI) mm (0-63) = MTEI, the maximum number of LTID and TEI n1 = 0 -15 and n2 = 0-1023 0 0 is invalid. 15 1023 is invalid. Logical Terminal Identifier (LTID) and static Terminal Endpoint Identifier (TEI) pair for D-channel packet data transmission. MTEI = the maximum number of these pairs. LTID = Logical Terminal Group (LTG) and Logical Terminal Number (LTN). LTG and LTN are entered as part of the DPN configuration. The TE I must match the one in the terminal. By entering all three here, the MISP is able to route data from the terminal to the DPN packet switch. Xmm = Deletes the LTID and TEI for the specified TEI. mm = 0-63 (must be unused static TEI). <cr> = Stops this prompt from being displayed again and skips to the next prompt LTEI is displayed only if:
MCAL	2-(16)-32	Maximum number of calls on the DSL at one time. This includes calls waiting and on hold. Warning is received if less than 8 is specified.
MTSP	1-(8)-16	Maximum number of TSPs allowed for a DSL
PGPN	0-15	Protocol group number The protocol group should be previously added as described in "Configuring a protocol group for an external packet handler."
PRID	1- 6	Defines the protocol to be used on the DSL Selection of the protocol ID is terminal dependent. The values for this prompt are: 1=ANSI 2=ETSI 3=DMS 4=NET64 5=NUMERIS 6=NI-1 Note: A response of 6 allows the ISDN BRI Conference feature to be configured in the TSP of the DSL.
FDN	n...n	Flexible CFNA directory number. Enter a 1-13 digit DN.

LD 27 - Adding or changing a DSL for an external packet handler (Part 5 of 5)

Prompt	Response	Comment
EFD	n...n	Flexible external call CFNA DN. Enter a 1-13 digit DN.
HUNT	n...n	Hunt directory number. Enter a 1-13 digit DN.
EHT	n...n	Hunt external call directory number. Enter a 1-13 digit DN.
TGAR	(0)-31	Trunk group access restriction
NCOS	(0)-99	Network class of service
CLS		Class of service access restrictions.
		More than one class of service can be entered by separating each entry with a space. Default features shown in parenthesis are selected by pressing <cr>.
	(ICDD), ICDA	Internal Call Detail Recording (Denied) Allowed
	(MRD), MRA	Message Restriction (Denied) Allowed
	(UDI), RDI	(Unrestricted) Restricted DID
	(UNR)	(Unrestricted)
	CTD	Conditionally Toll Denied
	CUN	Conditionally Unrestricted
	FR1	Fully Restricted class 1
	FR2	Fully Restricted class 2
	FRE	Fully Restricted
	SRE	Semi-Restricted
	TLD	Toll Denied
	ICDA	Internal Call Detail Recording allowed
	(ICDD)	(Internal Call Detail Recording denied)
	<cr>	Enter <cr> to select the defaults.
		More than one class of service may be selected by separating each entry with a space.
REQ		

Removing a DSL configured for an external packet handler

Remove a DSL by specifying its location. To remove a DSL, first remove all the TSPs assigned to this DSL. When the last configured DSL on a card is removed, the card is removed automatically.

LD 27 — Removing a DSL configured for an external packet handler

Prompt	Response	Comment
REQ	OUT	Remove an ISDN BRI component
TYPE	DSL	DSL
DSL	lll s cc dsl#	DSL location lll (superloop) = 0-156 (must be a number divisible by 4) s (shelf) = 0-1 cc (card) = 0-15 dsl# (DSL location) = 0-7
...	...	

Printing a DSL configured for an external packet handler

Print the configuration information for a single DSL by specifying its location.

LD 27 — Printing a DSL configured for an external packet handler

Prompt	Response	Comment
REQ	PRT	Print an ISDN BRI component
TYPE	DSL	DSL
DSL	lll s cc dsl#, lll s cc, lll s, lll	DSL information lll s cc dsl# = Prints information for the specified dsl# lll s cc = Prints information for DSLs on the specified card lll s = Prints information for DSLs in the specified shelf lll = Prints information for DSLs on the specified loop
DATE	(<cr>) x y z	Print data and display the last active date, where x = day (1-31), y = month (Jan-Dec), and z = year (1979-9999) specifies the starting date of the data to be displayed or printed.
PAGE	YES, (NO)	YES = prints one DSL per page NO = prints without paging
DES	x...x, <cr>	1-digit to 6-digit alphanumeric DSL designator No designator for DSLs
NACT	YES, (NO)	Activity date is updated to current date.
...	...	

Configuring a TSP for an external packet handler

To add or change a TSP to a DSL, specify the DSL location, its transmission characteristics, and the class of service for terminals connected to the DSL. If the default value is desired, press the ENTER key.

LD 27 - Adding or changing a TSP for an external packet handler (Part 1 of 4)

Prompt	Response	Comment
REQ	NEW,CHG	Add or change a TSP
TYPE	TSP	Assign TSP to a DSL
DSL	lll s cc dsl#	DSL location lll (superloop) = 0-156 (must be a number divisible by 4) s (shelf) = 0-1 cc (card) = 0-15 dsl# (DSL location) = 0-7 The DSL must have been configured using the "DSL configuration procedures."
USID	0-15	User service identifier Set USID = 0 to configure a default TSP for non-initializing terminals. Set USID = 1-15 for initializing terminals, for example, the M5317TDX. The total number of TSPs defined for a DSL cannot exceed the maximum number of TSPs allowed for a DSL as specified by the MTSP.
MPHC	(YES) NO	Route D-channel packet switched data to the Meridian Packet Handler. Enter NO.
SPID	aaa...a <cr> Xaaa...a	Service profile ID aaa...a = any combination of 1-20 alphanumeric characters. <cr> = Stops this prompt from being displayed again. A maximum of 8 valid SPIDs per TSP are allowed. Xaaa...a removes the specified SPID. This prompt appears only if USID = 1-15. It repeats until <cr> is entered, but only up to 8 SPIDs may be entered. This SPID must be entered in the initializing terminal to associate the terminal with a USID.

LD 27 - Adding or changing a TSP for an external packet handler (Part 2 of 4)

Prompt	Response	Comment
FEATID	aaa mmm nnn <cr> Xaaa	ID associated with feature aaa, as follows: A03 = 3-party Conference A06 = 6-party conference mmm = Feature Activation ID(1-127) nnn = Feature Indication ID (1-127) (optional; if not entered, the value entered for mmm is assumed) <cr> = Skip the FEATID entry Xaaa = Delete the feature. Feature Activation ID and Feature Indication ID are feature key number assignments configured at the terminal level. Recommended terminal assignments are: - for the M5317TDX: A06 15 - for the M5209TDcp: A06 9
DN	xxxx (0)-N	xxxx = DN to be associated with the TSP. (0)-N = CLID entry, with N = CLID SIZE-1 (SIZE defined in LD 15). The DN cannot be shared by a non ISDN BRI terminal. This prompt is repeated until <cr> is pressed. At least one DN and a maximum of 8 DNs can be assigned to a DSL. The directory number can be associated with multiple TSP
CT	VCE DTA	Directory number call type VCE=Circuit switched voice DTA=Circuit switched data One or more call types can be entered by separating each entry with a space. The call types entered must have been specified for the B1CT and B2CT prompts in “DSL configuration procedures.”
MCAL	1-(4)-8	Maximum number of calls per DN at one time Defines the maximum number of calls allowed for a directory number, which includes the total number of active calls, calls waiting, and calls on hold.
CLIP	(YES), NO	Calling line identification presentation service YES = displays of calling party DN on incoming calls NO = does not display of calling party DN on incoming calls

LD 27 - Adding or changing a TSP for an external packet handler (Part 3 of 4)

Prompt	Response	Comment
PRES	(YES), NO	Allows display of calling line identification to far end on outgoing calls. YES = present this DN to the called party on outgoing calls NO = do not present this DN to the called party on outgoing calls
COLP	(NO) YES	Connected Number Information Elements (IEs) is (not) passed from the Meridian 1 to the Terminal Adapter (S ₀).
TRANS	(NO) YES	CLID and Connected Number Information Element (IE) are (not) passed from the Meridian 1 to the Terminal Adapter (S ₀), if presentation is restricted.
FEAT	HTA/(HTD) FNA/(FND) SFA/(SFD) CFTA/(CFTD) MWA/(MWD) FBA/(FBD) HBTA/(HBTd) DNO1/DNO2/(DNO3) DNDN/(DNDY)	Class of service features HTA = Hunt allowed (always assign if terminal has CWT capability) HTD = Hunt denied FNA = Call forward no answer allowed FND = Call forward no answer denied SFA = Second level call forward no answer allowed SFD = Second level call forward no answer denied CFTA = Call forward by call type allowed CFTD = Call forward by call type denied MWA = Message waiting allowed MWD = Message waiting denied FBA = Call forward busy allowed FBD = Call forward busy denied HBTA = Hunting by call type allowed HBTd = Hunting by call type denied DNO1/DNO2/(DNO3) = QSIG Call Diversion Notification for calling party where: DNO1 = no notification DNO2 = notification without forwarded-to (diverted) party's number and name (DNO3) = notification with forwarded-to (diverted) party's number and name when available (default). DNDN/(DNDY) = QSIG Call Diversion Notification for forwarded-to (diverted) party where: DNDN = no notification of called party's number and name notification (DNDY) = notification with called party's number and name when available (default).

LD 27 - Adding or changing a TSP for an external packet handler (Part 4 of 4)

Prompt	Response	Comment
		More than one class of service can be entered by separating each entry with a space. Press <cr> to select multiple default features shown in parenthesis.
DFDN	n...n	Default directory number Enter a 1-digit to 7-digit DN. This DN must be defined at the preceding DN prompt A DN can be associated with multiple TSPs. Only one default DN can be defined for a TSP. This DN is sent in the outgoing setup if the terminal does not send a calling line identification number with the outgoing call.
REQ		

Removing a TSP configured for an external packet handler

Before removing a TSP configured for an external packet handler, disable the B-channel.

To remove a single TSP from a DSL, specify the DSL location and the user service identifier. Remove all TSPs from a DSL by entering **ALL** at the USID prompt.

Removal of the TSP disconnects all calls associated with the TSP's D-channel packet switched data and circuit switched voice data.

LD 27 — Removing a TSP configured for an external packet handler

Prompt	Response	Comment
REQ	OUT	Remove an ISDN BRI component
TYPE	TSP	TSP Note: Removal of the TSP disconnects all calls associated with the TSP's D-channel packet switched data and circuit switched voice data.
DSL	lll s cc dsl#	DSL location lll (0-156) = superloop (must be an even number divisible by 4) (0 = invalid) s (0-1) = shelf cc (0-15) = card dsl# (0-7) = DSL location
USID	0-15, ALL	User service identifier 0-15 = Removes a specified TSP from 0 to 15 ALL = Removes all TSPs for the specified DSL
REQ		

Printing a TSP configured for an external packet handler

Configuration information can be printed for a TSP based on characteristics such as user service identifier, service profile ID, and directory number.

LD 27 — Printing a TSP configured for an external packet handler

Prompt	Response	Comment
REQ	PRT	Print configuration data
TYPE	TSP	Print TSP data
DSL	lll s cc dsl#	DSL location lll (0-156) = superloop (even number divisible by 4, 0 = invalid) s (0-1) = shelf cc (0-15) = card dsl# (0-7) = DSL location The DSL must be already configured.
OPT	USID SPID SUID DN DNS NTN <cr>	USID = Prints the TSP with the specified user service ID SPID = Prints the TSPs with the specified service profile ID SUID = Prints the specified service profile ID and the user service id map DN = Prints the TSP(s) that contains the specified DN DNS = Prints all the directory numbers defined for the DSL NTN = Prints the TSPs that contain the specified NTN. <cr> = Prints all the TSPs defined for the DSL USID appears only when USID is the response.
USID	0-15	User service identifier
SPID	aa..aa	Service profile ID Enter a 1-20 digit alphanumeric service profile ID.
DN	nn..nn	Directory number associated with the TSP Enter a 1-digit to 7-digit directory number.
NTN	nn..nn	NTN value (1-10 digits)
REQ		

Initializing ISDN BRI terminals for an external packet handler

After configuring the TSPs, initialize the ISDN BRI terminals by entering the required parameter values at the terminal key pad or keyboard. The user manual shipped with each terminal provides instructions for initializing the terminal for a specific application.

Programming the M5317TDX for an external packet handler

I Getting into the Install Menu

- 1 Disconnect the line cord from the telephone for a few seconds, then reconnect.
- 2 Press and hold the Release key and the Hold key simultaneously until the display shows:

Select **ROM** to execute
BOOTROM MAINROM

- 3 Press the MAINROM softkey. After a few seconds, the display shows:
Select configuration menu
Install Network Lang Exit more...

II Configuration for packet data

- 1 From the above display, press Network. The display shows:
SPID TEI SPM X.25DN more...

- 2 Press the TEI softkey. The display shows:

Phone Data X25 ok

Note: MPH requires static TEI assignment.

- 3 Press the X.25 softkey.
- 4 Enter your 2 digit TEI and press OK.
- 5 Press the X.25DN softkey.
- 6 Press Clear to clear out any existing data.
- 7 Enter your X.25 address and press OK.
- 8 Press the more... softkey.
- 9 Press the Exit softkey.
- 10 Press the Exit softkey again.

III How to use your M5317TDX for packet data

- 1** You will be in the Main Menu after completing step 10 above. From the Main Menu, press the Setup softkey.
- 2** Press the Data softkey.
- 3** Select your Baud Rate, Character Size and Parity.
Note: You may use the defaults of 9600, 8 bits, no parity.
- 4** After setting these values, press the more... softkey.
- 5** Make sure the settings for DTR, CD HI, and RTS HI are all set to YES. Press the more... softkey.
- 6** Press the Data softkey until the display shows X25.
- 7** Configure the packet and window sizes. The sizes should be selected to match the service data for the terminal.

Press the Pkt/Win softkey until the display shows No Neg. You may select No Neg if you wish to choose the default packet/window size of 128/2 (which is the MPH's default setting). This setting does not result in flow control parameter negotiation.

To select any other setting (such as 256/2), press the Pkt/Win softkey until the display shows the desired setting. This setting, and any other setting other than the default, results in the values being negotiated across the packet data interface, using flow control parameter negotiation.

For more details, refer to the M5317TDX Installation and maintenance guide.

Programming the M5209TDcp for packet data

- 1** Press the Hold and Release keys simultaneously until the Main Menu appears on the set display.

MAIN MENU
CONFIG
- 2** Press #.

ENTER PASSWORD
- 3** Dial ISDN and press # to enter configuration mode.

CONFIGURATION MENU
TEI

- 4 Press #.
ENTER TEI VOICE
AUTO
- 5 Press #.
ENTER TEI PSD
XXX
- 6 Enter your TEI and press #.
Note: MPH requires static TEI assignment.
- 7 Press #.
CONFIGURATION MENU
SPID
- 8 Press * until EXIT appears on the display. Press #.
MAIN MENU
RING
- 9 Press * until DATA appears on the display. Press #.
DATA MENU
MODE
Note: The data mode may also be selected by using a Hayes command across the serial interface of the M5209cp.
- 10 Press #.
SELECT DATA MODE
PACKET
- 11 Press #.
DATA MENU
PARAMS
- 12 Press * until the profile you want to use appears on the display.
DATA MENU
SELECT 0
SELECT 0 selects PROF 90 profile.
SELECT 1 selects PROF 91 profile.
DEFAULT selects the factory default profile.
- 13 Press # to select the desired profile.

DATA MENU
EXIT

- 14** Press * until SAVE appears on the display.

DATA MENU
SAVE

- 15** Press # to save your changes.

- 16** Press #. Press # again.

Adding an MPH

The following procedures, in the presented order, should be followed when configuring an MPH to a Meridian 1 with an existing ISDN BRI configuration. Please note, however, that when changing an existing ISDN BRI packet data configuration, following this order is unnecessary. Be aware, though, of the relationship of one component to another and whether changing one component necessitates changing other components.

- 1 Configure the Link Access Procedure on D-channel (LAPD) protocol group (LD 27).
- 2 Configure the Link Access Procedure - Balanced (LAPB) protocol group (LD 27).
- 3 Configure the X.25 packet protocol group (LD 27).
- 4 Configure the DNA table associated with the MPH network interface (LD 27).
- 5 Configure the ISDN Primary Rate Interface (PRI) for packet data as follows:
 - the ISDN PRI loop (LD17)
 - the ISDN customer (LD15)
 - the tie trunk route for packet data (LD 16)
 - the tie trunk for packet data (LD14)

OR,

- 6 Configure the Meridian Communication Unit (MCU) for packet data as follows:
 - the tie trunk route for packet data (LD 16)
 - the tie trunk for packet data (LD14)
 - the Meridian Communication Unit (MCU) (LD11)
- 7 Configure the MISP for MPH (LD 27)
- 8 Configure the BRSC for MPH (LD 27) (**optional**)
- 9 Configure the SILC/UILC for MPH (**optional** - The SILC or UILC can also be configured when configuring the DSL - see next step)

- 10** Configure the DSL for MPH (LD 27)
- 11** Configure the TSP for MPH (LD 27)
- 12** Configure Permanent Virtual Circuits (PVCs) (LD 27) (**optional**)
- 13** Configure MPH tandem connections (LD14) (**optional**)
- 14** Modify CDR to reflect MPH calls (LD15) (**optional**)
- 15** Initialize the ISDN BRI terminals for MPH (LD 27).

Configuring an LAPD protocol group for an MPH

Add an LAPD protocol group by using LD 27 and specifying its protocol group number. You may also change its LAPD parameters as needed or accept the default values. LAPD is a transmission protocol that specifies the transmission timers, the maximum number of retransmissions, the size of the data frame, and the number of negative acknowledgments allowed before the system issues an alarm.

LD 27 — Adding or changing an LAPD protocol group

Prompt	Response	Comment
REQ	NEW,CHG	Add, change an ISDN protocol group
TYPE	LAPD	LAPD Protocol group
PGPN	0-15,<cr>	Protocol group number The values for this prompt are: 0-15=Adds a specified protocol group <cr>=Stops this prompt from being displayed again
LAPD	YES (NO)	LAPD parameters —The values for this prompt are: YES = Define or modify the LAPD parameters (NO) = Does not prompt the LAPD parameters and assigns the default values shown in () to these parameters.
T200	(2)-40	Retransmission timer specifies the time delay before the system retransmits the information. Delay is in increments of 0.5 seconds.
T203	4-(20)-80	Maximum time between transmission frames Delay is in increments of 0.5 seconds.
N200	1-(3)-8	Maximum number of retransmissions of unsuccessfully transmitted information.
N201	4-(260)	Maximum number of contiguous octets or bytes of information.
K	(1)-32	Maximum number of outstanding negative acknowledgment (NAKs) allowed before alarming the system.
N2X4	0-(10)-20	For 1TR6 connectivity — number of status inquiries when the remote station is in peer busy state.
PGPN	<cr>	Press <cr> to prevent repetition of all the parameters starting with LAPD.

Removing an LAPD protocol group configured for an MPH

You can remove an LAPD protocol group as long as it is not assigned to a DSL. If a protocol group is assigned to a DSL, delete the DSL before removing the protocol group.

LD 27 — Removing an LAPD protocol group

Prompt	Response	Comment
REQ	OUT	Remove an ISDN BRI component
TYPE	LAPD	Protocol group
PGPN	0-15, ALL,<cr>	Protocol group number 0-15 = Removes a specified protocol group from 0-15 ALL = Removes all protocol groups <cr> = No change the protocol group is not removed. A protocol group cannot be removed if it is assigned to a DSL.
...	...	

Printing an LAPD protocol group configured for an MPH

Configuration information for a specific LAPD protocol group or for all protocol groups can be printed.

LD 27 — Printing an LAPD protocol group

Prompt	Response	Comment
REQ	PRT	Prints an ISDN BRI component
TYPE	LAPD	Protocol group
PGPN	0-15, <cr>	Protocol group number 0-15 = Prints a specified protocol group from 0-15 <cr> = Prints all protocol groups and the number of DSLs in each group
USER	YES (NO)	YES = Print the LAPD group(s) selected in the PGPN prompt and the DSLs that are using it (them). NO = Do not print the LAPD user information.
REQ		

Configuring an LAPB protocol group for an MPH

Add or change LAPB parameters for B-channel packet data or accept the default values. A set of timers and protocol values are associated with each group. Sixteen protocol parameter set groups can be defined per system.

These groups are defined for use on the network and the user interface of MPH.

LD 27 — Adding or changing an LAPB protocol group

Prompt	Response	Comment
REQ	NEW, CHG	Add or change configuration data set
TYPE	LAPB	To administer the LAPB protocol group. Package #248 for MPH must be activated.
PGPN	0-15 <cr>	LAPB protocol set group number. Enter <cr> for none. PGPN prompts for another protocol group until <cr> is entered.
LAPB	(NO), YES	NO = No change for the LAPB parameters YES = Change the LAPB parameters. Subsequent prompts are given only if LAPB = YES. If REQ = NEW and LAPB = NO, the default values for the timers which follow are assigned.
T1	2-(6)-130	Response timer (in units of 0.5 seconds). Default is 3 seconds.
T2	1-(4)-129	Maximum frames delay (in units of 0.5 seconds). Default is 2 seconds. Note: T2 must be less than T1.
T3	0,3-(12)-131	Idle timer (in units of 0.5 seconds). Default is 2 seconds. Note: If T3 is not 0, then T3 must be greater than T1.
N1	23-(135)-263	Maximum I-frame size (octets).
N2	1-(10)-15	Maximum number of retries.
K	1-(7)	Window size.
REQ	...	...

Removing an LAPB protocol group configured for an MPH

Note: Do not remove an LAPB protocol group if it is assigned to an MPH or a TSP.

LD 27 — Removing an LAPB protocol group

Prompt	Response	Comment
REQ	OUT	Remove an existing data set.
TYPE	LAPB	To remove an LAPB protocol group.
PGPN	0-15 ALL <cr>	LAPB protocol set group number to be removed. Enter ALL to remove all LAPB protocol groups that are not used. Enter <cr> to remove none. The LAPB protocol group to be deleted must not be referenced by an MPH network interface or a TSP.
...	...	

Printing an LAPB protocol group for an MPH

You may print all or some of the LAPB protocol groups, by specifying the group number(s).

LD 27 — Printing an LAPB protocol group

Prompt	Response	Comment
REQ	PRT	Print the configuration.
TYPE	LAPB	To print an LAPB protocol group set data.
PGPN	0-15 <cr>	LAPB protocol set group number to be printed. Enter <cr> to print all defined LAPB groups, in ascending order.
USER	YES, (NO)	YES = Print the LAPB group(s) selected in the PGPN prompt and the TSPs for the MPH network interfaces that are using the group(s). NO = Do not print the LAPB group user information.
...	...	

Configuring an X.25 protocol group for an MPH

The X.25 protocol set group allows for the grouping of sets of timers and protocol values for X.25 packet protocols. Sixteen protocol parameter set groups may be defined per system.

LD 27 — Adding or changing an X.25 protocol group

Prompt	Response	Comment
REQ	NEW, CHG	Add or change configuration data set. Note: If an X.25 group is changed, all of the active calls associated with the TSPs and MPH network interfaces using this group are dropped.
TYPE	X25P	To administer the X.25 protocol group. Package #248 for MPH must be activated.
PGPN	0-15 <cr>	X.25 protocol set group number. Enter <cr> for none. PGPN prompts for another protocol group until <cr> is entered.
X.25P	(NO), YES	NO = No change for the X.25 parameters YES = Change the X.25 parameters. Subsequent prompts are given only if X.25 = YES. If REQ = NEW and X.25 = NO, the default values for the timers which follow are assigned.
T10/T20	15-(180)-930	Restart request timer (in seconds).
T11/T21	15-(180)-930	Call request timer (in seconds).
T12/T22	15-(180)-930	Reset request timer (in seconds).
T13/T23	0,15-(180)-930	Clear request timer (in seconds). If T13/T23 = 0, it is turned off.
PSIZ	16, 32, 64, (128), 256	Default transmit packet size (in octets).
WSIZ	1-(2)-7	Default transmit window size (in octets).
REQ		

Removing an X.25 protocol group

Note: Do not remove an X.25 protocol group if it is assigned to an MPH or a TSP.

LD 27 — Removing an X.25 protocol group

Prompt	Response	Comment
REQ	OUT	Remove an existing data set.
TYPE	LAPB	To remove an X.25 protocol group. Do not remove an X.25 protocol group if it is assigned to an MPH or a TSP
PGPN	0-15 ALL <cr>	X.25 protocol set group number to be removed. Enter ALL to remove all X.25 protocol groups that are not used. Enter <cr> to remove none.
...	...	

Printing an X.25 protocol group for MPH

You may print all or some of the X.25 protocol groups, by specifying the group number(s).

LD 27 — Printing an X.25 protocol group

Prompt	Response	Comment
REQ	PRT	Print the configuration.
TYPE	X.25P	To print an X.25 protocol group set data.
PGPN	0-15 <cr>	X.25 protocol set group number to be printed. Enter <cr> to print all defined X.25 groups, in ascending order.
USER	YES, (NO)	YES = Print the X.25 group(s) selected in the PGPN prompt and the TSPs for the MMPH network interfaces that are using the group(s). NO = Do not print the X.25 group user information.
...	...	

Configuring a Data Network Address table for an MPH

The MPH supports the CCITT X.121 Numbering Plan, which consists of up to 14 digits to specify the Data Network Address (DNA) of a Data Terminal Equipment (DTE). The DNA consists of a four digit Data Network Identification Code (DNIC) and a one-10 digit National Terminal Number (NTN). The DNIC consists of a three digit Data Country Code (DCC) and a single Network Digit (ND).

In summary, the X.121 DNA is composed as follows:

$$\text{DNA} = \text{DNIC (DCC+ND)} + \text{NTN}$$

where

DNIC = zxxx (z can be 2-7; the digits 0 and 1 are reserved, and 8 and 9 are used for Telex; x can be 0-9)

NTN = 0000000001-9999999999 (1-10 digits)

Note: The DTA may be prefixed by a single digit (0-9), which, while transparent to the MPH, may have a local significance at the PSDN interface (typically used for international calls). This prefix may be entered in response to the PRFX prompt in LD 27, when configuring the MISP for the MPH.

The DNA numbers are administered using DNA tables, which are configured in LD 27. DNA tables contain the DNA numbers that are accessible to and by the PSDN. A DNA table number is assigned to each DNA table which is associated with a selected MPH network interface in the MISP configuration (there may be up to 32 DNA tables per MPH network). The DNA table number informs the network of available DNAs on that MPH network interface.

Note: The craftsperson typically collects the required information, for entry to LD 27, from the MPH network administrator.

LD 27 — Adding or changing a DNA table for an MPH

Prompt	Response	Comment
REQ	NEW, CHG	Add or change configuration data set. Note: You cannot change the DNIC of the DNA table.
TYPE	DNAT	To administer the DNA tables. Package #248 for MPH must be activated.
DNAT	1-32	DNA table number. Note that there is no default value.
DNIC	nnnn	Enter the 4-digit DNIC for the DNAT table. DNIC = zxxx (z can be 2-7; the digits 0 and 1 are reserved, and 8 and 9 are used for Telex; x can be 0-9). Note: You cannot change the DNIC of the DNA table.
NTN	nn...nn m...m n Xnn...nn Xm...m n <cr>	nn...nn = Add 1-10 digit National Terminal Number to the selected DNA table. m...m n = Enter a range of National Terminal Numbers to the selected DNA table. Enter the lowest NTN (m...m) in the table range (n, where n = 2-32). For example, entering 96765 20 adds to the DNA table an NTA number of 96765 with a table range of 96765 through 98764. Note: If REQ = NEW, least 1 valid NTN must be entered for the table before using <cr> to exit the DNA table configuration. A maximum of 32 NTNs is allowed per DNA table. Enter Xnn to delete NTN nn from the table. Enter Xm n to delete a range mn NTNs from the table. <cr> = Do not add any NTN to the DNA table.
REQ		

Removing a DNA table configured for an MPH

Note: You cannot remove a DNA table if it is assigned to an MPH or a TSP, or referenced by an MPH network interface.

LD 27 — Removing a DNA table

Prompt	Response	Comment
REQ	OUT	Remove an existing data set.
TYPE	DNAT	To remove a DNA table.
DNAT	1-32	DNA table to be removed.
...	...	

Printing a DNA table configured for an MPH

You may print all or some of the DNA tables which have been configured for an MPH, by specifying the DNA number(s).

LD 27 — Printing a DNA table configured for an MPH

Prompt	Response	Comment
REQ	PRT	Print the configuration.
TYPE	DNAT	To print DNA table.
DNAT	1-32 <cr>	DNA table number to be printed. Enter <cr> to print all defined DNA tables, in ascending order.
USER	(NO), YES	NO = Do not print the DNA table user information. YES = Print the DNA tables selected in the DNAT prompt and the MPMH network interfaces that are using the DNA tables.
...	...	

Configuring ISDN PRI trunk assignments for an MPH interface

The following trunk assignments must be configured for an MPH, when **not** using a Meridian Communications Unit (MCU).

- the ISDN PRI loop (LD17)
- the ISDN customer (LD15)
- the Tie trunk route for packet data (LD 16)
- the Tie trunk for packet data (LD14)

LD17 — Adding an ISDN PRI loop for an external MPH

Prompt	Response	Comment
REQ	NEW/CHG	NEW for new customer or CHG for an existing customer
TYPE	CFN	Configuration data block
...	...	
CEQU	YES	Change common equipment options
...	...	
DLOP	lll dd ff	PRI loop parameters lll (0-159) = Network loop number dd (0-24) = number of voice or data calls ff (ESF) = frame format: D2, D3, D4, Frame format must match the far end.
MODE	PRI	Primary Rate Interface mode
...	...	
PRI	0-159	PRI loop number

LD15 — Defining an ISDN customer for an MPH

Prompt	Response	Comment
REQ	NEW/CHG	NEW for new customer or CHG for existing customer
TYPE	CDB NET_DATA	Customer data block Networking Data (Release 21 gate opener).
CUST	0-99	Customer number
...	...	
ISDN	YES	YES = customer is equipped with ISDN (prompted only with D-channel defined in LD17)
...	...	

LD 16 — Configuring a tie trunk route for packet data for an MPH

Prompt	Response	Comment
REQ	NEW	Add ISDN BRI protocol group settings
TYPE	RDB	Route data block
CUST	0-99	Customer number
ROUT	0-511	Route number
TKTP	TIE	Trunk route type
...	...	
DTRK	YES	Digital trunk route
BRIP	YES	Packet handler route Note: Prompted only if DTRK = YES.
ACOD	xxxxxx	Trunk route access code
TARG	<cr>	Access restriction group number
CNTL	<cr>	Changes to control timers
...	...	

LD14 — Configuring the tie trunk for packet data for an MPH

Prompt	Response	Comment
REQ	NEW	Enter new trunk data
TYPE	TIE	Trunk type
TN	III ch	Loop, channel number
CUST	0-99	Customer number
NCOS	<cr>	Network class of service group
RTMB	xx..xx	Route and route member
MNDN	<cr>	Manual directory number
TGAR	<cr>	Trunk group access restriction
CLS	<cr>	Class of service
...	...	

Configuring a Meridian Communication Unit network interface for an MPH

Use LD11 to configure an interface between the MCU and the MPH (the MPH1 prompt determines if the MCU is to be configured as an MPH interface.)

Before the MCU interface can be configured, the Tie trunk route (using LD 16) and Tie trunk (using LD 14) must be first configured; the procedures follow.

LD 16 — Configuring a tie trunk route for an MCU to MPH interface

Prompt	Response	Comment
REQ	NEW	Add ISDN BRI protocol group settings
TYPE	RDB	Route data block
CUST	0-99	Customer number
ROUT	0-511	Route number
TKTP	TIE	Trunk route type
...	...	
DTRK	YES	Digital trunk route
BRIP	YES	Packet handler route
		Note: Prompted only if DTRK = YES.
ACOD	xxxxxx	Trunk route access code
TARG	<cr>	Access restriction group number
CNTL	<cr>	Changes to control timers
...	...	

LD14 — Configuring the Tie trunk for an MCU to MPH interface

Prompt	Response	Comment
REQ	NEW	Enter new trunk data
TYPE	TIE	Trunk type
TN	III ch	Loop, channel number
CUST	0-99	Customer number
NCOS	<cr>	Network class of service group
RTMB	xx..xx	Route and route member
MNDN	<cr>	Manual directory number
TGAR	<cr>	Trunk group access restriction
CLS	<cr>	Class of service
...	...	

LD 11 — Adding or changing an MCU to MPH interface

Prompt	Response	Comment
REQ	NEW, CHG	Add or change configuration data set.
TYPE	MCU	To administer the MCU.
TN	lll s cc u	Loop, shelf, card and unit where MCU is located.
CDEN	sd, dd, 4d	Single, double, or quadruple density. Note: Not prompted for superloops.
CUST	0-99	Customer number.
MPHI	YES, (NO)	Enter YES, for the MCU to be used with the MPH network interface. All subsequent prompts, except OPE, are skipped. Consequently, only the OPE and related prompts can be changed. NO = Do not use the MCU as the MPH network interface.
...	...	...
REQ		

Removing an MCU to MPH network interface

You may remove an MCU to MPH interface by specifying the loop, shelf, card and unit where it is located.

LD11 — Removing an MCU to MPH interface

Prompt	Response	Comment
REQ	OUT	Remove an existing data set.
TYPE	MCU	To remove the MCU interface.
TN	lll s cc u	Loop, shelf, card and unit where MCU is located.
REQ		

Configuring a MISP for an MPH

An MPH may be downloaded to the MISP hardware. If the hardware platform runs only the MPH application, the MISP card serves as a dedicated MPH performing basic packet handling functions for the Meridian 1 system. This configuration is done by using the procedure which follows.

The MISP must be enabled by using the **ENLL I** command in Network and IPE Diagnostic Program LD 32.

LD 27 — Adding or changing a MISP configured for an MPH (Part 1 of 4)

Prompt	Response	Comment
REQ	NEW, CHG	Add or change a new data set
TYPE	MISP	Administers the MISP card
LOOP	0-158	MISP loop number The MISP loop number must be an even number and the next odd loop number must be unequipped.
APPL	MPH <cr> XMPH	Enter MPH. <cr> = BRIL application BRIL and MPH may NOT be configured on the same MISP. XMPH = Remove the MPH application The MPH application may be removed only if there are: — no D-channel packet data separators and — no B-channel or D-channel terminals and — no network interfaces and — no PVC connections
PRFX	0-9 NO	Prefix to be used by the DNA tables of the MPH. NO = No prefix is selected. If the PSDN with which the MPH is interfacing uses a prefix, enter the prefix digit here.

LD 27 — Adding or changing a MISP configured for an MPH (Part 2 of 4)

Prompt	Response	Comment
NTNO	(YES), NO	YES = PSDN presents only the NTN in the called address field of incoming call packets. NO = PSDN presents both DNIC and NTN in the called address field of incoming call packets. Before changing the response to PRFX, NTNO, and DNIC, disable the MPH application.
DNIC	xxxx	Enter a 4-digit DNIC for the DNAs used with the MPH. Each MPH can support DNAs of only one DNIC. The DNIC may be changed only when the MPH has removed its association with any DNA table and TSP.
NWIF	n Xn <cr>	Enter the MPH network interface identifier for configuration (n = 1-3.) Xn = Remove the MPH network interface, n <cr> = none Before changing the parameters TN, PVC, IC, TC, and OC, disable the associated network interface with the DSIF command in LD 32. NWIF = <cr> completes the MISP configuration.
TN	I s c u III ch	Loop, shelf, card, unit of the MCU where the dedicated connection from the MPH is terminated. III (0-159) = PRI loop number which is connected to the MPH ch (1-23) = the PRI channel on which the dedicated connection from the MPH is terminated. Enter the TN of either the MCU or the PRI channel on which the dedicated connection from the MPH is terminated. The PRI loop must have been configured in LD17 and it must be dedicated for the MPH or PSDN. The PRI channel must be configured for ISDN BRI packet data route in LD 16 and LD14. The MCU must have been configured in LD11. The associated network interface must be disabled prior to changing the PRI loop and channel number to a different value. If the PRI channel or the MCU has been chosen to

LD 27 — Adding or changing a MISP configured for an MPH (Part 3 of 4)

Prompt	Response	Comment
RATE	56, (64)	The PSDN communicates at either 56K or 64K across the PRI channel network interface. This prompt appears only if the input TN is on a PRI loop.
LAPB	0-15	The LAPB protocol set group number to be used on the MPH network interface.
X25P	0-15	The X.25 packet protocol set group number to be used on the MPH network interface.
PVC	n1 n2 <cr>	The range of Permanent Virtual Circuit Logical Channel Numbers. n1 = lowest PVC LCN (1-4095) n2 = highest PVC LCN (1-4095) <cr> = none The Logical Channel Numbers values must follow this format: PVC must be less than IC which must be less than TC which must be less than OC. LCNs cannot be shared by PVC, IC, TC, or OC. Not all LCNs must be used.
IC	n1 n2 <cr>	The range of Incoming Logical Channel Numbers n1 = lowest Incoming LCN (1-4095) n2 = highest Incoming LCN (1-4095) <cr> = none
TC	n1 n2 <cr>	The range of Two-way Logical Channel Numbers. n1 = lowest Two-way LCN (1-4095). n2 = highest two-way LCN (1-4095). <cr> = none
OC	n1 n2 <cr>	The range of Outgoing Logical Channel Numbers. n1 = lowest Outgoing LCN (1-4095). n2 = highest Outgoing LCN (1-4095) <cr> = none

LD 27 — Adding or changing a MISP configured for an MPH (Part 4 of 4)

Prompt	Response	Comment
DNAT	nn Xnn <cr>	Associate the DNA table with the MPH network interface. nn = 1-32 Xnn = Remove DNA table from the MPH network interface. <cr> = none Because only one DNIC can be used in an MPH, the DNA table number must have the same DNIC number as the MPH. To change a DNA table number, remove the old table number and then add the new. The table number to be removed must be associated with the MPH network interface. Each MPH network interface can be associated with a maximum of four DNA tables.
...		

Removing a MISP configured for an MPH

Before removing a MISP which has been configured for an MPH:

- Remove all BRSCs associated with it.
- Remove all DSLs connected to SILCs and UILCs associated with it.
- Disable the MISP loop with the **DISL I** command in LD 32.
- Remove the PVC or network interface connections.

Remove a MISP by specifying its loop number.

LD 27 — Removing a MISP configured for an MPH

Prompt	Response	Comment
REQ	OUT	Remove an ISDN BRI component
TYPE	MISP	MISP
LOOP	0-158	Loop number Must be an even number. The MISP must be disabled before removing it. All SILC and/or UILC DSLs associated with the MISP must be removed before removing the MISP.
REQ		

Printing a MISP configured for an MPH

Print the configuration information for a MISP which has been configured for an MPH by specifying its network loop number. If the MISP network loop number is not known, use LD 22 to print the system configuration. BRSC TNs which are associated with the MISP are also listed when data of this MISP are printed.

LD 22 — Printing a MISP configured for an MPH

Prompt	Response	Comment
REQ	PRT	Print an ISDN BRI component
TYPE	MISP	MISP BRSC TNs associated with a MISP are also listed when data of the MISP are printed.
LOOP	0-158	MISP loop number Must be an even number.
REQ		

Configuring a BRSC for an MPH

To configure a BRSC for an MPH, follow these steps:

- 1** Disable the MISP to configure the first BRSC.
- 2** Disable all ISDN BRI line cards in an IPE Module.
- 3** Configure a BRSC in the IPE Module and select a MISP that can accommodate the BRSC.
- 4** Set up the connection to the internal packet handler, the Meridian 1 Packet Handler (MPH).
- 5** Enable the MISP.
- 6** Enable the BRSC with the **ENLCIII s cc** command in LD 32.
- 7** Enable all ISDN line cards in the IPE Module.

To add or change a BRSC, specify its superloop number, shelf number, and card number, and specify the MISP loop for routing of the DPSD to the MPH.

Note: Refer to the section “Adding/removing BRSCs with a configured ISDN BRI system”, which soon follows, for possible scenarios for adding or removing BRSCs with a Meridian 1 system configured for ISDN BRI.

LD 27 — Adding or changing a BRSC configured for an MPH

Prompt	Response	Comment
REQ	NEW, CHG	Add or change BRSC
TYPE	BRSC	BRSC
BRSC	III s cc	Card location The values for this prompt are: III (loop)=0-156 (must be an even number divisible by 4) s (shelf)=0-1 cc (card)=0-15
MISP	0-158	MISP loop number (must be an even number that has already been configured)
DPSD	YES, (NO)	Enter YES for D-channel Packet Switched Data NO = No D-channel Packet Switched Data
MPHC	(YES), NO	Enter YES or <cr> for DPSD to be routed to an MPH card. NO = DPSD are routed to an external packet handler.
MPH	0-158	MISP loop number for MPH application The MISP with MPH application where D-channel packet data are being sent. This prompt appears only if DPSD = YES and MPHC = YES. No more prompts of the current transaction appear for the MPH application.

Removing a BRSC configured for an MPH

In order to remove a BRSC which has been configured for an MPH:

- Disable all the line cards.
- Remove a BRSC by specifying its superloop number, shelf number, and card number.
- Disable the BRSC with the **DISC III s cc** command in LD 32

Note: After the BRSC is removed, the line cards must be associated with the MISP again

LD 27 — Removing a BRSC configured for an MPH

Prompt	Response	Comment
REQ	OUT	Remove an ISDN BRI component
TYPE	BRSC	Remove the BRSC data
BRSC	III s cc	Card location The values for this prompt are: III (loop)=0-156 (must be an even number divisible by 4) s (shelf)=0-1 cc (card)=0-15 BRSC can be removed only if the line cards are disabled and the BRSC is disabled. <i>Note:</i> After the BRSC is removed, the ISDN BRI line cards must be associated with the MISP again
REQ		

Printing a BRSC configured for an MPH

Use LD 27 to print the following information for a BRSC which has been configured for an MPH:

- to print a BRSC, specify its superloop and shelf (card number is optional)
- to print a BRSC serving the superloop, specify its superloop number
- to print all BRSCs associated with a MISP, enter <cr> at BRSC prompt and specify the MISP loop number
- to print all BRSCs associated with a system, enter <cr> at both BRSC and MISP prompts.

LD 27 — Printing a BRSC configured for an MPH

Prompt	Response	Comment
REQ	PRT	Prints an ISDN BRI component
TYPE	BRSC	Print BRSC data Note: BRSC TNs associated with the MISP are also printed.
BRSC	III, s, c III, s III <cr>	Card location The values for this prompt are: III (0-156) = superloop number s (0-1) = shelf number cc (0-15) = card number If input is: - III s or III s cc, data of the corresponding BRSC is printed. - III, data of the BRSCs serving the superloop is printed. If <cr> is entered, the next prompt, MISP appears.
MISP	0-158 <cr>	MISP loop number (must be an even number that has already been configured). If <cr> is entered, all BRSCs configured in the system are printed; otherwise, all BRSCs associated with the MISP loop are printed.
REQ		

Adding/removing BRSCs with a ISDN BRI system

To add or remove BRSCs with a Meridian 1 system configured for ISDN BRI, follow these steps:

- Disable the MISP when the first BRSC is configured.
- If two or more line cards which are served by the MISP are in the IPE Module where the first BRSC is added, disable the MISP once only.
- Disable the MISP when changing from a configuration with three line cards and two BRSC to a configuration with two line cards and up to eight BRSCs.
- Conversely, disable the MISP when changing from a configuration with two line cards and up to eight BRSCs to a configuration with three line cards and one BRSC.

The following table lists the possible scenarios for adding or removing BRSCs with a Meridian 1 system configured for ISDN BRI.

Adding/removing BRSCs with a configured ISDN BRI system

Initial configuration

Configured line cards installed	BRSCs	Action	Same IPE Module?
0	0	Add BRSC 1	NA
0	1	Add BRSC 2-8	NA
1	0	Add BRSC 1	Yes/No
1	1	Add BRSC 2-8	NA
2	0	Add BRSC 1	Yes/No
2	1	Add BRSC 2-8	Yes/No
3	0	Add BRSC 1	Yes/No
3	0	Add BRSC 1	No
2	1	Add BRSC 2	Yes
0-2	2	Add BRSC 3-8	Yes/No
4	0	Add BRSC 1	Yes
3	1	Add BRSC 2	Yes
0-2	3-8	Add BRSC 3-8	Yes/No
2	2-8	Disable BRSC 1	N/A
2	1	Add line card 3	N/A
3	1	Delete BRSC	N/A
3	0	Add line card 4	N/A
2	2-8	Delete BRSCs	N/A
2	0	Add line card 3	N/A
3	0	Add line card 4	N/A

Configuring a SILC or UILC for an MPH

Add or change a new SILC or UILC for an MPH network interface by specifying its location, card type, and the MISP network loop that this card uses to transmit and receive signaling and D-channel packet data.

Note: This step may be skipped and the card type specified when configuring the DSL in the procedure “Adding a DSL.”

The following procedure is used when configuring the SILC or UILC cards **without** configuring their DSLs.

LD 27 — Adding or changing a SILC or UILC for an MPH

Prompt	Response	Comment
REQ	NEW, CHG	Add or change a SILC or UILC line card
TYPE	CARD	SILC or UILC line card
TN	lll s cc	Card location The values for this prompt are: lll (loop)=0-156 (must be an even number divisible by 4) s (shelf)=0-1 cc (card)=0-15
MISP	0-158	Loop number (must be an even number that has already been configured) If there is a BRSC configured in the IPE module, the MISP prompt is skipped and the MISP lll and the BRSC lll s cc is displayed.
CTYP	SILC,UILC	Card type to be added or changed. Remove any DSLs configured for this line card before changing the card type.
REQ		

Removing a SILC or UILC configured for an MPH

Remove a SILC or UILC configured for an MPH by specifying its card location. Before removing the SILC or UILC, all configured DSLs must first be removed from the card by using the procedure “Removing a DSL”. When the last DSL is removed, the card is automatically deleted.

Note: When removing the card, the database information is also deleted from the data block. Use LD20 to list cards that have been removed.

LD 27 — Removing a SILC or UILC configured for an MPH

Prompt	Response	Comment
REQ	OUT	Remove an ISDN BRI component
TYPE	CARD	ISDN BRI line card
TN	III s cc	Card location of the SILC or UILC to be removed. III (superloop) = 0-156 (must be a number divisible by 4) s (shelf) = 0-1 cc (card) = 0-15 Remove any DSLs that are configured for this card before removing the card.
...	...	

Printing a SILC or UILC configured for an MPH

To print the configuration information for a SILC or UILC configured for an MPH, specify its card location.

LD 27 — Printing a SILC or UILC configured for an MPH

Prompt	Response	Comment
REQ	PRT	Print an ISDN BRI component
TYPE	CARD	ISDN BRI line card
TN	III s cc	Card location III (superloop) = 0-156 (must be a number divisible by 4) s (shelf) = 0-1 cc (card) = 0-15
...	...	

Configuring a DSL for an MPH

To add or change a DSL for an MPH network interface, specify its port location and its DSL characteristics. DSL location specifies a SILC/UILC port connected to a DSL.

LD 27 — Adding or changing a DSL for an MPH (Part 1 of 5)

Prompt	Response	Comment
REQ	NEW,CHG	Add or change a DSL Note: The defaults apply to adding, not changing, a DSL.
TYPE	DSL	DSL
DSL	III s cc dsl#	DSL location. III (superloop) = 0-156 (must be zero or a number divisible by 4) s (shelf) = 0-1 cc (card) = 0-15 dsl# (DSL location) = 0-7
DES	x...x	Designator to assign to a DSL (ex. BUILD2) x...x = 1 to 6 alphanumeric DSL designator
CUST	0-99	Customer number
CTYP	SILC, UILC	Card type. This prompt is displayed only if the SILC or UILC has not been previously configured.
OPT	(BRIL) <cr>	Defaults to ISDN BRI line application (BRIL). Enter <cr>.
MISP	0-158	Loop number (must be an even number of a MISP that has already been configured). This prompt is displayed only if the MISP has not been assigned to the specified SILC or UILC. If there is a BRSC configured in the IPE Module, the MISP prompt is skipped and the MISP III and the BRSC III s cc are displayed as shown in the following example: MISP 8 BRSC 24 0 15.

LD 27 — Adding or changing a DSL for an MPH (Part 2 of 5)

Prompt	Response	Comment
MODE	NTAS, NTFS	Network terminal line sampling mode (this prompt is displayed only if you specified the card type as SILC). The values for this prompt are: NTAS = Adaptive sampling Extended passive bus, Branched passive bus, Point-to-point bus, U interface DSL. NTFS = Fixed sampling Short passive bus.
B1CT	(VCE) (DTA) PMD IPD XPMD XIPD	B-channel 1 call type. Enter IPD for B-channel packet data using the MPH. PMD = B-channel packet data with dedicated connection from DSL to a PRI channel using external packet handler For B1CT = IPD or PMD, B-channel packet data must have been specified at the PH prompt in LD 27. IPD and PMD cannot be combined with any other options. Do not select <cr> which defaults to VCE (circuit switched voice) and DTA (circuit switched data) which may not run concurrently with packet data. XPMD = Delete B-channel packet data using external packet handler. XIPD = Delete B-channel packet data using MPH.
MPH	0-158	MPH loop number associated with B-channel 1. The MPH loop must have been configured the MISP configuration, in LD 27. Note: If an MPH loop number is to be changed, the DSL has to be first disabled and any association of the MPH with any TSP has to be removed.

LD 27 — Adding or changing a DSL for an MPH (Part 3 of 5)

Prompt	Response	Comment
B2CT	(VCE) (DTA) PMD IPD XPMD XIPD	B-channel 2 call type. Enter IPD for B-channel packet data using the MPH. PMD = B-channel packet data with dedicated connection from DSL to a PRI channel using external packet handler For B2CT = IPD or PMD, B-channel packet data must have been specified at the PH prompt in LD 27. IPD and PMD cannot be combined with any other options. Do not select <cr> which defaults to VCE (circuit switched voice) and DTA (circuit switched data) which may not run concurrently with packet data. XPMD = Delete B-channel packet data using external packet handler. XIPD = Delete B-channel packet data using MPH.
MPH	0-158	MPH loop number associated with B-channel 2. The MPH loop must have been configured the MISP configuration, in LD 27.
CH	1-24 1-30	Note: A response to this prompt is only required for packet data implementation. Enter the PRI2 (1-30) channel number that carries B-channel 2 packet data. The B-channel must be configured for packet data by using Trunk Route Administration Program LD 16 and Trunk Administration Program LD 14. Note: This prompt appears only if the call type for B2CT is set to PMD.
LDN	0-3, (NO)	Departmental listed directory number 0-3 = Departmental listed DN specified in LD15 NO = No departmental listed DN associated with the DSL
XLST	(0)-254	Pretranslation group (if configured in customer data block).
MTEI	1-(8)-20	Maximum number of Terminal Endpoint Identifiers, both static and dynamic combined assigned to the logical terminals on this DSL.

LD 27 — Adding or changing a DSL for an MPH (Part 4 of 5)

Prompt	Response	Comment
LTEI	n1 n2 mm, <cr>, Xmm	The Logical Terminal Endpoint Identifier(LTEI) is used to address D-channel packet data terminals. LTEI consists of two components: n1 and n2 = Logical Terminal Identifier (LTID) m = Static Terminal Identifier (TEI) The maximum number of Logical Terminal Endpoint Identifiers (LTEIs) that can be configured is defined above by the prompt MTEI. The ranges for all entries are: n1 = Logical Terminal Group (LTG) = 1-15 n2 = Logical Terminal Number (LTN) = 1-1023 m = Static TEI = 0-63 Note: LTG=15 and LTN=1023 is an invalid combination. Xm=Deletes LTID and TEI as a pair for the specified TEI. <cr>=Stops this prompt from being displayed again and skips to the next prompt. Note: This prompt is displayed only if D-channel packet data was specified for the associated MISP.
MCAL	2-(16)-32	Maximum number of calls on the DSL at one time. This includes calls waiting and on hold. Warning is received if less than 8 is specified.
MTSP	1-(8)-16	Maximum number of TSPs allowed for a DSL
PGPN	0-15	Protocol group number The protocol group should be previously added as described in "Configuring a protocol group."
PRID	1- 6	Defines the protocol to be used on the DSL Selection of the protocol ID is terminal dependent. The values for this prompt are: 1=ANSI 2=ETSI 3=DMS 4=NET64 5=NUMERIS 6=NI-1 Note: A response of 6 allows the ISDN BRI Conference feature to be configured in the TSP of the DSL.
FDN	n...n	Flexible CFNA directory number. Enter a 1-13 digit DN.

LD 27 — Adding or changing a DSL for an MPH (Part 5 of 5)

Prompt	Response	Comment
EFD	n...n	Flexible external call CFNA DN. Enter a 1-13 digit DN.
HUNT	n...n	Hunt directory number. Enter a 1-13 digit DN.
EHT	n...n	Hunt external call directory number. Enter a 1-13 digit DN.
TGAR	(0)-31	Trunk group access restriction
NCOS	(0)-99	Network class of service
CLS		Class of service access restrictions.
		More than one class of service can be entered by separating each entry with a space. Default features shown in parenthesis are selected by pressing <cr>.
	(ICDD), ICDA	Internal Call Detail Recording (Denied) Allowed
	(MRD), MRA	Message Restriction (Denied) Allowed
	(UDI), RDI	(Unrestricted) Restricted DID
	(UNR)	(Unrestricted)
	CTD	Conditionally Toll Denied
	CUN	Conditionally Unrestricted
	FR1	Fully Restricted class 1
	FR2	Fully Restricted class 2
	FRE	Fully Restricted
	SRE	Semi-Restricted
	TLD	Toll Denied
	ICDA	Internal Call Detail Recording allowed
	(ICDD)	(Internal Call Detail Recording denied)
	<cr>	Enter <cr> to select the defaults.
		More than one class of service may be selected by separating each entry with a space.
REQ		

Removing a DSL configured for an MPH

Remove a DSL, which has been configured for an MPH, by specifying its location. To remove a DSL, first remove all the TSPs assigned to this DSL. When the last configured DSL on a card is removed, the card is removed automatically.

LD 27 — Removing a DSL configured for an MPH

Prompt	Response	Comment
REQ	OUT	Remove an ISDN BRI component
TYPE	DSL	DSL
DSL	lll s cc dsl#	DSL location lll (superloop) = 0-156 (must be a number divisible by 4) s (shelf) = 0-1 cc (card) = 0-15 dsl# (DSL location) = 0-7
...	...	

Printing a DSL configured for an MPH

Print the configuration information for a single DSL by specifying its location.

LD 27 — Printing a DSL configured for an MPH

Prompt	Response	Comment
REQ	PRT	Print an ISDN BRI component
TYPE	DSL	DSL
DSL	III s cc dsl#, III s cc, III s, III	DSL information III s cc dsl# = Prints information for the specified dsl# III s cc = Prints information for DSLs on the specified card III s = Prints information for DSLs in the specified shelf III = Prints information for DSLs on the specified loop
DATE	(<cr> x y z	Print data and display the last active date, where x = day (1-31), y = month (Jan-Dec), and z = year (1979-9999) specifies the starting date of the data to be displayed or printed.
PAGE	YES, (NO)	YES = prints one DSL per page NO = prints without paging
DES	x...x, <cr>	1-digit to 6-digit alphanumeric DSL designator No designator for DSLs
NACT	YES, (NO)	Activity date is updated to current date.
...	...	

Configuring a TSP for an MPH

To configure a TSP to work with an MPH, define the service profiles for ISDN BRI terminals connected to a DSL, and the associated MPH packet data information.

LD 27 — Adding or changing a TSP for an MPH (Part 1 of 5)

Prompt	Response	Comment
REQ	NEW,CHG	Add or change a TSP
TYPE	TSP	Assign TSP to a DSL
DSL	lll s cc dsl#	DSL location lll (superloop) = 0-156 (must be a number divisible by 4) s (shelf) = 0-1 cc (card) = 0-15 dsl# (DSL location) = 0-7 The DSL must have been configured using the “DSL configuration procedures.”
USID	0-15	User service identifier 0 is default TSP assigned to non-initializing terminals. The total number of TSPs defined for a DSL cannot exceed the maximum number of TSPs allowed for a DSL as specified by the MTSP prompt in the “DSL configuration procedures.” A default TSP should be configured for non-initializing terminals. This is done by assigning USID=0 to the TSP.
MPHC	YES (NO)	Enter YES, to have the TSP work with an MPH. NO = The TSP is not used with an MPH Note: The status of MPHC cannot be changed. If CHG is entered in the REQ prompt, the MPHC and its stored response will be output, followed by the next applicable prompt.

LD 27 — Adding or changing a TSP for an MPH (Part 2 of 5)

Prompt	Response	Comment
TRMT	d b	d = Terminal type is for D-channel configuration b = Terminal type is for B-channel configuration If TRMT = d, then the LAPD protocol set group to be used by the MPH is the one selected in its associated DSL configuration. Before changing the terminal type from b to d, disable the terminal first with the DSIF command in LD 32. To change the terminal type, the associated MPH must have the same DNIC. If REQ = NEW/CHG and TRMT = b, then B1CT and/or B2CT of the associated DSL must = IPD. Response to TRMT largely determines the “associated MPH.” For example, if TRMT = b and BCH = 1, the MPH associated with B1CT in the DSL configuration is used. If TRMT = b and BCH = 2, the MPH associated with the B2CT is used. If TRMT = d, then the MPH selected by MISP or BRSC of associated ISDN BRI line card is used.
TEI	0-63	Static TEI for addressing terminal TEI is prompted only if TRMT = d. TEI is unique for the D-channel packet terminals within a DSL. An error message is printed is a TEI number if entered for more than one TSP of a DSL.
BCH	1-2	1 = TSP is associated with the B1 channel of the DSL. 2 = TSP is associated with the B2 channel of the DSL. The prompt BCH is given if TRMT = b If REQ = NEW/CHG and BCH = 1, then B1CT of associated DSL must = IPD. If REQ = NEW/CHG and BCH = 2, then B2CT of the associated DSL must = IPD. If a value to the BCH is to be changed (REQ = CHG), then the terminal has to be disabled using the DSIF command in LD 32.

LD 27 — Adding or changing a TSP for an MPH (Part 3 of 5)

Prompt	Response	Comment
LAPB	0-15	LAPB protocol set group number used on the MPH user interface. The prompt LAPB is given only if TRMT = b If REQ = NEW/CHG and TRMT = b, then B1CT and/or B2CT of the associated DSL must = IPD. LAPB must have been defined in LD 27.
X25P	0-15	X.25 packet protocol set group number used on the MPH user interface. If selected X.25 protocol set group does not exist, an error message is printed and the X25P prompt is repeated.
NTN	nn...nn	National Terminal Number of the TSP (1-10 digits.) Note: The Data Network Address (DNA) of the TSP is composed by combining the NTN entry with the DNIC of the associated MPH. "Associated MPH" is determined primarily by the response to the TRMT prompt. If TRMT = b, and BCH = 1, then the MPH associated with the B1CT in the DSL configuration will be used. If TRMT = b, and BCH = 2, then the MPH associated with the B2CT in the DSL configuration will be used. If TRMT = d, then the MPH selected by the Service Access Point Identifier (SAPI) separator (MISP or BRSC) of the associated ISDN BRI line card will be used.
PVC	n1 n2 <cr>	The range of the Permanent Virtual Circuit Logical Channel Number. n1 = Lowest PVC LCN (1-4095) n2 = Highest PVC LCN (1-4095) <cr> = None. The lowest and highest Logical Channel Numbers selected define the range of logical channels to be used for the specified type of call connection. The Logical Channel Numbers values must follow this format: PVC lower than IC lower than TC lower than OC. Note: Before changing the value of PVC, the associated TSP must be first disabled.

LD 27 — Adding or changing a TSP for an MPH (Part 4 of 5)

Prompt	Response	Comment
IC	n1 n2 <cr>	The range of Incoming Logical Channel Number n1 = Lowest incoming LCN (1-4095) n2 = Highest incoming LCN (1-4095) <cr> None. Note: Before changing the value of IC, the associated TSP must be first disabled.
TC	n1 n2 <cr>	The range of Two-way Logical Channel Number. n1 = Lowest Two-way LCN (1-4095) n2 = Lowest Two-way LCN (1-4095) Note: Before changing the value of TC, the associated TSP must be first disabled.
OC		The range of Outgoing Logical Channel Number n1 = Lowest Outgoing LCN (1-4095) n2 = Highest Outgoing LCN (1-4095) <cr> = None Note: Before changing the value of OC, the associated TSP must be first disabled.
CDR	YES, (NO)	YES = Turn on internal Call Detail Recording NO = Turn off internal CDR The local packet data CDR option is selected in the TSP, but it is overridden by the CDR option selection in LD15. If CDR = NO in LD15, the local CDR option is always considered OFF. But, if CDR = YES in LD15, the local CDR option is determined by the setting for the CDR prompt in the TSP configuration. For local packet data calls, the originator selection for CDR dominates.

LD 27 — Adding or changing a TSP for an MPH (Part 5 of 5)

Prompt	Response	Comment
FEAT	HTA/(HTD) FNA/(FND) SFA/(SFD) CFTA/(CFTD) MWA/(MWD) FBA/(FBD) HBTA/(HBTD) DNO1/DNO2/(DNO3) DNDN/(DNDY)	Class of service features HTA = Hunt allowed (always assign if terminal has CWT capability) HTD = Hunt denied FNA = Call forward no answer allowed FND = Call forward no answer denied SFA = Second level call forward no answer allowed SFD = Second level call forward no answer denied CFTA = Call forward by call type allowed CFTD = Call forward by call type denied MWA = Message waiting allowed MWD = Message waiting denied FBA = Call forward busy allowed FBD = Call forward busy denied HBTA = Hunting by call type allowed HBTD = Hunting by call type denied DNO1/DNO2/(DNO3) = QSIG Call Diversion Notification for calling party where: DNO1 = no notification DNO2 = notification without forwarded-to (diverted) party's number and name (DNO3) = notification with forwarded-to (diverted) party's number and name when available (default). DNDN/(DNDY) = QSIG Call Diversion Notification for forwarded-to (diverted) party where: DNDN = no notification of called party's number and name notification (DNDY) = notification with called party's number and name when available (default). More than one class of service can be entered by separating each entry with a space. Press <cr> to select multiple default features shown in parenthesis.
DFDN	n...n	Default directory number Enter a 1-digit to 7-digit DN. This DN must be defined at the preceding DN prompt A DN can be associated with multiple TSPs. Only one default DN can be defined for a TSP. This DN is sent in the outgoing setup if the terminal does not send a calling line identification number with the outgoing call.
REQ	...	

Removing a TSP configured for an MPH

Before removing a TSP configured for an MPH:

- Disable the B-channel.
- Disable the TSP's associated terminal with the DSIF command in LD 32.
- If the TSP is associated with an existing PVC connection, remove the PVC first.

To remove a single TSP from a DSL, specify the DSL location and the user service identifier. Remove all TSPs from a DSL by entering **ALL** at the USID prompt.

Note: Removal of the TSP disconnects all calls associated with the TSP's D-channel packet switched data and circuit switched voice data.

LD 27— Removing a TSP configured for an MPH (Part 1 of 2)

Prompt	Response	Comment
REQ	OUT	Remove an ISDN BRI component
TYPE	TSP	TSP
		Before removing a TSP:
		— Disable the B-channel.
		— If MPHC = YES, disable the TSP's associated terminal with the DSIF command in LD 32.
		— If TSP is associated with an existing PVC connection, remove the PVC first.
		Removal of the TSP disconnects all calls associated with the TSP's D-channel packet switched data and circuit switched voice data.
DSL	Ill s cc dsl#	DSL location
		Ill (0-156) = superloop (must be an even number divisible by 4) (0 = invalid) s (0-1) = shelf cc (0-15) = card dsl# (0-7) = DSL location

LD 27— Removing a TSP configured for an MPH (Part 2 of 2)

Prompt	Response	Comment
USID	0-15, ALL	User service identifier 0-15 = Removes a specified TSP from 0 to 15 ALL = Removes all TSPs for the specified DSL
REQ		

Printing a TSP configured for an MPH

Configuration information can be printed for a TSP configured for an MPH, based on characteristics such as user service identifier, service profile ID, and directory number.

LD 27 — Printing a TSP

Prompt	Response	Comment
REQ	PRT	Print an ISDN BRI component
TYPE	TSP	TSP
DSL	lll s cc dsl#	DSL location lll (superloop) = 0-156 (even number divisible by 4) s (shelf) = 0-1 cc (card) = 0-15 dsl# (DSL location) = 0-7 The DSL must have been configured using "DSL configuration procedures."
OPT	SPID, USID, SUID, DN, DNS, NTN <cr>	Print option. SPID = Prints the TSPs with the specified service profile ID USID = Prints the TSP with the specified user service id SUID = Prints the profile ID and the user service id map DN = Prints the TSPs with the specified directory numbers DNS = Prints all the directory numbers defined for the DSL NTN = Prints the TSPs that contain the specific NTN <cr> = Prints all the TSPs defined for the DSL
SPID	x...x	Enter a 1-20 digit alphanumeric service profile ID. This prompt appears only if OPT = SPID.
USID	0-15	User service identifier. This prompt appears only if OPT = USID.
DN	x...x y...y	Directory Number associated with the TSP and CLID entry in LD 15. This prompt appears only if OPT = DN.
NTN	1-10	NTN value (1-10 digits). This prompt appears only if OPT = NTN.
REQ		

Configuring a Permanent Virtual Circuit (PVC) connection for an MPH (optional)

The craftsperson may request the MPH to establish an internal PVC connection by entering two DNA numbers (NTN1 and NTN2) and their respective Logical Channel Numbers (LCN1 and LCN2).

An external PVC connection can be established with the entries of a DNA number (NTN1 and the unique DNIC used by the MPH), its associated Logical Channel Number (LCN1), the MPH network interface (NWIF) on which NTN1 resides, and the Logical Channel Number (LCN2) for the network interface.

The following procedures describe how to add or remove a PVC connection for an MPH, and how to print PVC information.

Note: No changes to the PVC are allowed.

LD 27 — Adding/changing PVC connection configuration (Part 1 of 3)

Prompt	Response	Comment
REQ	NEW	Add a new data set PVC connections are not allowed to be changed spontaneously. The user has to remove the currently defined PVC connection before using REQ = NEW to redefine it with a different configuration. No changes to PVC are allowed.
TYPE	PVC	To administer the PVC connection PVC is valid type only if package #248 for MPH has been activated. A warning message notifies the user at the end of the PVC configuration that the PVC connection is enabled only if the associated TSPs and MPH network interface are enabled.
MPH	0-158	Even loop number for the MPH MPH loop number is required to identify the MPH card on which these PVC connections are to be established.
PVCN	1-4	PVC connection number A maximum of 4 PVC connections is allowed for each MPH card

LD 27 — Adding/changing PVC connection configuration (Part 2 of 3)

Prompt	Response	Comment
XPVC	(YES), NO	YES = external PVC connection is selected NO = internal PVC connection is selected For an external PVC connection, the user may establish a PVC connection between NTN1 and the physical MPH network interface on which the NTN1 resides.
NWIF	1-3	MPH network interface identifier. NWIF prompted only if XPVC = YES. The network interface must be disabled if it is chosen to work with the configured PVC. Otherwise, an error message is printed.
NTN1	nn..nn	nn..nn = 1-10 digits NTN1 = The first NTN of the PVC connection. NTN1 must have been associated with a configured TSP or an error message is printed. If XPVC = YES, then the NTN1 must also exist in the DNA tables associated with the selected MPH network interface. Otherwise, an error message is printed.
LCN1	1-4095	PVC Logical Channel Number associated with NTN1. LCN1 must be chosen from the range of logical channels defined in the parameters configuration of the applicable TSP. If the selected logical channel is occupied by another PVC connection, then an error message is printed and the logical channel prompt is repeated.
NTN2	nn...nn	nn..nn = 1-10 digits NTN2 = The second NTN of an internal PVC connection. NTN2 is prompted only if XPVC = NO. The user has chosen to establish an internal PVC connection.

LD 27 — Adding/changing PVC connection configuration (Part 3 of 3)

Prompt	Response	Comment
LCN2	1-4095	PVC Logical Channel Number associated with the MPH network interface or NTN2. The Logical Channel Number selected is associated with NTN2 for internal PVC and the MPH network interface for external PVC. LCN2 must be chosen from the range of logical channels defined in the parameters configuration of the applicable TSP or the MPH network interface. If the selected logical channel is occupied by another PVC connection, then an error message is printed and the logical channel prompt is repeated.

LD 27 — Removing PVC connection configuration data

Prompt	Response	Comment
REQ	OUT	Remove an existing data set.
TYPE	PVC	To remove the PVC connection number.
MPH	0-158	Even loop number for MPH.
PVCN	1-4 <cr>	PVC connection number to be removed. <cr> = none If the selected PVC connection number does not exist, an error message is printed and the prompt PVCN is repeated.

LD 27 — Printing PVC connection configuration data

Prompt	Response	Comment
REQ	PRT	Print configuration data
TYPE	PVC	To print a PVC connection data.
MPH	0-158	Even loop number for MPH.
PVCN	1-4 <cr>	PVC connection data to be printed. <cr> = Print all PVC connection data. If the selected PVC connection number does not exist, an error message is printed and the PVCN prompt is repeated.

Configuring a tandem connection for an MPH (optional)

Use LD14 to configure trunk entries to allow an MPH to be used in a tandem connection between Meridian 1 systems. The new type, TCON, provides a Meridian 1 system access to PSDN through a dedicated connection in another Meridian 1 system. The Meridian 1 establishes a dedicated connection between an incoming ISDN PRI channel (IPRI) and an outgoing ISDN PRI channel (OPRI) in the intervening Meridian 1 system.

Up to 32 tandem connections can be configured in a system. The same loop and channel cannot be used for multiple TCON.

The PRI loop must have been configured in LD17. The PRI channel must have been configured for BRI packet data in LD 16 (tie trunk routes) and LD14 (tie trunks).

The procedures which follow describe how to add/change, remove and print an MPH tandem connection configuration, respectively.

LD14 — Add/change a tandem connection configuration

Prompt	Response	Comment
REQ	NEW/CHG	Add a data set REQ = CHG drops existing connection and rebuilds it using the new PRI channels. No disabling of the previous PRI channels is required.
TYPE	TCON	To administer the tandem connection TCON is independent of the ISDN BRI line application and does not require the ISDN BRI line package to be activated.
T_TN	III ch	III (0-159) = The PRI loop number ch (1-23) = The PRI channel on which the dedicated connection from the other PRI channel is terminated. Prompted if REQ = CHG Enter either end of the tandem PRI connection to be changed. If the connection exists, the two PRI loop-channels are displayed.
IPRI	III ch	Incoming PRI channel III (0-159) = The PRI loop number ch (1-23) = The PRI channel on which the dedicated connection from the outgoing PRI channel is terminated. The PRI loop must have been configured in LD17. The PRI channel must be configured for ISDN BRI packet data route using LD 16 and LD14. If the channel is not free, an error message is displayed and the prompt IPRI or OPRI appears again. Enter another PRI loop number and channel number or the same loop number with a free channel number. The PRI channel for IPRI and OPRI must be different or an error message is printed.
OPRI	III ch	Outgoing PRI channel III (0-159) = The PRI loop number ch (1-23) = The PRI channel on which the dedicated connection from the incoming PRI channel is terminated.

LD14 — Remove a tandem connection configuration

Prompt	Response	Comment
REQ	OUT	Remove an existing configuration data set.
TYPE	TCON	To administer the tandem connection.
T_TN	Ill ch	Enter either end of the tandem PRI connection to be changed. If the connection exists, the two PRI loop-channels are displayed. Ill (0-159) = The PRI loop number ch (1-23) = The PRI channel on which the dedicated connection from the other PRI channel is terminated.

LD14 — Printing a tandem connection configuration

Prompt	Response	Comment
REQ	PRT	Print an existing configuration data set.
TYPE	TCON	The tandem connection.
T_TN	Ill ch	Ill (0-159) = The PRI loop number ch (1-23) = The PRI channel on which the dedicated connection from the other PRI channel is terminated.
REQ	PRT	

Configuring Call Detail Recording for the MPH (optional)

The following procedures describe how to add CDR information for the MPH, using LD15 which configures the customer data block.

LD15 — Adding Call Detail Recording for the MPH

Prompt	Response	Comment
REQ	NEW, CHG, MOV	Add, change, or move a data set.
TYPE	CDB CDR_DATA	To administer the customer data block Call Detail Recording data (Release 21 gate opener).
..	..	..
IMPH	YES, (NO)	CDR for incoming packet data call to MPH from PSDN
OMPH	YES, (NO)	CDR for outgoing packet data call by means of the MPH to PSDN
AXID	YES, (NO)	Auxiliary Identification Output in CDR records
..	..	..

Initializing ISDN BRI terminals for an MPH

After configuring the TSPs, initialize the ISDN BRI terminals by entering the required parameter values at the terminal key pad or keyboard. The user manual shipped with each terminal provides instructions for initializing the terminal for a specific application.

Programming the M5317TDX for an external packet handler

I Getting into the Install Menu

- 1 Disconnect the line cord from the telephone for a few seconds, then reconnect.
- 2 Press and hold the Release key and the Hold key simultaneously until the display shows:

Select **ROM** to execute
BOOTROM MAINROM

- 3 Press the MAINROM softkey. After a few seconds, the display shows:
Select configuration menu
Install Network Lang Exit more...

II Configuration for packet data

- 1 From the above display, press Network. The display shows:
SPID TEI SPM X.25DN more...

- 2 Press the TEI softkey. The display shows:
Phone Data X25 ok

Note: MPH requires static TEI assignment.

- 3 Press the X.25 softkey.
- 4 Enter your 2 digit TEI and press OK.
- 5 Press the X.25DN softkey.
- 6 Press Clear to clear out any existing data.
- 7 Enter your X.25 address and press OK.
- 8 Press the more... softkey.
- 9 Press the Exit softkey.
- 10 Press the Exit softkey again.

III How to use your M5317TDX for packet data

- 1** You will be in the Main Menu after completing step 10 above. From the Main Menu, press the Setup softkey.
- 2** Press the Data softkey.
- 3** Select your Baud Rate, Character Size and Parity.
Note: You may use the defaults of 9600, 8 bits, no parity.
- 4** After setting these values, press the more... softkey.
- 5** Make sure the settings for DTR, CD HI, and RTS HI are all set to YES. Press the more... softkey.
- 6** Press the Data softkey until the display shows X25.
- 7** Press Pkt/Win until the display shows No Neg. This setting results in a packet/window size of 128/2 which is the MPH's default setting. If you know your terminal is configured for a packet or window size other than this, then press Pkt/Win until the display shows the appropriate setting.

For more details, refer to the M5317TDX Installation and maintenance guide.

Programming the M5209TDcp for packet data

- 1** Press the Hold and Release keys simultaneously until the Main Menu appears on the set display.
MAIN MENU
CONFIG
- 2** Press #.
ENTER PASSWORD
- 3** Dial ISDN and press # to enter configuration mode.
CONFIGURATION MENU
TEI
- 4** Press #.
ENTER TEI VOICE
AUTO
- 5** Press #.
ENTER TEI PSD
XXX

- 6 Enter your TEI and press #.
Note: MPH requires static TEI assignment.
- 7 Press #.
CONFIGURATION MENU
SPID
- 8 Press * until EXIT appears on the display. Press #.
MAIN MENU
RING
- 9 Press * until DATA appears on the display. Press #.
DATA MENU
MODE
- 10 Press #.
SELECT DATA MODE
PACKET
- 11 Press #.
DATA MENU
PARAMS
- 12 Press * until the profile you want to use appears on the display.
DATA MENU
SELECT 0

SELECT 0 selects PROF 90 profile.
SELECT 1 selects PROF 91 profile.
DEFAULT selects the factory default profile.
- 13 Press # to select the desired profile.
DATA MENU
EXIT
- 14 Press * until SAVE appears on the display.
DATA MENU
SAVE
- 15 Press # to save your changes.
- 16 Press #. Press # again.

Configuring ISDN BRI trunk access

Configuration order for ISDN BRI trunk access

You must configure the following components in the order listed below to configure ISDN BRI trunk access.

- 1** Configure an ISDN customer, using overlay 15.
- 2** Configure trunk pad tables, using overlay 73 (**optional**).

Note: The digital pad provides gain or attenuation values to condition the level of the digitized transmission signal according to the network loss plan. This determines transmission levels for the B-channel circuit-switched voice calls.

- 3** Configure the LAPD Protocol Group, using overlay 27.
- 4** Configure the ISDN BRI trunk route data block, using overlay 16.
- 5** Configure the MISP using overlay 27.
- 6** Configure the SILC and/or UILC card using overlay 27.
- 7** Configure trunk DSL, using overlay 27.
- 8** If the SILC clock is configured, enter the ISDN BRI trunk clock reference in overlay 73.

Defining a customer for a trunk

Define or change an ISDN BRI trunk access customer using the Customer Data Block (overlay 15).

LD15 — Defining a customer for a trunk

Prompt	Response	Comment
REQ	NEW,CHG	Define a new customer, or change an existing customer.
TYPE	CDB NET_DATA	Customer data block Networking Data (Release 21 gate opener)
CUST	0-99	Customer number
...	...	...
ISDN	YES	The customer is equipped with ISDN.
...	...	...

Configuring pad tables for a trunk (optional).

This is an optional procedure. Define the pad settings if required.

The digital pad provides gain or attenuation values to condition the level of the digitized transmission signal according to the network loss plan. This determines transmission levels for the B-channel circuit-switched voice calls.

LD 73 — Configuring pad tables (optional)

Prompt	Response	Comment
REQ	NEW	New settings
TYPE	DTI2/PRI2/ BRIL/BRIT	Pad table type. Enter BRIL
FEAT	PAD	Set the pad values used for ISDN BRIL
PDCA	1-16	Pad category table.
DFLT	(1)-16	PAD Category table. If one channel is using the specified table, then the command is aborted. Table 1 cannot be modified or deleted.
The following prompts define the pad levels. The receiving pad code is <i>r</i> and the transmission pad code is <i>t</i>. These entries have the range 0-26. The pad values (in decibels) relating to these codes are shown after this table.		
ONP	r ... t	On-premises extension
DSET	r ... t	Meridian Digital Set
OPX	r ... t	Off-premises extension
DTT	r ... t	Digital TIE trunks
SDTT	r ... t	Digital Satellite TIE trunks
NTC	r ... t	Nontransmission compensated
TRC	r ... t	Transmission compensated
DCO	r ... t	Digital COT, FEX, WAT, and DID trunks
VNL	r ... t	VIA NET LOSS

LD 73 — Configuring pad tables (optional)

DTO	r ... t	2Mb DTI digital TOLL office trunks
ACO	r ... t	Analog local exchange or WATS trunks
AFX	r ... t	Analog FEX trunks
ADD	r ... t	Analog DID trunks
SATT	r ... t	Analog satellite TIE trunks
ATO	r ... t	Analog TOLL office trunks
PRI2	r ... t	2Mb PRI trunk (prompted only if the 1.5/2Mb Gateway feature is equipped and TYPE=2Mb PRI)
XUT	r ... t	Analog local exchange trunk (prompted only if the 1.5/2Mb Gateway feature is equipped and TYPE=PRI2)
XEM	r ... t	Analog TIE trunk (prompted only if the 1.5/2Mb Gateway feature is equipped and TYPE=PRI2)
BRIT	r ... t	ISDN BRIT pad values. Valid inputs are 0-26. Refer to Table 3 .

[Table 3](#) shows ISDN BRI pad codes and their values. Positive dB represents loss and negative dB represents gain.

Table 3— ISDN BRI trunk pad codes and values

code	0	1	2	3	4	5	6	7
value (dB)	0.0	+1.0	+2.0	+3.0	+4.0	+5.0	+6.0	+7.0
code	8	9	10	11	12	13	14	15
value (dB)	+8.0	+9.0	+10.0	+11.0	+12.0	+13.0	+14.0	-1
code	16	17	18	19	20	21	22	23
value (dB)	-2	-3	-4	-5	-6	-7	-8	-9
code	24	25	26					
value (dB)	-10	idle	+0.6					

Configuring an LAPD a protocol group for a trunk

Add a Link Access Procedure on the D-channel (LAPD) protocol group, by using LD 27 and specifying its protocol group number. You may also change its LAPD parameters as needed or accept the default values. LAPD is a transmission protocol that specifies the transmission timers, the maximum number of retransmissions, the size of the data frame, and the number of negative acknowledgments allowed before the system issues an alarm.

LD 27 — Adding or changing an LAPD protocol group for a trunk

Prompt	Response	Comment
REQ	NEW	Add an ISDN protocol group
TYPE	LAPD	LAPD Protocol group
PGPN	0-15,<cr>	Protocol group number The values for this prompt are: 0-15=Adds a specified protocol group <cr>=Stops this prompt from being displayed again
LAPD	YES (NO)	LAPD parameters —The values for this prompt are: YES = Define or modify the LAPD parameters. (NO) = Does not prompt the LAPD parameters and assigns the default values shown in () to these parameters.
T200	(2)-40	Retransmission timer specifies the time delay before the system retransmits the information. Delay is in increments of 0.5 seconds.
T203	4-(20)-80	Maximum time between transmission frames Delay is in increments of 0.5 seconds.
N200	1-(3)-8	Maximum number of retransmissions of unsuccessfully transmitted information.
N201	4-(260)	Maximum number of contiguous octets or bytes of information.
K	(1)-32	Maximum number of outstanding negative acknowledgment (NAKs) allowed before alarming the system.
N2X4	0-(10)-20	For 1TR6 connectivity — number of status inquiries when the remote station is in peer busy state.
PGPN	<cr>	Press <cr> to prevent repetition of all the parameters starting with LAPD.

Removing an LAPD protocol group for a trunk

You can remove a protocol group as long as it is not assigned to a DSL. If a protocol group is assigned to a DSL, delete the DSL before removing the protocol group.

LD 27 - Removing an LAPD protocol group for a trunk

Prompt	Response	Comment
REQ	OUT	Remove an ISDN BRI component
TYPE	LAPD	Protocol group
PGPN	0-15, ALL,<cr>	Protocol group number 0-15 = Removes a specified protocol group from 0-15 ALL = Removes all protocol groups <cr> = No change the protocol group is not removed. A protocol group cannot be removed if it is assigned to a DSL.
...	...	

Printing a protocol group for a trunk

Configuration information for a specific protocol group or for all protocol groups can be printed.

LD 27 — Printing an LAPD protocol group for a trunk

Prompt	Response	Comment
REQ	PRT	Prints an ISDN BRI component
TYPE	LAPD	Protocol group
PGPN	0-15, <cr>	Protocol group number 0-15 = Prints a specified protocol group from 0-15 <cr> = Prints all protocol groups and the number of DSLs in each group
REQ		

Configuring ISDN BRI trunk route data block parameters

Route data block parameters for the ISDN BRI Trunk access capability are configured using LD 16.

LD 16 — Configuring ISDN BRI trunk route parameters (Part 1 of 7)

Prompt	Response	Comment
REQ	NEW	Add ISDN BRI protocol group settings
TYPE	RDB	Route data block.
CUST	0-99	Customer number.
DMOD	<cr>	Default model number for this route
ROUT	0-511	Route number.
TKTP	TIE COT DID	TIE trunk type. COT Central Office Trunk trunk type. Direct Inward Dialing trunk type.
RCLS	<cr>	Class marked route
DTRK	YES	Digital Trunk Route
BRIP	NO	ISDN BRI packet handler route (NO is entered, since packet data is not required).
DGTP	BRI	Digital trunk type. The input to TKTP must be either TIE, COT, or DID.
NASA	YES/(NO)	Network Attendant Service Interface.
MBGA	YES/(NO)	Multi Business Group interface on the D Channel.

LD 16 — Configuring ISDN BRI trunk route parameters (Part 2 of 7)

Prompt	Response	Comment
IFC		DCH interface type.
	(SL1)	SL1 = Meridian SL-1
	EURO	EURO = EuroISDN
	D100	D100 = Meridian DMS-100
	D250	D250 = Meridian DMS-250
	ESS4	ESS4 = AT&T ESS#4
	ESS5	ESS5 = AT&T ESS#5
	S100	S100 = Meridian SL-100
	SS12	SS12 = SYS-12 for Norway
	AXEA	AXE = Ericsson AXE-10 for Australia
	AXES	AXS = Ericsson AXE-10 for Sweden
	D70	D70 = Japan D70
	ISIG	ISIG = ISO QSIG
	ISGF	ISIG with GF platform
	ESIG	ESIG = ETSI QSIG
	ESGF	ESIG with GF platform
	1TR6	1TR6 = Germany 1TR6
	NUME	NUME = France Numeris
	TCNZ	TCNZ = Telecom New Zealand (NEAX-61) interface.
	APAC	Asia Pacific interface.
CNTY		Enter the country pertaining to the EuroISDN interface.
	AUS	Austria
	DEN	Denmark
	(ETSI)	ETS 300-102 basic protocol
	FIN	Finland
	GER	Germany
	ITA	Italy
	NOR	Norway
	POR	Portugal
	SWE	Sweden
	EIR	Ireland
	DUT	Holland
	SWI	Switzerland
	BEL	Belgium
	ESP	Spain
	UK	United Kingdom
	FRA	France
	CIS	Commonwealth of Independent States (Russia and the Ukraine).

- continued on next page -

LD 16 — Configuring ISDN BRI trunk route parameters (Part 3 of 7)

Prompt	Response	Comment
CNTY (cnt'd.)		Enter the country pertaining to the Asia Pacific interface.
	AUST	Australian interface.
	CHNA	China interface.
	HKNG	Hong Kong interface.
	INDO	Indonesia interface.
	JAPN	Japan interface.
	MSIA	Malaysia interface.
	SING	Singapore interface.
	TCNZ	New Zealand interface
	THAI	Thailand interface.
..		
CDR	(NO), YES	YES = CDR on route (NO) = No CDR on trunk route
		If answer supervision is defined for the trunk, CDR records will only be generated on call completion.
...		
CLID	OPT4	OPT4 is the CLID default for the Asia Pacific interface.
PROG		Progress signal.
	NCHG	No Change. This is the default for all Asia Pacific interfaces except Japan and Australia.
	MALE	Alert message. This is the default for the Japan interface.
	MCON	Connect message. This is the default for the Australia interface.
...		
CPFXS	NO (YES)	Customer-defined Prefixes option.
		If CPFXS = NO, when constructing the Calling or Connected Line Identification, the prefixes are retrieved from the Route Data Block via the HNTN and HLCL prompts which follow.
		Enter NO for APAC.
		If CPFXS = YES, when constructing the Calling or Connected Line Identification, the prefixes are retrieved from the Customer Data Block via the HNTN and HLCL prompts in LD 15, as is currently done. This is the default response.

LD 16 — Configuring ISDN BRI trunk route parameters (Part 4 of 7)

Prompt	Response	Comment
HNTN	0-9999	This prompt applies to APAC only if CPFXS = NO. Home National Number. This number is similar to the PFX1 number prompted in LD 15. It is added to this overlay so that this prefix can be configured on a route basis. As is the case with PFX1, the HNTN prefix can be from one-to-four digits long.
HLCL	0-9999	This prompt is applies to APAC only if CPFXS = NO. Home Location Number. This number is similar to PFX2 number prompted in LD 15. It is added to this overlay so that this prefix can be configured on a route basis. As is the case with PFX2, the HLCL prefix can be from one-to-four digits long.
...		
OTL	(NO), YES	YES = CDR on outgoing toll calls (NO) = No CDR on outgoing toll calls.
...		
OAN	(NO), YES	YES = CDR on all answered outgoing toll calls (NO) = No CDR on all answered outgoing toll calls
MR	DURC ENDC STAC	Allow Advice of Charge for EuroISDN, Japan D70, or Australia (for Asia Pacific interface). DURC = Activation of the AOC-D subservice ENDC = Activation of the AOC-E subservice STAC = Activation of the AOC-S subservice.
RUCS	0 - 9999	Route unit cost. This prompt does not appear for Denmark or Sweden.
RURC	0 - 9999 (0) - 3	Route unit reference cost. Note that the formula for the route unit reference cost is: $X \cdot 10^{(-Y)}$. where $X = 0 - 9999$ $Y = 0 - 3$ The default value of X is identical to the previously entered RUCS value. This prompt does not appear for Denmark or Sweden.

LD 16 — Configuring ISDN BRI trunk route parameters (Part 5 of 7)

Prompt	Response	Comment
RUCF	0 - (1) - 9999 (0) - 3	Route unit conversion factor. This prompt does not appear for Denmark or Sweden.
...	...	...
MCTS	YES	Enable Malicious Call Trace signaling for AUST or TCNZ.
- MCTM	(0)-30	Malicious Call Trace request timer is defined in seconds. This is the disconnection delay which is used. It overrides T306 for calls to/from Malicious Call Trace capable sets (Australia only).
MTND	(NO), YES	Malicious Call Trace disconnect delay for tandem calls (Australia only).
...		
SIDE	NET/USR	Meridian SL-1 node type (either network or user), prompted only if IFC = SL1. If IFC is not SL-1, it defaults to USR. If IFC is SL1, it defaults to NET. Note: SIDE cannot be changed from NET to USR if NT mode members exist on the route; NT mode DSLs must be on NET side.
CNEG	YES/(NO)	Channel Negotiation option, prompted only for local exchange connectivity, that is, if IFC = 1TR6, NUME, D70, or APAC.
...	...	...
PGPN	0-15	Protocol Group, as defined previously in overlay 27. PGPN cannot be changed without disabling all ISDN BRI trunk members associated with this route.

LD 16 — Configuring ISDN BRI trunk route parameters (Part 6 of 7)

Prompt	Response	Comment
RCAP		Remote D-Channel capabilities. Enter X followed by the option to remove the configured capability. This prompt is repeated until <cr> is entered.
	NCT	NCT = Network Call Trace
	RVQ,	RVQ = Remote Virtual Queueing
	ND1	ND1 = Network Name Display 1
	ND2	ND2 = Network Name Display 2
	NAS	NAS = Network Attendant Service
	BRI	BRI = allows ISDN line/trunk interworking)
	COLP	COLP = Connected Line ID supplementary service (for APAC Indonesia only).
	DV1I	These are QSIG SS Call Diversion Notification remote capability responses, used to configure sending of QSIG Diversion Notification Information, treatment of Rerouting request and coding of operations. If coded as Object Identifier, the remote capability ends with 'O', whereas for Integer Value, the remote capability ends with 'I'. Only one remote capability is allowed.
	DV1O	
	DV2I	
	DV2O	
	DV3I	
	DV3O	
		Refer to Table 4, "Remote Capability Meanings for ISDN BRI routes," on page 153 for more information.
...	...	...
TIMR	YES	Set programmable timers.
T310	10-(30)-60	Maximum time in seconds between an incoming CALL PROCEEDING message and the next incoming message. Not supported for Australia. Default values are as follows: CHNA = 30 seconds. HKNG = 10 seconds. INDO = 10 seconds. JAPN = 10 seconds. MSIA = 10 seconds. SING = 10 seconds. TCNZ = 10 seconds. THAI = 10 seconds.

LD 16 — Configuring ISDN BRI trunk route parameters (Part 7 of 7)

Prompt	Response	Comment
INC_T306	0-(2)-T306	Variable timer for received DISCONNECT message on incoming calls allowing in-band tone to be heard when the network sends in-band tone. T306 is the duration of the network timer in seconds. The network will stop sending after T306 times out, so the maximum time will be T306. The value is stored in two-second increments, which are rounded up. T306 can be defined up to 30 seconds for all APAC interfaces except Australia, which can have T306 defined up to 60 seconds.
OUT_T306	0-(30)-T306	Variable timer for received DISCONNECT message on outgoing calls allowing in-band tone to be heard when the network sends in-band tone. T306 is the duration of the network timer in seconds. The network will stop sending after T306 times out, so the maximum time will be T306. The value is stored in two-second increments, which are rounded up. T306 can be defined up to 30 seconds for all APAC interfaces except Australia, which can have T306 defined up to 60 seconds.
...	...	...
OVLR	YES/(NO)	Overlap Receiving Allow/Disallow OVLR will not be prompted if IFC = NUME; it will default to NO. For APAC, it will be prompted CNTY = THAI, MSIA, INDO, or CHNA.
DIDD	(0)-15	Number of leading digits that are ignored for DID calls during Overlap Receiving.
OVLS	YES/(NO)	Overlap Sending Allow/Disallow OVLS will not be prompted if IFC = NUME; it will default to NO. For APAC, it will be prompted only if CNTY = JAPN
OVLT	(0)-8	Inter-INFO timer during Overlap Sending.
...		

Table 4
Remote Capability Meanings for ISDN BRI routes

Remote capability	Meaning for Operation Coding	Meaning for Notification Informations	Meaning for Rerouting request
None of the following remote capabilities.	Not applicable (nothing sent)	Not <u>sent</u>	Not processed when <u>received</u>
DV1O	<u>Sent</u> coded as Object Identifier	<u>Sent</u>	Not processed when <u>received</u>
DV1I	<u>Sent</u> coded as Integer Value		
DV2O	<u>Sent</u> coded as Object Identifier	Not <u>Sent</u>	Processed when <u>received</u>
DV2I	<u>Sent</u> coded as Integer Value		
DV3O	<u>Sent</u> coded as Object Identifier	<u>Sent</u>	Processed when <u>received</u>
DV3I	<u>Sent</u> coded as Integer Value		

When using Table 4 consider the following:

- Only nodes subject to be Originating, Served, Diverted or Rerouting nodes with respect to QSIG Call Diversion Notification need to have diversion remote capability configured. Transmit nodes pass the information transparently.
- When choosing the Operation Coding Choice, the interface type should be considered. When the QSIG interface used is ISO (IFC ISGF), operations are mostly coded with Integer Values.

Only one remote capability allows the QSIG Diversion configuration on an ISDN BRI route. This remote capability gathers the three following possibilities for the route:

- coding of operations sent to the remote switch, which can be coded as either as Object Identifier or as Integer Value. If coded as Object Identifier, the remote capability ends with as 'O', whereas for Integer Value, the remote capability ends with as 'I'. This means that remote capabilities explained below in 2 and 3 are defined twice.
- sending of QSIG Diversion Notification Information to the remote switch: these informations are sent only if the remote capability is of first or third type, i.e. DV1x or DV3x, where the x is either 'I' or 'O' as explained in 1.
- treatment of Rerouting requests received from the remote switch: a rerouting request is only processed if the remote capability is of second or third type, i.e. DV2x or DV3x, where x is either 'I' or 'O' as explained above.

Configuring a MISP for a trunk

To add or change a MISP for a trunk, specify its even loop number.

The MISP must be enabled by using the **ENLL I** command in Network and IPE Diagnostic Program LD 32.

LD 27 — Adding or changing a MISP for a trunk

Prompt	Response	Comment
REQ	NEW, CHG	Add or change a MISP
TYPE	MISP	MISP
LOOP	0-158	MISP lop number; must be an even number, with the next odd loop number unequipped.
APPL	BRIT,BRIE, XBRIT,XBRIE	Application type for the DSL. Enter BRIT for ISDN BRI trunking. BRIT is entered if the interface type (IFC) entered in LD 16 is one of the following: SL1 = Meridian SL-1 EURO = EuroISDN SS12 = SYS-12 for Norway AXE = Ericsson AXE-10 for Australia AXS = Ericsson AXE-10 for Sweden D70 = Japan D70 ISIG = ISO QSIG ISGF = ISIG with GF platform ESIG = ETSI QSIG ESGF = ESIG with GF platform 1TR6 = Germany 1TR6 NUME = France Numeris TCNZ = Telecom New Zealand (NEAX-61) interface. Asia Pacific interface.

LD 27 — Adding or changing a MISP for a trunk

		Enter BRIE for Enhanced ISDN BRI trunking. BRIE is entered if the interface type (IFC) entered in LD 16 is one of the following: ISIG = ISO QSIG ISGF = ISIG with GF platform ESIG = ETSI QSIG ESGF = ESIG with GF platform Asia Pacific (APAC). Enter XBRIE to remove BRIE. APPL is prompted until <cr> is entered.
DSPD	YES, (NO)	YES = D-channel Packet Switched Data (NO) = No D-channel Packet Switched Data. Use the default value (NO). Subsequent prompts will be skipped.
...	...	

Removing a MISP configured for a trunk

Remove a MISP which has been configured for a trunk by specifying its loop number. Before removing the MISP, remove all DSLs connected to SILCs and UILCs associated with the MISP.

Disable the MISP loop with the **DISL I** command in LD 32.

LD 27 — Removing a MISP configured for a trunk

Prompt	Response	Comment
REQ	OUT	Remove an ISDN BRI component
TYPE	MISP	MISP
LOOP	0-158	Loop number Must be an even number. The MISP must be disabled before removing it. All BRSCs and SILC and/or UILC DSLs associated with the MISP must be removed before removing the MISP. See the section "Removing a SILC or UILC configured for a trunk" found later in this chapter.
REQ		

Printing a MISP configured for a trunk

Print the configuration information for a MISP which has been configured for a trunk by specifying its network loop number. If the MISP network loop number is not known, use LD 22 to print the system configuration.

LD 22 — Printing a MISP configured for a trunk

Prompt	Response	Comment
REQ	PRT	Prints an ISDN BRI component
TYPE	MISP	Print the MISP data.
LOOP	0-158	Network loop number for the MISP (must be an even number.)
	<cr>	Print all MISPs in system.
REQ		

Configuring a SILC or UILC for a trunk

Add or change a new SILC or UILC for trunk access by specifying its location, card type, and the MISP network loop that this card uses to transmit and receive signaling.

This step may be skipped and the card type specified when configuring the DSL in “Adding a DSL for a trunk.” The following procedure is used when configuring the SILC or UILC cards without configuring their DSLs.

LD 27 — Adding or changing a SILC or UILC for a trunk

Prompt	Response	Comment
REQ	NEW, CHG	Add or change a SILC or UILC line card
TYPE	CARD	SILC or UILC line card
TN	Ill s cc	Card location The values for this prompt are: Ill (loop)=0-156 (must be an even number, divisible by 4) s (shelf)=0-1 cc (card)=0-15
MISP	0-158	Loop number Must be an even number that has already been configured.
CTYP	SILC,UILC	Card type to be added or changed. Remove any DSLs configured for this line card before changing the card type.

Removing a SILC or UILC configured for a trunk

Remove a SILC or UILC which has been configured for a trunk by specifying its card location. Before removing the SILC or UILC, all configured DSLs must first be removed from the card by using the “Removing a DSL configured for a trunk” procedure. When the last DSL is removed, the card is automatically deleted.

When removing the card, the database information is also deleted from the data block. Use LD 20 to list cards that have been removed.

LD 27 — Removing a SILC or UILC configured for a trunk

Prompt	Response	Comment
REQ	OUT	Remove an ISDN BRI component
TYPE	CARD	ISDN BRI line card
TN	III s cc	Card location III (superloop) = 0-156 (must be a, even number, divisible by 4) s (shelf) = 0-1 cc (card) = 0-15 Remove any DSLs that are configured for this card before removing the card.
...	...	

Printing a SILC or UILC configured for a trunk

To print the configuration information for a SILC or UILC which has been configured for a trunk, specify its card location.

LD 27 — Printing a SILC or UILC configured for a trunk

Prompt	Response	Comment
REQ	PRT	Print an ISDN BRI component
TYPE	CARD	ISDN BRI line card
TN	III s cc	Card location III (superloop) = 0-156 (must be a, even number, divisible by 4) s (shelf) = 0-1 cc (card) = 0-15
...	...	

Configuring a DSL for a trunk

To add or change a DSL for trunk access, specify its port location and its DSL characteristics. DSL location specifies a SILC/UILC port connected to a DSL.

You can change the characteristics of a DSL by changing one or more parameters to adapt it to new transmission or feature requirements. If you wish to skip a parameter, press the Enter key and the next prompt will appear. The DSL must be idle or disabled before making a change. Use the **STAT Is c dsl#** and **DISU Is c dsl#** commands in LD 32 to query the status of the DSL and to disable it.

LD 27 — Adding or changing a DSL for a trunk (Part 1 of 4)

Prompt	Response	Comment
REQ	NEW,CHG	Add or change a DSL
TYPE	DSL	DSL
DSL	lll s cc dsl#	DSL location lll (superloop) = 0-156 (must be zero or a number divisible by 4) s (shelf) = 0-1 cc (card) = 0-15 dsl# (DSL location) = 0-7
APPL	BRIT,BRIE, XBRIE,XBRIE	Application type for the DSL. Enter BRIT for ISDN BRI trunking. BRIT is entered if the interface type (IFC) entered in LD 16 is one of the following: SL1 = Meridian SL-1 EURO = EuroISDN SS12 = SYS-12 for Norway AXE = Ericsson AXE-10 for Australia AXS = Ericsson AXE-10 for Sweden D70 = Japan D70 ISIG = ISO QSIG ISGF = ISIG with GF platform ESIG = ETSI QSIG ESGF = ESIG with GF platform 1TR6 = Germany 1TR6 NUME = France Numeris TCNZ = Telecom New Zealand (NEAX-61) interface. Asia Pacific interface.

LD 27 — Adding or changing a DSL for a trunk (Part 2 of 4)

Prompt	Response	Comment
		Enter BRIE for Enhanced ISDN BRI trunking. BRIE is entered if the interface type (IFC) entered in LD 16 is one of the following: ISIG = ISO QSIG ISGF = ISIG with GF platform ESIG = ETSI QSIG ESGF = ESIG with GF platform Asia Pacific (APAC). Enter XBRIE to remove BRIE. APPL is prompted until <cr> is entered.
CUST	0-99	Customer number
CTYP	SILC, UILC	The card type (enter SILC or UILC as appropriate).
MISP	0-158	Loop number (must be an even number of an already configured MISP).
MODE	TE/NT	The mode for the trunk DSL. TE is entered for Terminal Equipment, NT is used for Network Termination. This prompt is displayed only if SILC was specified as the card type. For UILC, this entry defaults to NT mode. For SILC, the default is TE. Note: The mode cannot be changed from TE to NT if the clock on the DSL is referenced in the Digital Data Block or the DTI2/PRI2 system data. The reference must be first removed. If the mode is changed to NT, CLOK will be set to NO.
MTFM	YES/(NO)	Enable/Disable multi-frame option, prompted only for TE mode DSLs. If enabled this prompt allows you to receive more diagnostic messages.
TKTP	TIE/COT/DID	Trunk type

LD 27 — Adding or changing a DSL for a trunk (Part 3 of 4)

Prompt	Response	Comment
CLOK	YES/(NO)	Whether this trunk DSL is provisioned for clock source. This prompt appears if the following conditions are met: - the card type is SILC - the DSL# is 0 or 1 - the trunk DSL has been defined as TE mode Note: The clock prompt cannot be changed from YES to NO if the clock on the DSL is referenced in the Digital Data Block or the DTI2/PRI2 system data. The reference must be first removed. Also, you cannot out a trunk DSL if an active clock exists on it and is referenced in the Digital Data Block or the DTI2/PRI2 system data; this reference must be first removed.
PDCA	(1)-16	Pad table number (previously configured in LD 73) to be associated with this DSL
ROUT	0-511	Route number for the trunk DSL. The specified route must match the ISDN BRI route type as well as the trunk type specified at the TKPT prompt. If the DSL is in the NT mode (MODE = NT in LD 27), the entered route must be on the network side (SIDE = NET in LD 16).
B1	YES/(NO)	Configure B Channel 1. If REQ = NEW, a response to this prompt is not required, because B1 parameters are mandatory. The system will automatically display the prompts that follow. If REQ = CHG and ROUT was changed, B1 will automatically be YES, since a new member number must be entered.
MEMB	1-254	Route member number to be associated with B-channel 1.
TGAR	(0)-31	Trunk Group Access Restriction.
NCOS	(0)-99	Network Class of Service Group Number

LD 27 — Adding or changing a DSL for a trunk (Part 4 of 4)

Prompt	Response	Comment
CLS		Class of Service options. (APN) APN = ACD Priority not allowed APY APY = ACD Priority allowed (UNR) UNR = Unrestricted (default) CTD CTD = Conditionally Toll Denied (valid for TIE trunks only) CUN CUN = Conditionally Unrestricted (valid for TIE trunks only) FR1 FR1 = Fully Restricted class 1 (valid for TIE trunks only) FR2 FR2 = Fully Restricted class 2 (valid for TIE trunks only) FRE FRE = Fully Restricted (valid for TIE trunks only) SRE SRE = Semi-Restricted (valid for TIE trunks only) TLD TLD = Toll Denied (valid for TIE trunks only). MRA MRA = Message Registration Allowed (assigning meters to (MRD) ISDN BRI sets, for Advice of Charge for EuroISDN, APAC PGNA (Australia and Japan), or Australia-AXE and Japan D70. (PGND) MRD = Message registration denied. PGNA = Call Page Network Wide Allowed. (PGND) = Call Page Network Wide Denied. Input is accepted until <cr> is entered.
B2	YES/(NO)	Configure B Channel 2. If REQ = NEW, and the default of NO is entered to this prompt, all parameters entered for B1 will be applied to B2, except the route member number will be an unused value. The message "B2 will use Route # Member #" will be displayed. If REQ = CHG, if NO is entered and ROUT was changed, all parameters for B2 will remain the same except that the route member will be an unused member number. The message "B2 will use Route # Member #" will be displayed.
MEMB	1-254	Route member number to be associated with B-channel 2.
TGAR	(0)-31	Trunk Group Access Restriction.
NCOS	(0)-99	Network Class of Service Group Number

Removing a DSL configured for a trunk

Remove a DSL which has been configured for a trunk by specifying its location. When the last configured DSL on a card is removed, all active calls are dropped.

The DSL must be idle or disabled before being removed. Use the **STAT l s c dsl#** and **DISU l s c dsl#** commands in LD 32 to query the status of the DSL and to disable it.

LD 27 — Removing a DSL configured for a trunk

Prompt	Response	Comment
REQ	OUT	Remove an ISDN BRI component
TYPE	DSL	DSL
DSL	lll s cc dsl#	DSL location lll (superloop) = 0-156 (must be a number divisible by 4) s (shelf) = 0-1 cc (card) = 0-15 dsl# (DSL location) = 0-7
...	...	

Printing a DSL configured for a trunk

Print the configuration information for a single DSL by specifying its location.

LD 27 — Printing a DSL configured for a trunk

Prompt	Response	Comment
REQ	PRT	Print an ISDN BRI component
TYPE	DSL	DSL
DSL	lll s cc dsl#, lll s cc, lll s, lll	DSL information lll s cc dsl# = Prints information for the specified dsl# lll s cc = Prints information for DSLs on the specified card lll s = Prints information for DSLs in the specified shelf lll = Prints information for DSLs on the specified loop
...	...	

Configuring trunk clock reference source

In the case where an ISDN BRI trunk is providing a reference clock source to the system clock controller, the Digital Data Block (overlay 73) must be modified as follows.

Note: .Clock signalling is only supported on DSL1 and DSL2.

LD 73 — Configuring trunk clock reference source, for 1.5 Mb PRI/DT

Prompt	Response	Comment
REQ	NEW	New settings.
TYPE	DDB	Digital data block.
PREF	I	Loop number of the primary clock source from a PRI/DTI loop pack.
	I s c	Location of the primary clock source from a ISDN BRI SILC pack (DSL0).
SREF	I	Loop number of the secondary clock source from a PRI/DTI loop pack.
	I s c	Location of the secondary clock source from a ISDN BRI SILC pack (DSL1).
		PREF SILC may be different than SREF SILC when it is providing the reference clock source.
...	...	...

Note: Clock signalling is only supported on DSL1 and DSL2.

LD 73 — Configuring trunk clock reference source, for 2.0 Mb PRI/DTI

Prompt	Response	Comment
REQ	NEW	New settings.
TYPE	DTI2/PRI2	Digital system data block.
FEAT	SYTI	Digital system timers and counter (only one set per system).
...	...	...
PERS	0-(100)-256	Persistence timer for group II problems.
PREF CK0	I	Loop number of the primary reference clock for Clock Controller 0, from a PRI2/DTI2 loop pack.
	I s c	Location of the primary reference clock for Clock Controller 0, from an ISDN BRI SILC pack (DSL0).
PREF CK1	I	Loop number of the primary reference clock for Clock Controller 1, from a PRI2/DTI2 loop pack.
	I s c	Location of the primary reference clock for Clock Controller 1, from an ISDN BRI SILC pack (DSL0).
SREF CK0	I	Loop number of the secondary reference clock for Clock Controller 0, from a PRI2/DTI2 loop pack.
	I s c	Location of the secondary reference clock for Clock Controller 0, from an ISDN BRI SILC pack (DSL1).
SREF CK1	I	Loop number of the secondary reference clock for Clock Controller 1, from a PRI2/DTI2 loop pack.
	I s c	Location of the secondary reference clock for Clock Controller 1, from an ISDN BRI SILC pack (DSL1). PREF SILC may be different than SREF SILC when it is providing the reference clock source.
...	...	...

Configuration procedures for ISDN BRI features

This section describes the procedures that should be used when configuring the following ISDN BRI features:

- ISDN BRI National ISDN-1 Conference
- ISDN BRI ETSI Call Forwarding Unconditional
- ISDN BRI ETSI Conference
- ISDN BRI National ISDN-1 Call Forward All Calls
- ISDN BRI Connected Line Presentation/Restriction
- NI-1 BRI Compliance Enhancements

Configuring ISDN BRI National ISDN-1 Conference

The following steps should be used to configure ISDN BRI National ISDN-1 Conference:

- 1 Configure National ISDN-1 protocol for a DSL using LD 27.
- 2 Configure Conference in the TSP using LD 27.

LD 27 – Configuring National ISDN-1 for a DSL

Prompt	Response	Description
REQ	NEW/CHG	New, or change.
TYPE	DSL	Digital Subscriber Loop.
DSL	lll s c dsl#	DSL address.
...		
PRID	6	Protocol Identification. Enter 6 for NI-1.
FDN	nnnnnnn	Flexible Call Forward No Answer DN.
...		

LD 27 – Configuring Conference in the TSP.

Prompt	Response	Description
REQ	NEW/CHG	New, or change.
TYPE	TSP	Terminal Service Profile.
DSL	Ill s c dsl#	DSL address.
...		
FEATID	aaa mmm nnn Xmmm <cr>	Feature ID (must be unique for a TSP), where: aaa = feature; enter AO6 for six-party conference (up to 30 parties can be conferenced, but it is not recommended), or AO3 for three-party conference. mmm = feature activation ID (1-127). nnn = feature indication ID (1-127). Xmmm = delete feature. <cr> = skip feature ID definition (aaa mmm nnn is re-prompted until <cr> is entered).
...		

Configuring ISDN BRI ETSI Call Forwarding Unconditional

The following steps should be used to configure ISDN BRI Call Forwarding Unconditional:

- 1 Configure ETSI protocol for a DSL using LD 27.
- 2 Configure an ISDN BRI terminal using LD 27.

LD 27 – Configuring ETSI protocol for a DSL.

Prompt	Response	Description
REQ	NEW	New.
TYPE	DSL	Digital subscriber loop.
DSL	Ill s c dsl#	DSL address.
...		
PRID	2	Protocol Identification. Enter 2 for ETSI.
...		

LD 27 – Configuring an ISDN BRI terminal.

Prompt	Response	Description
REQ	NEW	Enter new data.
TYPE	TSP	Terminal Service Profile.
DSL	lll s c dsl#	DSL address (as already entered in step 1).
USID	(0)-15	User service identifier. 0 = default TSP.
MPHC	NO	This TSP is not configured for a Meridian 1 Packet Handler.
SPID	aaa...a <cr> Xaaa...a	Service profile ID aaa...a = any combination of 1-20 alphanumeric characters. <cr> = Stops this prompt from being displayed again. A maximum of 8 valid SPIDs per TSP are allowed. Xaaa...a removes the specified SPID. This prompt appears only if USID = 1-15. It repeats until <cr> is entered, but only up to 8 SPIDs may be entered. This SPID must be entered in the initializing terminal to associate the terminal with a USID.
DN	xxxx (0)-N	xxxx = DN to be associated with the TSP. (0)-N = CLID entry, with N = CLID SIZE-1 (SIZE defined in LD 15).
CT	VCE DTA	Call type (enter VCE for voice or DTA for data).
...		
FEAT	CFXA	Allow Call Forward External for the DN.
SSRV_ ETSI	VCFW DCFW	For voice call type, enter VCFW for Voice Call Forward. For data call type, enter DCFW for Data Call Forward.
...		

Configuring ISDN BRI ETSI Conference

The following steps should be used to configure ISDN BRI ETSI Conference:

- 1 Configure ETSI protocol for a DSL using LD 27.
- 2 Configure Conference in the TSP using LD 27.

LD 27 – Configuring ETSI protocol for a DSL.

Prompt	Response	Description
REQ	NEW/CHG	New, or change.
TYPE	DSL	Digital Subscriber Loop.
DSL	Ill s c dsl#	DSL address.
...		
PRID	2	Protocol Identification. Enter 2 for ETSI.
	(WTA), WTD	Enter WTD for Warning Tone Denied (Warning Tone Allowed has to be overridden).
...		

LD 27 – Configuring Conference in the TSP.

Prompt	Response	Description
REQ	NEW/CHG	New, or change.
TYPE	TSP	Terminal Service Profile.
DSL	Ill s c dsl#	DSL address (as already entered in step 1).
...		
SUPL_ SVC	AO6 AO3	AO6 = six-party conference (up to 30 parties can be conferenced, but it is not recommended). AO3 = three-party conference.
...		

Configuring ISDN BRI National ISDN-1 Call Forward All Calls

The following steps should be used to configure ISDN BRI National ISDN-1 Call Forward All Calls:

- 1 Configure National ISDN-1 protocol for a DSL using LD 27.
- 2 Configure Call Forward All Calls in the TSP using LD 27.

LD 27 – Configuring National ISDN-1 protocol for a DSL.

Prompt	Response	Description
REQ	NEW	New.
TYPE	DSL	Digital Subscriber Loop.
DSL	Ill s c dsl#	DSL address.
...		
PGPN	1	Protocol set group number.
PRID	6	Protocol identification. Enter 6 for National ISDN-1.
...		

LD 27 – Configuring Call Forward All Calls in the TSP.

Prompt	Response	Description
REQ	NEW,CHG	New or Change.
TYPE	TSP	Administer the Terminal Service Profile on the DSL.
DSL	Ill s c dsl#	DSL address (as already entered in step 1).
...		
DN	xxxx (0)-N	xxxx = DN to be associated with the TSP. (0)-N = CLID entry, with N = CLID SIZE-1 (SIZE defined in LD 15).
...		
FEAT	CFXA	Allow Call Forward External for the DN.
SSRV_NI	VCFA 15 16	Feature identifiers for Call Forward voice activation.
	VCFD 15 16	Feature identifiers for Call Forward voice deactivation.
	DCFA 16 26	Feature identifiers for Call Forward data activation.
	DCFD 17 27	Feature identifiers for Call Forward data deactivation.
...		

Configuring ISDN BRI Connected Line Presentation/Restriction

The following steps should be used to configure ISDN BRI Connected Line Presentation/Restriction:

- 1** Configure COLP/COLR on ISDN Basic Rate Interface terminals, using LD 27.
- 2** Configure Connected Line Presentation/Restriction for a Digital Subscriber Loop, using LD 27.

LD 27 – Configuring COLP/COLR for ISDN BRI terminals.

Prompt	Response	Description
REQ	CHG	Change.
TYPE	TSP	Terminal Service Profile Data.
...		
DN	xxx...x	Directory Number (1 to 7 digits) of ISDN BRI terminal.
- CLIP	(YES), NO	Calling Line Identification Presentation for Incoming Calls.
- PRES	(YES), NO	Presentation of Calling Line Identification to far end on outgoing calls (allowed) restricted.
- COLP	(NO), YES	YES = Connected, number is passed from Meridian 1 to ISDN BRI terminal. NO = Connected, number is not passed from Meridian 1 to ISDN BRI terminal.
- TRANS	(NO), YES	YES = Connected, number is transmitted to the ISDN BRI terminal as received with no modification. NO = Connected, number is transmitted to the BRI terminal after erasing digits within information element. TRANS is only applicable if the connected number received has presentation restricted.

LD 27 – Configuring Connected Line Presentation/Restriction for a DSL.

Prompt	Response	Description
REQ	CHG	Create new data block.
TYPE	DSL	Digital Subscriber Loop.
DSL	I s c dsl	Digital Subscriber Loop address.
USID	x	User Service Identifier.
...		
PRID	2	Protocol Identification. Where: 2 = ETSI is only supported.

Configuring NI-1 BRI Compliance Enhancements

The following steps should be used to configure NI-1 BRI Compliance Enhancements:

- 1 Administer the TSP for a DSL using LD 27.
- 2 Configure the NI-1 protocol for a DSL using LD 27.

LD 27 – Administer the Terminal Service Profiles (TSPs) on a Digital Subscriber Loop (DSL).

Prompt	Response	Description
REQ	NEW CHG	Add a TSP. Change a TSP.
TYPE	TSP	Administer the TSP on a DSL.
DSL	lll s cc dsl#	DSL location. For Options 51C-81C: lll (superloop) = 0-156 (must be a number divisible by 4) s (shelf) = 0-1 cc (card) = 0-15 dsl# (DSL location) = 0-7
USID	0-15	User service identifier Set USID = 0 to configure a default TSP for non-initializing terminals. Set USID = 1-15 for initializing terminals, for example, the M5317TDX.
SPID	aaa...a <cr> Xaaa...a	Service profile ID aaa...a = any combination of 1-20 alphanumeric characters. <cr> = Stops this prompt from being displayed again. A maximum of 8 valid SPIDs per TSP are allowed. This prompt appears only if USID = 1-15 (if 0 was entered for the USID, a SPID is not required). This SPID must be programmed in the initializing terminal to associate the terminal with a USID. Refer to the note which follows on page 178 . Xaaa...a = removes the specified SPID.
...		

Note: The ISDN BRI terminal requires that Layer 2 and Layer 3 parameters be programmed at the terminal. When programming the SPID, the voice SPID and data SPID should each match the one entered in LD 27 when administering the TSP which contains the terminal's DN. Also, if the terminal has an option to select the standard protocol, select the NI-1 standard. Refer to your terminal documentation for complete instructions.

LD 27 – Configure the NI-1 protocol for a DSL.

Refer to the note above pertaining to selecting the NI-1 protocol on the ISDN BRI terminals.

Prompt	Response	Description
REQ	NEW CHG	Add a TSP. Change a TSP.
TYPE	DSL	Administer the DSL.
DSL	lll s cc dsl#	DSL location. For Options 51C-81C: lll (superloop) = 0-156 (must be a number divisible by 4) s (shelf) = 0-1 cc (card) = 0-15 dsl# (DSL location) = 0-7
...		
PRID	6	Defines the protocol to be used on the DSL. Enter 6 for NI-1. The values for this prompt are: 1=ANSI 2=ETSI 3=DMS 4=NET64 5=NUMERIS 6=NI-1
...		


Sample configurations

This chapter provides typical examples of how to configure a line application, an external and integrated packet handler, and a trunk access application.

Example one: configuring a line application

This example shows how to configure a typical ISDN BRI line application to an existing Meridian 1 system. The task is to configure a DSL to support circuit switched integrated voice and data terminals. [Figure 1](#) illustrates these terminals and shows that each transmission mode requires a different TSP and that the same TSP can be assigned to multiple directory numbers on the same DSL.

Figure 1
DSL terminal configuration

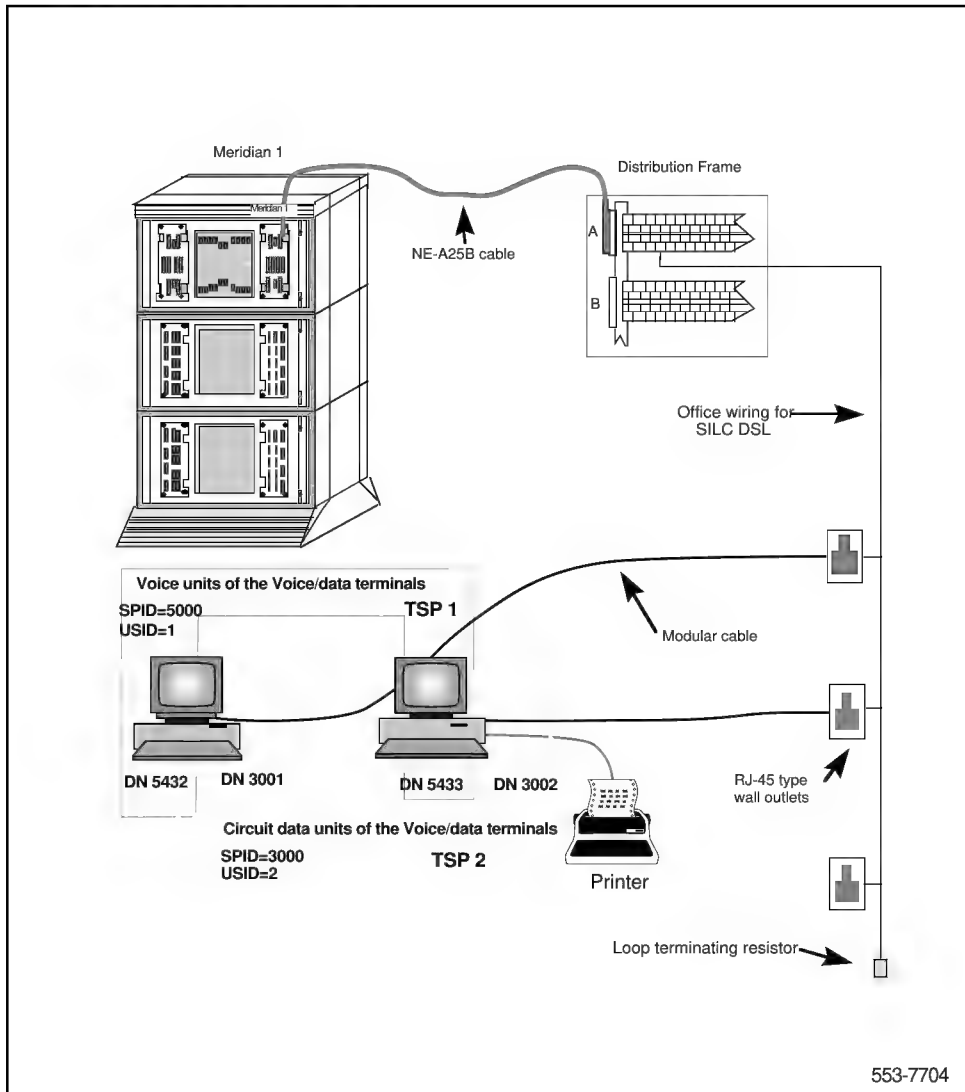

Configuration procedures

Procedure 5 Configuring the ISDN BRI line application

To configure ISDN BRI service shown in [Figure 1](#), follow the steps below.

- 1** After logging in to access LD 27, enter LD 27 at the prompt.
- 2** Configure the LAPD protocol to use the ANSI standard of transmission with specific LAPD transmission characteristics as follows:

Table 5
Configure the LAPD protocol

Prompt	Response	Comment
REQ	NEW	Add an ISDN BRI component
TYPE	LAPD	To administer the LAPD protocol group.
PGPN	1 <cr>	Protocol group number
LAPD	YES	LAPD parameters
T200	4	Maximum retransmission timer is 2 seconds (in units of 0.5 second)
T203	60	Maximum time between frames is 30 seconds (in units of 0.5 second)
N200	6	Maximum number of retransmissions
N201	200	Maximum number of information octets
K	10	Maximum number of outstanding NAKs
		Displays number of DSLs defined.
PGPN	<cr>	
REQ		

- 3 Configure the MISP located on network loop number 8 as follows:

Table 6
Configure the MISP

Prompt	Response	Comment
REQ	NEW	Add an ISDN BRI component
TYPE	MISP	MISP
LOOP	8	Loop number
APPL	BRIL <cr>	ISDN BRI line application.
DPSD	NO	None of the DSL line cards directly connected to the MISP have D-channel Packet Switched Data.
REQ		

- 4 Add a BRSC linked to superloop 24, located in IPE Module 0, in IPE card slot 15. Specify that the BRSC is connected to the MISP at loop 8.

Table 7
Add a BRSC

Prompt	Response	Comment
REQ	NEW	
TYPE	BRSC	Add a BRSC
BRSC	24 0 15	TN of the BRSC being added.
MISP	8	MISP loop number The MISP where layer 3 packets are sent.
DPSD	NO	There is no D-channel Packet Switched Data.
REQ		

- 5 Configure a SILC linked to superloop 24, located in IPE Module 0, in IPE card slot 0 as follows:

Table 8
Configure a SILC

Prompt	Response	Comment
REQ	NEW	Add an ISDN BRI component
TYPE	CARD	ISDN BRI line card
TN	24 0 0	Card location
		Because there is a BRSC configured in the IPE Module, the MISP prompt is skipped and the MISP III and the BRSC III s cc are displayed: MISP 8 BRSC 24 0 15
CTYP	SILC	Card type
REQ		

- 6 Configure SILC port 1 to support the terminals in [Figure 1](#). Specify DSL parameters for an extended passive loop that requires adaptive sampling. See *ISDN BRI X11 including supplementary features Product Description* (553-3901-101) for a description of the extended passive loop configuration.

Table 9
Configure the DSL for SILC port 1 (Part 1 of 2)

Prompt	Response	Comment
REQ	NEW	Add an ISDN BRI component
TYPE	DSL	DSL
DSL	24 0 0 1	DSL location
DES	BLDG1	DSL is in Building 1
CUST	1	Customer number
OPT	<cr>	ISDN BRI line application
MODE	NTAS	Network terminal mode Adaptive sampling (extended passive loop)
B1CT	VCE DTA	B-channel 1 call type Supports integrated voice and data terminal
B2CT	VCE DTA	B-channel 2 call type Supports integrated voice and data terminal
LDN	NO	Listed directory number
XLST	0	Pretranslation group
MTEI	6	Maximum number of Terminal Endpoint Identifiers, both static and dynamic
LTEI	<cr>	LTEI is skipped because there is no D-channel packet data
MCAL	16	Maximum number of calls
MTSP	8	Maximum number of TSPs
PGPN	1	Protocol group number
PRID	6	ISDN BRI Conference feature

Table 9
Configure the DSL for SILC port 1 (Part 2 of 2)

Prompt	Response	Comment
FDN	<cr>	Flexible Call Forward No Answer (CFNA) directory number denied
EFD	<cr>	Flexible external call CFNA DN denied
HUNT	<cr>	Hunt directory number denied
EHT	<cr>	Hunt external call directory number denied
TGAR	0	Trunk group access restriction
NCOS	0	Network class of service
CLS	UNR, ICDD	Class of service Unrestricted, Internal CDR denied

- 7 Configure the TSPs for circuit switched voice and circuit switched data for the terminals shown in [Figure 1](#) as follows:

Table 10
Configure the TSPs (Part 1 of 5)

Prompt	Response	Comment
REQ	NEW	Add a TSP
TYPE	TSP	TSP
DSL	24 0 0 1	DSL location
USID	1	User service identifier
MPHC	NO	The TSP is not used with a Meridian 1 Packet Handler.
SPID	5000 <cr>	Service profile ID
FEATID	A06 15 <cr>	A06 = a 6-party ISDN BRI Conference 15 is the Feature Activation ID, the number associated with ISDN BRI Conference on this ISDN BRI terminal. 15 is assumed for the Feature Indication ID, the number associated with ISDN BRI Conference on this Meridian 1 system. If no entry is made for it, the Feature Indication ID number uses the same number as entered for the Feature Activation ID. FEATID is prompted when PRID = 6 in the DSL. Recommended terminal assignments are: M5317TDX = 15 M5209TDcp = 9
DN	5432 1	Directory number to be associated with the TSP, and the CLID entry.
- CT	VCE	Directory number call type is circuit switched voice
MCAL	8	Maximum number of calls on TSP
CLIP	YES	Displays calling party DN on incoming calls
PRES	NO	Does not display DN to the called party on outgoing calls

Table 10
Configure the TSPs (Part 2 of 5)

Prompt	Response	Comment
FEAT	HTA FNA CFTA SFD MWA	Class of service Hunt allowed Call Forward No Answer allowed Call Forward by Call Type allowed Second level Call Forward No Answer denied Message waiting allowed
DN	5433 2	Directory number associated with the TSP, and the CLID entry.
- CT	VCE	Directory number call type is circuit switched voice
MCAL	4	Maximum number of calls
CLIP	YES	Calling party number displayed on the called party terminal
PRES	YES	Displays DN to the called party on outgoing calls
FEAT	HTA FNA CFTA SFD MWA	Class of service Hunt allowed Call Forward No Answer allowed Call Forward by Call Type allowed Second level Call Forward No Answer denied Message waiting allowed
DN	<cr>	
DFDN	5432	Default directory number
REQ	NEW	Add a TSP
TYPE	TSP	TSP
DSL	24 0 0 1	DSL location
USID	2	User service identifier
MPHC	NO	The TSP is not used with a Meridian 1 Packet Handler.
SPID	3000 <cr>	Service profile ID

Table 10
Configure the TSPs (Part 3 of 5)

Prompt	Response	Comment
FEATID	A06 15 <cr>	A06 = a 6-party ISDN BRI Conference 15 is the Feature Activation ID, the number associated with ISDN BRI Conference on this ISDN BRI terminal. 15 is assumed for the Feature Indication ID, the number associated with ISDN BRI Conference on this Meridian 1 system. If no entry is made for it, the Feature Indication ID number uses the same number as entered for the Feature Activation ID. FEATID is prompted when PRID = 6 in the DSL. Recommended terminal assignments are: M5317TDX = 15 M5209TDcp = 9
DN	3001 3	Directory number to be associated with the TSP, and the CLID entry.
- CT	DTA	Directory number call type is data
MCAL	1	Maximum number of calls
CLIP	YES	Displays calling party DN on incoming calls
PRES	YES	Displays DN to the called party on outgoing calls
FEAT	HTD FND CFTD SFD MWD	Class of service Hunt denied Call Forward No Answer denied Call Forward by Call Type denied Second level Call Forward No Answer denied Message Waiting denied
DN	3002 4	Directory number to be associated with the TSP, and the CLID entry.
- CT	DTA	Directory number call type is data
MCAL	8	Maximum number of calls
CLIP	YES	Displays calling party DN on incoming calls
PRES	NO	Does not display DN to the called party on outgoing calls

Table 10
Configure the TSPs (Part 4 of 5)

Prompt	Response	Comment
FEAT	HTD FND CFTD SFD MWD	Class of service Hunt denied Call Forward No Answer denied Call Forward by Call Type denied Second level Call Forward No Answer denied Message waiting denied
DN	<cr>	
DFDN	3001	Default directory number
REQ	NEW	Add a TSP
TYPE	TSP	TSP
DSL	24 0 0 1	DSL location
USID	0	User service identifier
MPHC	NO	The TSP is not used with a Meridian 1 Packet Handler.
SPID	5000 <cr>	Service profile ID
FEATID	A06 15 <cr>	A06 = a 6-party ISDN BRI Conference 15 is the Feature Activation ID, the number associated with ISDN BRI Conference on this ISDN BRI terminal. 15 is assumed for the Feature Indication ID, the number associated with ISDN BRI Conference on this Meridian 1 system. If no entry is made for it, the Feature Indication ID number uses the same number as entered for the Feature Activation ID. FEATID is prompted when PRID = 6 in the DSL. Recommended terminal assignments are: M5317TDX = 15 M5209TDcp = 9
DN	2000	Directory number to be associated with TSP
- CT	VCE	Directory number call type is circuit switched voice
MCAL	1	Maximum number of calls

Table 10
Configure the TSPs (Part 5 of 5)

Prompt	Response	Comment
CLIP	NO	Does not display calling party DN on incoming calls
PRES	NO	Does not display DN to the called party on outgoing calls
FEAT	HTD FND CFTD SFD	Class of service Hunt denied Call Forward No Answer denied Call Forward by Call Type denied Second level Call Forward No Answer denied
DN	4000	Directory number associated with TSP
- CT	DTA	Directory number call type is data
MCAL	1	Maximum number of calls
CLIP	NO	Displays calling party DN on incoming calls
PRES	NO	Does not display DN to the called party on outgoing calls
FEAT	HTD FND CFTD SFD	Class of service Hunt denied Call Forward No Answer denied Call Forward by Call Type denied Second level Call Forward No Answer denied
DFDN	2000	Default directory number
DN	<cr>	
REQ	END	Terminates the program and saves the configuration

- 8** Enable the MISP using ENLL 8 in LD 32.
- 9** Enable the BRSC using ENLC 24 0 15 in LD 32.
- 10** Enable all the terminals on DSL 24 0 0 1 using **ENLU 24 0 0 1** in LD 32.
- 11** Follow the instructions in the User manual for the specific terminal and enter the appropriate service profile IDs (SPIDs) for the voice and data circuits of the integrated voice and data terminals as follows:

 For the voice circuit of the two terminals, enter at each terminal the SPID number **5000** at the SPID prompt to define TSP1


 For the circuit data of the two terminals, enter each terminal SPID number **3000** at the SPID prompt to define TSP2.

Example two: adding an MPH

Configuration example two adds an ISDN BRI MPH application to a Meridian 1 with an existing ISDN BRI configuration. The task is to configure a DSL to support D-channel and B-channel packet data terminals using the MISP as an MPH. The MPH has a Meridian Communication Unit (MCU) connection to the Packet Switched Data Network (PSDN).

[Figure 2](#) illustrates these terminals.

Figure 2
DSL terminal configuration with D-channel and B-channel packet data

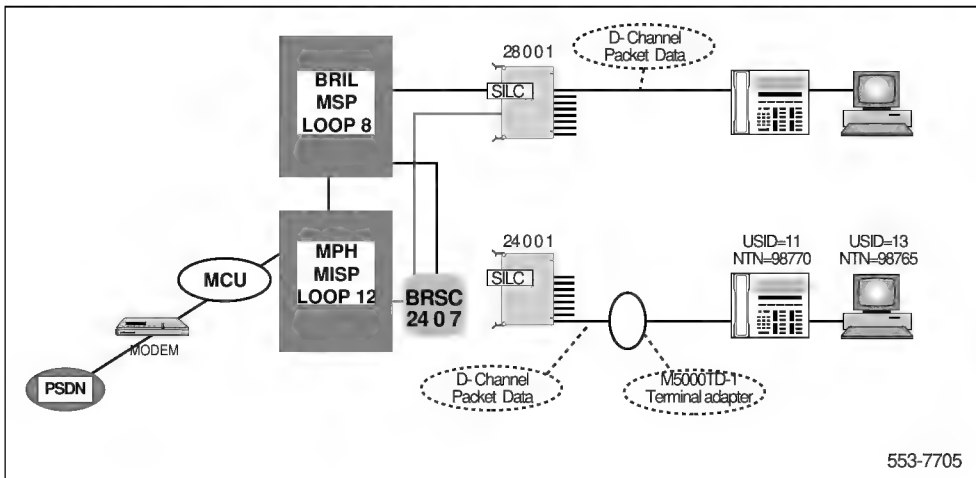

Configuration procedures

Procedure 6
 Configuring the ISDN BRI service

To configure ISDN BRI service shown in [Figure 2](#), follow the steps below.
 Use LD 27 unless noted otherwise.

- 1 Configure the LAPD protocol to set up layer 2 as follows:

Table 11
 Configure the LAPD protocol

Prompt	Response	Comment
REQ	NEW	Add an ISDN BRI component
TYPE	LAPD	To administer protocol group
PGPN	1	Protocol group number
LAPD	YES	
- T200	4	Maximum retransmission timer is 2 seconds (in units of 0.5 second)
- T203	60	Maximum time between frames is 30 seconds (in units of 0.5 second)
- N200	6	Maximum number of retransmissions
- N201	200	Maximum number of information octets
- K	10	Maximum number of outstanding NAKs
REQ		

2 Configure the LAPB protocol to set up Layer 2 parameters as follows:**Table 12**
Configure the LAPB protocol

Prompt	Response	Comment
REQ	NEW	Add an ISDN BRI component
TYPE	LAPB	To administer the LAPB protocol group
PGPN	2	LAPB protocol group number
LAPB	NO	Because LAPB = NO and REQ = NEW, the remaining prompts for the LAPB parameters are not given and defaults are assigned. T1 = 3 seconds, T2 = 2 seconds, and T3 = 6 seconds.

3 Configure the X.25 protocol to set up Layer 3 parameters as follows:**Table 13**
Configure the X.25 protocol

Prompt	Response	Comment
REQ	NEW	Add an ISDN BRI component
TYPE	X25P	To administer the X.25 protocol group
PGPN	3	X.25 protocol set group number
X25P	NO	Because X.25 = NO and REQ = NEW, the remaining prompts for the X.25 parameters are not given and defaults are assigned. T10/T20, T11/21, T12/T22, and T13/23 all equal 180 seconds.

- 4 Configure the DNA table with a range of 20 numbers, 98765 through 98784 as follows:

Table 14
Configure the DNA tables

Prompt	Response	Comment
REQ	NEW	Add DNA tables
TYPE	DNAT	To administer the DNA tables
DNAT	4	DNA table number 4 is associated with MPH network interface.
DNIC	4321	Data Network Identification Code (DNIC) for the table
NTN	98765 20	Network Terminal Number (NTN) for the selected table and the range of numbers.
REQ		

5 Configure the tie trunk route for packet data in LD 16.**Table 15**
Configure the tie trunk route for packet data (LD 16)

Prompt	Response	Comment
REQ	NEW	Add ISDN BRI protocol group settings
TYPE	RDB	Route data block
CUST	99	Customer number
ROUT	1	Route number
TKTP	TIE	Trunk route type
...	...	
DTRK	YES	Digital trunk route
BRIP	YES	Packet handler route Note: Prompted only if DTRK = YES.
ACOD	xxxxxx	Trunk route access code
TARG	<cr>	Access restriction group number
CNTL	<cr>	Changes to control timers
...	...	

6 Configure the tie trunk for packet data in LD14.

Table 16
Configure the tie trunk for packet data (LD14)

Prompt	Response	Comment
REQ	NEW	Enter new trunk data
TYPE	TIE	Trunk type
TN	24 00	Loop, channel number
CUST	99	Customer number
NCOS	<cr>	Network class of service group
RTMB	1	Route and route member
MNDN	<cr>	Manual directory number
TGAR	<cr>	Trunk group access restriction
CLS	<cr>	Unrestricted class of service
...	...	

7 Use LD11 to configure the Meridian Communication Unit (MCU).**Table 17**
Adding an MCU network interface (LD11)

Prompt	Response	Comment
REQ	NE,	Add a data set.
TYPE	MCU	To administer the MCU
TN	24 00 16 30	
CDEN	4d	Quadruple density (not prompted for superloops)
DES	a	Designator
CUST	99	Customer number
MPHI	YES	MCU is used as an MPH network interface.
OPE	<cr>	No change to data port parameters If OPE = NO, LD11 is completed.
.	.	.

8 Configure MISP loop number 12 for an MPH as follows:

Table 18
Configure the MISP for an MPH

Prompt	Response	Comment
REQ	NEW	Add a MISP
TYPE	MISP	To administer the MISP card
LOOP	12	MISP loop number
APPL	MPH <cr>	MPH application
PRFX	1	Prefix to be used by the DNA tables of the MPH
NTNO	YES	PSDN present NTN only
DNIC	4321	The Data Network ID Code for the DNA used with the MPH
NWIF	2	The MPH network interface identifier for configuration
TN	24 00 16 30	TN of the MCU on which the dedicated connection from the MPH is terminated
- LAPB	2	The LAPB protocol set group number to be used on the MPH network interface
- X25P	3	The X.25 protocol set group number to be used on the MPH network interface
- PVC	1 1	The range of Permanent Virtual Circuit Logical Channel Numbers
- IC	300 400	The range of Incoming Logical Channel Numbers
- TC	500 700	The range of Two-way Logical Channel Numbers
- OC	701 900	The range of Outgoing Logical Channel Numbers
- DNAT	4	The DNA table associated with the MPH network interface

- 9 Configure MISP on loop 8 with the MPH on loop 12 to add the ISDN BRI line application:

Table 19
Configure the MISP for an ISDN BRI line application

Prompt	Response	Comment
REQ	NEW	Add a MISP
TYPE	MISP	To administer the MISP card
LOOP	8	MISP loop number
APPL	BRIL	BRIL = ISDN BRI line application
DPSD	YES	There is D-channel Packet Switched Data.
MPHC	YES	DPDS are routed to the MPH card
MPH	12	The MPH loop on which the dedicated connection from the MISP is terminated

- 10 Add a BRSC at superloop 24, shelf number 0 and card number 7.

Table 20
Configure the BRSC

Prompt	Response	Comment
REQ	NEW	Add a BRSC
TYPE	BRSC	To administer a BRSC
BRSC	24 0 7	BRSC superloop number, shelf number, card number.
MISP	8	BRSC is associated with MISP loop number 8
DPSD	YES	There is D-channel Packet Switched Data.
MPHC	YES	DPDS routed to MPH
MPH	12	MISP loop number 12 is the MISP with MPH application where D-channel packet data are being sent

- 11 Configure a SILC linked to superloop 24, located in IPE Module 0, in IPE card slot 0 as follows:

Table 21
Configure the SILC

Prompt	Response	Comment
REQ	NEW	Add a SILC
TYPE	CARD	ISDN BRI line card
TN	24 0 0	Card location
		Because there is a BRSC configured in the IPE Module, the MISP prompt is skipped and the MISP III and the BRSC III s cc is displayed:
		MISP 8
		BRSC 24 0 7
CTYP	SILC	Card type
REQ		

- 12 Configure a SILC linked to superloop 28, located in IPE Module 0, in IPE card slot 0 as follows:

Table 22
Configure the second SILC

Prompt	Response	Comment
REQ	NEW	Add a SILC
TYPE	CARD	ISDN BRI line card
TN	28 0 0	Card location
		Because there is a BRSC configured in the IPE Module, the MISP prompt is skipped and the MISP III and the BRSC III s cc is displayed:
		MISP 8 BRSC 24 0 7
CTYP	SILC	Card type
REQ		

- 13 Configure DSL parameters as follows to support the terminals in [Figure 2:](#)

Table 23
Configure DSL

Prompt	Response	Comment
REQ	NEW	Add a DSL
TYPE	DSL	To administer the digital subscriber loop
DSL	24 0 0 1	
CTYP	SILC	Card type
OPT	(BRIL)	ISDN BRI line application
MISP	8	DSL is associated with MISP loop number 8
MODE	NTAS	NT Mode Adaptive Sampling
BICT	VCE DTA	B-channel 1 call type has circuit switched voice and circuit switched data
B2CT	IPD	B-channel 2 call type has packet data using an MPH
MPH	12	MPH loop number
LDN	NO	Not associated with listed directory number
XLST	0	Pretranslation group
MTEI	6	Maximum number of TEIs (static and dynamic combined) allowed
LTEI	<cr>	LTID and static TEI pair for D-channel packet data
MCAL	8	Maximum number of calls allowed per DSL
MTSP	8	Maximum number of TSP allowed
PGPN	1	Protocol group number
PRID	6	Protocol ID for ISDN BRI Conference

- 14** Configure a second set of DSL parameters as follows to support the terminals in [Figure 2](#):

Table 24
Configure DSL

Prompt	Response	Comment
REQ	NEW	Add a DSL
TYPE	DSL	To administer the digital subscriber loop
DSL	28 0 0 1	
CTYP	SILC	Card type
OPT	(BRIL)	ISDN BRI line application
MISP	8	DSL is associated with MISP loop number 8
MODE	NTAS	NT Mode Adaptive Sampling
BICT	VCE DTA	B-channel 1 call type has circuit switched voice and circuit switched data
B2CT	VCE DTA	B-channel 2 call type has packet data using an MPH
MPH	12	MPH loop number
LDN	NO	Not associated with listed directory number
XLST	0	Pretranslation group
MTEI	6	Maximum number of TEIs (static and dynamic combined) allowed
LTEI	<cr>	LTID and static TEI pair for D-channel packet data
MCAL	8	Maximum number of calls allowed per DSL
MTSP	8	Maximum number of TSP allowed
PGPN	1	Protocol group number
PRID	6	Protocol ID for ISDN BRI Conference

15 Configure the TSP for USID 11 for the D-channel as follows:

Table 25
Configure the TSP for USID 11

Prompt	Response	Comment
REQ	NEW	
TYPE	TSP	To administer the Terminal Service Profiles
DSL	28 0 0 1	DSL location
USID	11	D-channel terminal
CUST	1	Customer number
MPHC	YES	Yes, the TSP is used with an MPH
TRMT	D	D-channel type
TEI	15	Static TEI for addressing terminal
X25P	3	X.25 protocol set group number used on the MPH user interface
NTN	98770	Network Terminal Number of the TSP is 98770
- PVC	1 1	The lowest Permanent Virtual Circuit Logical Channel Number is 1
- IC	<cr>	There is no range set for Incoming Logical Channel Number
- TC	30 60	The lowest Two-way Logical Channel Number is 30. The highest Two-way Logical Channel Number is 60.
- OC	<cr>	There is no range set for Outgoing Logical Channel Number
CDR	NO	No Call Detail Recording for packet data calls

16 Configure the TSP for USID 13 for the B-channel.**Table 26**
Configure the TSP for USID 13

Prompt	Response	Comment
REQ	NEW	
TYPE	TSP	To administer the Terminal Service Profiles
DSL	24 0 0 1	DSL location
USID	13	B-channel terminal
CUST	1	Customer number
MPHC	YES	Yes, the TSP is used with an MPH
- TRMT	B	Terminal type is set for B-channel configuration
- BCH	2	TSP is associated with the B2 channel of the DSL
LAPB	2	The LAPB protocol set group number to be used on the MPH network interface is 2.
NTN	98765	Network Terminal Number of the TSP is 98765
- PVC	1 1	The lowest Permanent Virtual Circuit Logical Channel Number is 1
- IC	<cr>	There is no range set for Incoming Logical Channel Number
- TC	30 60	The lowest Two-way Logical Channel Number is 30. The highest Two-way Logical Channel Number is 60.
- OC	<cr>	There is no range set for Outgoing Logical Channel Number

17 Configure the PVC connection as follows:

Table 27
Configure the PVCs

Prompt	Response	Comment
REQ	NEW	Add a Permanent Virtual Circuit (PVC)
TYPE	PVC	To administer the PVC connection
MPH	12	MPH loop number
PVCN	1	PVC connection number
XPVC	NO	No external PVC connection
NTN1	98765	First Network Terminal Number of PVC internal connection
- LCN1	1	PVC Logical I Number associated with Network Terminal Number 1
NTN2	98770	Second Network Terminal Number of PVC internal connection
- LCN2	1	PVC Logical Channel Number associated with Network Terminal Number

18 Enable the MISP on network loop number in the Network and IPE Diagnostic Program, LD 32, using **ENLL 8**.

19 Enable the terminals connected to DSL 24 0 0 1 and DSL 28 0 0 1 in the Network and IPE Diagnostic Program, LD 32, using **ENLU 24 0 0 1** and **ENLU 28 0 0 1**.


Follow the instructions in the User manual for the specific terminal and enter the appropriate service profile IDs (SPIDs) for the voice and data circuits of the integrated voice and data terminals.

Example three: Configuring an ISDN BRI Tie trunk

In the configuration, depicted in [Figure 3](#), a Meridian Customer Defined Networking (MCDN) Tie trunk connection may be implemented by connecting two Meridian 1s to the ISDN BRI leased line through the Local Exchange via two SILC cards. The S/T interface is connected to the Local Exchange using the NT1 supplied by the PTT. There is no distance limitation on this configuration. System clock synchronization may be achieved by having the Meridian 1 slave to the Local Exchange; the clock source may be derived from the ISDN BRI Local Exchange connection.

Note: The configuration in the example is being done on the user side.

Figure 3
ISDN BRI Tie trunk configuration

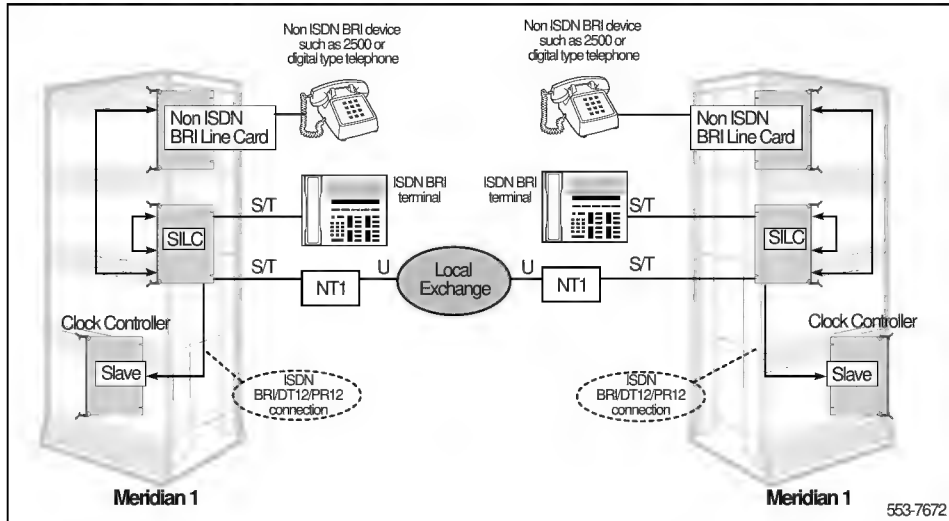

Configuration procedures

To configure the ISDN BRI Tie trunk configuration depicted in [Figure 3](#), follow these procedures:

- 1
Define an ISDN BRI trunk access customer using the Customer Data Block (LD 15).

Table 28
Defining a customer for a trunk

Prompt	Response	Comment
REQ	NEW	Define a new customer.
TYPE	CDB	Customer data block
CUST	0	Customer number 0.
...	...	...
ISDN	YES	The customer is equipped with ISDN.
...	...	...

- 2 Configure the LAPD protocol to use the ANSI standard of transmission with specific LAPD transmission characteristics as follows (**LD 27**):

Table 29
Configure the LAPD protocol

Prompt	Response	Comment
REQ	NEW	To add an ISDN BRI component
TYPE	LAPD	To administer the LAPD protocol group.
PGPN	1 <cr>	Protocol group number.
LAPD	YES	To define LAPD parameters which follow.
- T200	4	Maximum retransmission timer is 2 seconds (in units of 0.5 second)
- T203	60	Maximum time between frames is 30 seconds (in units of 0.5 second)
- N200	6	Maximum number of retransmissions
- N201	200	Maximum number of information octets
- K	10	Maximum number of outstanding NAKs
		Displays number of DSLs defined.
N2X4	0-(10)-20	For 1TR6 connectivity — number of status inquiries when the remote station is in peer busy state. <cr> has been entered.
PGPN	<cr>	
REQ		

3 Configure the route data block parameters for the ISDN BRI Tie trunk (LD 16).

Table 30
Configuring ISDN BRI trunk route parameters (Part 1 of 2)

Prompt	Response	Comment
REQ	NEW	Add ISDN BRI protocol group settings
TYPE	RDB	Route data block.
CUST	0	Customer number 0 (as configured in step 1, using LD 15).
DMOD	<cr>	Default model number for this route. <cr> has been entered.
ROUT	99	Route number 99 has been used.
TKTP	TIE	Trunk route type.
RCLS	<cr>	Class marked route.
DTRK	YES	Digital Trunk Route.
BRIP	NO	ISDN BRI packet handler route (NO is entered, since packet data is not required).
DGTP	BRI	Digital trunk type.
NASA	(NO)	No Network Attendant Service Interface is required.
MBGA	(NO)	No Multi Business Group interface on the D Channel is required.
IFC	(SL1)	DCH interface type.
CNTY	<cr>	Country pertaining to EuroISDN interface type.
...		
CDR	(NO)	No CDR on the trunk route is required.
OTL	(NO)	No CDR on outgoing toll calls is required.
...		
OAN	(NO)	No CDR on answered outgoing toll calls is required.
MR	(NO)	Advice of Charge for EuroISDN, AXE-Australia or Japan D70. The route does not support AOC.
RUCS	0	Route unit cost.
RURC	0	Route unit reference cost.

Table 30
Configuring ISDN BRI trunk route parameters (Part 2 of 2)

Prompt	Response	Comment
RUCF	0 - (1) - 9999 (0) - 3	Route unit conversion factor. This prompt does not appear for Denmark or Sweden.
...	...	...
SIDE	USR	Meridian SL-1 node type (either network or user), prompted only if IFC = SL1.
...	...	...
PGPN	1	Protocol Group (as defined previously in step 2. using LD 27).
RCAP	BRI <cr>	Remote D-Channel capabilities. BRI allows ISDN line/trunk interworking). This prompt is repeated until <cr> is entered.
...	...	...
INAC	(NO)	Do not insert NARS/BARS access code on incoming calls.
DSEL	(vod)	Data selection. (VOD) = voice and data.
...	...	...
OVLR	(NO)	Do not allow Overlap Receiving.
OVLS	(NO)	Do not allow Overlap Sending.
...		

4 Configure the MISP on loop 18 (LD 27).

Table 31
Adding a MISP for the trunk

Prompt	Response	Comment
REQ	NEW	Add or a MISP
TYPE	MISP	MISP
LOOP	18	MISP lop number.
APPL	BRIT <cr>	Application type for the MISP. BRIT = ISDN BRI trunking. APPL is prompted until <cr> is entered.
DSPD	(NO)	(NO) = No D-channel Packet Switched Data.
...	...	

5 Enable the MISP using the **ENLL I** command in LD 32.

6 Configure the DSL on superloop 24, shelf module 1, card slot 4, connected to SILC port 0.

Table 32
Adding a DSL for the trunk (Part 1 of 2)

Prompt	Response	Comment
REQ	NEW	Add a DSL
TYPE	DSL	DSL
DSL	24 1 4 0	DSL location superloop 24 shelf 1 card slot 4 DSL location 0 (connected to SILC port 0)
APPL	BRIT	Application type for the DSL. BRIT = ISDN BRI trunking.
CUST	0	Customer number
CTYP	SILC	Connected to a SILC line card.
MISP	18	MISP loop number (as configured in step 4, using LD 27).
MODE	TE	The mode for the trunk DSL. TE is entered for Terminal Equipment.

Table 32
Adding a DSL for the trunk (Part 2 of 2)

Prompt	Response	Comment
MTFM	(NO)	Enter NO to disable the multi-frame option.
TKTP	TIE	Trunk type of Tie.
CLOK	(NO)	This trunk DSL is not provisioned for clock source.
PDCA	(1)	Use the default pad table number to be associated with this DSL.
ROUT	99	Route number for the trunk DSL.
B1	YES	Configure B Channel 1. If REQ = NEW, a response to this prompt is not required, because B1 parameters are mandatory. The system will automatically display the prompts that follow.
MEMB	1	Route member number to be associated with B-channel 1.
TGAR	(0)	Trunk Group Access Restriction.
NCOS	(0)	Network Class of Service Group Number
CLS	<cr>	Class of Service options. The following options are selected as defaults: APN = ACD Priority not allowed UNR = Unrestricted (default).
B2	(NO)	Configure B Channel 2. All parameters entered for B1 will be applied to B2, except the route member number will be an unused value. The following message will be displayed. B2 will use Route # 99 Member # 2
REQ		

- 7** You may use the **STAT I s c dsl#** command in LD 32 to query the status of the DSL.